

Manuals.plus /

› PHILIPS /

› Philips HC5630/15 Hair Clipper Series 5000 User Manual

PHILIPS HC5630/15

Philips HC5630/15 Hair Clipper Series 5000 User Manual

Model: HC5630/15 | Brand: PHILIPS

1. PRODUCT OVERVIEW

The Philips HC5630/15 Hair Clipper Series 5000 is designed for efficient and precise hair cutting. Its innovative comb design prevents hair from clogging, ensuring a smooth and consistent cut every time. With a wide range of length settings and a powerful turbo mode, it offers versatility for various hair styles.

Key Features:

- **Special Feature:** Comb design prevents cut hair from clogging the comb, ensuring consistent results in one pass.
- **Easy Operation:** Select from 28 length settings (0.5 to 28 mm) using the zoom wheel for any hair style.
- **Maximum Performance and Flexibility:** Turbo mode and corded/cordless use (battery life up to 90 minutes).
- **Effortless Cleaning:** Fully washable for easy and quick cleaning after use.



Image 1.1: Philips HC5630/15 Hair Clipper with included comb attachments, travel pouch, and retail packaging.

2. WHAT'S IN THE BOX

Your Philips HC5630/15 Hair Clipper package includes the following items:

- Washable Hair Clipper Series 5000
- Cleaning Brush
- 1 Beard Comb Attachment
- 2 Hair Comb Attachments (long and short)
- Soft Travel/Storage Pouch
- Charging Cable
- Instruction Manual

Your browser does not support the video tag.

Video 2.1: A 360-degree view of the Philips HC5630/15 Hair Clipper, showcasing its design and components.

3. SETUP & OPERATION

3.1 Charging the Device

Before first use, ensure the hair clipper is fully charged. Connect the charging cable to the device and a suitable power outlet. The battery indicator light will show charging status. A full charge provides up to 90 minutes of cordless use.



Image 3.1: The clipper offers up to 90 minutes of cordless operation.

3.2 Adjusting Cutting Length

The hair clipper features a zoom wheel to easily select your desired cutting length. You can choose from 28 length settings, ranging from 0.5 mm (without comb attachment) to 28 mm. Rotate the zoom wheel to adjust the comb attachment to the desired length.



Image 3.2: Adjust the cutting length precisely using the integrated zoom wheel.

3.3 Using the Clipper

Hold the device securely and comfortably with the ergonomic grip during use. Move the clipper against the direction of hair growth for an even cut. The innovative comb design helps guide cut hair away from the blades, preventing clogging and ensuring consistent results.



Image 3.3: The ergonomic design ensures a comfortable and secure grip during use.



Image 3.4: The Trim-n-Flow PRO technology ensures continuous cutting by preventing hair from getting stuck in the comb.

3.4 Turbo Mode

Activate the Turbo mode for maximum cutting performance, especially useful for thicker hair. This mode increases the cutting speed to ensure an effortless and quick trim.



Image 3.5: The 'T' button activates the Turbo mode for enhanced cutting power.

Your browser does not support the video tag.

4. MAINTENANCE & CLEANING

To ensure optimal performance and hygiene, regular cleaning of your hair clipper is essential. The device is fully washable for easy maintenance.

- Switch off the device before cleaning.
- Remove the comb attachment and rinse it under running water.
- Rinse the clipper head under running water. Ensure no water enters the main body of the device.
- Use the provided cleaning brush to remove any remaining hair from the blades and inside the comb.
- Allow all parts to air dry completely before reassembling or storing the device.



Image 4.1: The clipper head is fully washable for easy cleaning.

5. SAFETY WARNINGS

Please read and adhere to the following safety warnings to prevent injury or damage to the device:

- **Caution:** Do not use on infants.
- Keep the device away from water, except for the washable parts as instructed.
- Use the device only for its intended purpose of hair clipping.
- Switch off the device before cleaning or attaching/detaching accessories.
- Be careful not to touch the cutting elements with bare hands to avoid injury.
- Ensure the device is completely dry before connecting it to a power source.
- Always read the full instruction manual carefully before use for comprehensive safety instructions.

6. SPECIFICATIONS

Product Name	HC5630/15 H.CLIPPER RC/AC CLOSED BOX
Model Number	HC5630/15
Brand	PHILIPS
Power Source	Battery Powered
Battery Type	1 Lithium-Ion Battery (included)
Battery Life	Up to 90 minutes
Material	Stainless Steel (Blades)
Color	Black
Hair Type	All
Item Dimensions (L x W x H)	22.7 x 7 x 19.3 cm
Item Weight	325 Grams (11.46 Ounces)
Country of Origin	Indonesia
Special Feature	Clog-free comb design

7. TROUBLESHOOTING

If you encounter any issues with your Philips HC5630/15 Hair Clipper, please refer to the following common troubleshooting tips:

- **Device not turning on:** Ensure the device is fully charged. If using corded, check the power connection.
- **Poor cutting performance:** Clean the blades and comb attachment thoroughly to remove any trapped hair. Ensure the blades are not damaged.
- **Hair getting stuck:** Make sure the comb attachment is correctly installed. Clean the comb and blades as described in the Maintenance section.
- **Battery not holding charge:** Ensure the charging cable and adapter are working correctly. If the issue persists, contact customer support.

For more detailed troubleshooting or persistent issues, please consult the full instruction manual or contact Philips customer support.

8. WARRANTY & SUPPORT

Your Philips HC5630/15 Hair Clipper comes with a manufacturer's warranty to cover any defects in materials or workmanship.

- **Warranty Period:** Typically 2 years from the date of purchase. Please refer to your purchase documentation for exact terms.
- **Manufacturer Contact:** High Tech Campus 52, 5656 AG Eindhoven, Netherlands.



Image 8.1: The product is covered by a 2-year warranty.

For product support, warranty claims, or to find service centers, please visit the official Philips website or contact their customer service directly. You can also visit the Philips Store on Amazon for more information.