



Manuals.plus /

› **OBUBY** /

› Obuby Kids Walkie Talkies (Model WT1-3) Instruction Manual

## OBUBY WT1-3

# Obuby Kids Walkie Talkies (Model WT1-3) Instruction Manual

Model: WT1-3 | Brand: OBUBY

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your Obuby Kids Walkie Talkies, Model WT1-3. Please read this manual thoroughly before operating the device and retain it for future reference. These walkie talkies are designed for communication over short distances, featuring 22 channels, a backlit LCD, and a built-in flashlight.



Image 1.1: Obuby Kids Walkie Talkies with packaging, showing the three colorful units.

## 2. SAFETY INFORMATION

- **Battery Safety:** Use only specified AAA batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the device will not be used for an extended period. Dispose of batteries properly.
- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years old.
- **Water Exposure:** The device is not water-resistant. Avoid exposure to water or high humidity.
- **Hearing Protection:** Do not place the speaker directly against the ear when the volume is set high to prevent hearing damage.
- **Interference:** Keep the walkie talkies away from medical devices or other electronic equipment that may be sensitive to radio frequency interference.

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Obuby Kids Walkie Talkie Units (3 units: Blue, Pink, Yellow)
- User Manual (this document)

Note: AAA batteries are not included and must be purchased separately.



Image 3.1: Contents of the Obuby Kids Walkie Talkies package, including three units and the manual.

## 4. PRODUCT OVERVIEW

The Obuby Kids Walkie Talkies are designed for ease of use and reliable communication. Each unit features:

- 22 Channels for communication.
- Up to 3 KM (1.86 miles) range in open areas.
- Backlit LCD display for visibility in low light.
- Built-in flashlight for added utility.
- Ergonomic design for comfortable grip.
- Adjustable volume control.
- Keypad lock function.
- Battery save function.

- Audible low battery alert.
- VOX (Voice Operated Exchange) for hands-free communication.

## Powered with 4AAA Batteries (Not Included)



Image 4.1: Detailed view of a walkie talkie unit highlighting its components and features.

## 5. SETUP

### 5.1 Battery Installation

Each walkie talkie requires 4 AAA batteries (not included). Follow these steps to install batteries:

1. Locate the battery compartment cover on the back of the unit.
2. Press down on the clip and slide the cover downwards to open.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 5.1: Step-by-step guide for battery installation.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

- To turn on: Press and hold the **Power button** (  ) until you hear a beep.

- To turn off: Press and hold the **Power button** until the display turns off.

### 6.2 Adjusting Volume

- Press the **Up** (  ) or **Down** (  ) buttons to adjust the speaker

volume. The volume level will be displayed on the LCD screen.

### 6.3 Channel Selection

Your walkie talkies have 22 available channels. To change channels:

1. Press the **MENU** button once. The current channel number will flash on the LCD.
2. Use the **Up** or **Down** buttons to select your desired channel.
3. Press the **TALK** button to confirm your selection and exit the menu, or press **MENU** again to cycle

through other settings.

*Note: Both walkie talkies must be on the same channel to communicate.*



Image 6.1: Illustrates the communication range of the walkie talkies.

## 6.4 Transmitting (Talking)

To speak to another walkie talkie:

1. Ensure both units are on the same channel.
2. Press and hold the **TALK** button.
3. Speak clearly into the microphone, holding the unit approximately 2-3 inches from your mouth.
4. Release the **TALK** button when you finish speaking to allow the other party to respond.

## 6.5 Monitoring

To listen for weak signals on the current channel, press and hold the **MON** (Monitor) button. Release the button to stop monitoring.

## 6.6 Flashlight Operation

Each unit includes a built-in flashlight:

- To turn on the flashlight: Press the **LAMP** button (often located on the side or top).
- To turn off the flashlight: Press the **LAMP** button again.



**Built-in flashlight supply a strong light source, make kids have fun day and night**

Image 6.2: Walkie talkie flashlight function demonstrated in a low-light environment.

## 6.7 Keypad Lock

To prevent accidental changes to settings:

- To activate keypad lock: Press and hold the **MENU** button until a key icon appears on the LCD.
- To deactivate keypad lock: Press and hold the **MENU** button again until the key icon disappears.

## 6.8 VOX Function (Voice Operated Exchange)

VOX allows for hands-free transmission. When VOX is active, the walkie talkie will automatically transmit when it detects your voice.

1. Press the **MENU** button multiple times until "VOX" appears on the LCD.
2. Use the **Up** or **Down** buttons to select a VOX sensitivity level (e.g., OF for off, 1-3 for sensitivity). Higher numbers indicate higher sensitivity.
3. Press the **TALK** button to confirm and exit, or **MENU** to continue.

## 6.9 Call Tone

To send a call tone to other walkie talkies on the same channel, double-click the **TALK** button quickly.

## 7. MAINTENANCE

---

- **Cleaning:** Wipe the units with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent leakage.
- **Battery Care:** Replace all batteries at the same time. Do not attempt to recharge non-rechargeable batteries.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Cannot communicate with other units	Units are on different channels.	Ensure all units are set to the same channel.
Short communication range	Obstructions (buildings, trees) or electromagnetic interference.	Move to an open area. Avoid large metal structures.
Sound is unclear or static	Low battery, too far apart, or interference.	Replace batteries. Move closer to the other unit. Change channels to avoid interference.

## 9. SPECIFICATIONS

---

- **Model:** WT1-3
- **Brand:** OBUBY
- **Channels:** 22
- **Maximum Talking Range:** Up to 3 Kilometers (1.86 miles) in open terrain
- **Power Source:** 4 x AAA batteries per unit (DC 6 Volts)
- **Product Dimensions:** 5.5 x 2.5 x 2 inches (approx. 1.1"D x 2.2"W x 5.67"H)
- **Item Weight:** 9.6 ounces (per unit, without batteries)
- **Special Features:** Backlit LCD, Flashlight, VOX, Keypad Lock, Battery Save, Low Battery Alert
- **Water Resistance Level:** Not Water Resistant

## 10. WARRANTY AND SUPPORT

---

Obuby products are manufactured with quality and care. For any questions, technical support, or warranty claims, please refer to the contact information provided at the point of purchase or visit the official Obuby website. Please retain your proof of purchase for warranty service.

