



[Manuals.plus](#) /

› [Moulinex](#) /

› MOULINEX Masterchef Compact Food Processor QA200127 User Manual

## Moulinex QA200127

# MOULINEX Masterchef Compact Food Processor QA200127 User Manual

Model: QA200127

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your MOULINEX Masterchef Compact Food Processor, model QA200127. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

The MOULINEX Masterchef Compact Food Processor is designed for various food preparation tasks, including chopping, mixing, and blending, with a 3.5-liter capacity and 700 watts of power.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The appliance features a safety lock mechanism. Ensure all parts are correctly assembled and locked into place before operation. The appliance will not operate if the safety lock is not engaged.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Do not use the appliance for other than intended household use.
- Exercise extreme caution when handling sharp blades, emptying the bowl, and during cleaning.

### 3. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your MOULINEX Masterchef Compact Food Processor:

- Motor Unit: The base containing the motor and control dial.
- Processing Bowl: 3.5-liter capacity bowl for ingredients.
- Lid: Secures the bowl and prevents splashing during operation.
- Blades/Attachments: Various tools for different functions (e.g., chopping blade, mixing attachment).
- Control Dial: Used to select speed settings.



Image 1: Front view of the MOULINEX Masterchef Compact Food Processor with its stainless steel bowl and lid.



Image 2: Angled view of the MOULINEX Masterchef Compact Food Processor, highlighting the motor unit and bowl assembly.

## 4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Dispose of packaging materials responsibly.
2. **Initial Cleaning:** Before first use, wash the processing bowl, lid, and all attachments in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Placement:** Place the motor unit on a clean, dry, stable, and flat surface. Ensure there is adequate ventilation around the appliance.
4. **Assembly:**
  - Place the processing bowl onto the motor unit, aligning it correctly and twisting until it locks into place.
  - Insert the desired attachment (e.g., chopping blade) onto the central spindle inside the bowl.
  - Place the lid onto the processing bowl, ensuring it is securely locked. The safety lock feature prevents operation if the lid is not correctly positioned.

## 5. OPERATING INSTRUCTIONS

---

1. **Prepare Ingredients:** Cut large food items into smaller, uniform pieces to ensure even processing.
2. **Add Ingredients:** With the appliance unplugged and the bowl and attachment in place, add your ingredients to the processing bowl. Do not overfill beyond the maximum fill line indicated on the bowl.
3. **Secure Lid:** Place the lid on the bowl and twist it clockwise until it locks securely. The appliance will not start if the lid is not properly locked due to the safety lock feature.
4. **Plug In:** Plug the power cord into a suitable electrical outlet.
5. **Select Speed:** Turn the control dial to the desired speed setting. The appliance offers 3 speed settings for various processing needs. Start with a lower speed and increase as needed.
6. **Process:** Allow the appliance to process the ingredients until the desired consistency is achieved. Do not operate continuously for extended periods; allow the motor to rest if it becomes warm.
7. **Stop Operation:** Turn the control dial to the 'OFF' position.
8. **Unplug:** Unplug the appliance from the electrical outlet.
9. **Remove Lid and Bowl:** Carefully unlock and remove the lid, then unlock and remove the processing bowl. Exercise caution when removing attachments, especially sharp blades.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the life of your food processor.

1. **Unplug:** Always ensure the appliance is unplugged before cleaning.
2. **Disassemble:** Carefully remove the lid, processing bowl, and all attachments from the motor unit.
3. **Wash Parts:** The processing bowl, lid, and attachments are recommended for hand washing. Use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry immediately. Exercise extreme caution when handling sharp blades.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
5. **Storage:** Store the clean and dry appliance in a safe, dry place, out of reach of children.

## 7. TROUBLESHOOTING

---

If you encounter issues with your food processor, refer to the following common problems and solutions:

- **Appliance does not turn on:**
  - Check if the power cord is securely plugged into a working electrical outlet.
  - Ensure the processing bowl and lid are correctly assembled and locked into place. The safety lock prevents operation if not properly engaged.
- **Poor processing results (e.g., uneven chopping):**
  - Ensure ingredients are cut into uniform, smaller pieces before processing.
  - Do not overfill the processing bowl. Process in smaller batches if necessary.
  - Adjust the speed setting.
- **Motor stops during operation:**
  - The appliance may have overheated. Turn off, unplug, and allow it to cool down for at least 30 minutes before resuming use.

- Check for any obstructions or blockages in the bowl or around the blade.

If problems persist, please contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	Moulinex
Model Number	QA200127
Capacity	3.5 Liters
Power / Wattage	700 watts
Number of Speeds	3
Material	Plastic
Special Features	Safety Lock
Color	White / Grey
Item Weight	4.74 Kilograms
Package Dimensions	38.8 x 38.2 x 24.8 cm
Product Care Instructions	Hand Wash

## 9. WARRANTY AND SUPPORT

Moulinex is committed to the durability and reparability of its products. This appliance is designed to be repairable for up to 15 years, with spare parts readily available through authorized service centers.



Image 3: Moulinex 15 Years Repairability commitment logo.

For warranty claims, technical support, or to locate an authorized service center, please refer to the contact information provided with your purchase documentation or visit the official Moulinex website.

