

[Manuals.plus](#) /

› [Bushnell](#) /

› Bushnell Pinseeker Tour V4 Shift JOLT Golf Laser Rangefinder User Manual

Bushnell Pinseeker Tour V4 Shift JOLT

Bushnell Pinseeker Tour V4 Shift JOLT Golf Laser Rangefinder User Manual

Model: Pinseeker Tour V4 Shift JOLT

1. INTRODUCTION

The Bushnell Pinseeker Tour V4 Shift JOLT is a precision golf laser rangefinder designed to provide accurate distance measurements on the golf course. This device features Pinseeker with JOLT Technology for flag targeting and a Shift function to toggle between compensated slope distance and actual distance. This manual provides essential information for the proper setup, operation, and maintenance of your rangefinder.



Figure 1: Bushnell Pinseeker Tour V4 Shift JOLT Golf Laser Rangefinder. This image shows the compact and ergonomic design of the device, highlighting its portability and ease of use on the golf course.

2. SAFETY INFORMATION

- **Do not look directly into the sun or any bright light source through the rangefinder.** This can cause permanent eye damage.
- **Do not activate the laser while looking into the objective lens.**
- **Keep out of reach of children.** This device contains small parts and a laser.

- **Use only the specified battery type.** Incorrect battery usage can lead to leakage or explosion.
- **Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.**
- **Do not attempt to disassemble or modify the rangefinder.** This will void the warranty and could result in injury.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- Bushnell Pinseeker Tour V4 Shift JOLT Laser Rangefinder
- Premium Carry Case
- CR2 Lithium Battery
- Instruction Manual (this document)
- Cleaning Cloth

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the side of the rangefinder.
2. Twist the battery cap counter-clockwise to open.
3. Insert a new CR2 3-volt Lithium battery, ensuring the positive (+) terminal is facing inward.
4. Replace the battery cap and twist clockwise until securely closed.



Figure 2: Battery compartment location. This image illustrates where the battery cap is located on the device for easy access during battery replacement.

4.2 Initial Power On and Diopter Adjustment

- Press the Power/Fire button once to activate the display.
- Rotate the eyepiece (diopter adjustment) until the reticle and objects in the display appear sharp and in focus.

5. OPERATING INSTRUCTIONS

5.1 Basic Distance Measurement

1. Look through the eyepiece and press the Power/Fire button once to turn on the display.
2. Align the aiming circle (reticle) with your desired target.
3. Press and hold the Power/Fire button. The distance will be displayed almost instantly.
4. Release the button to turn off the laser. The display will remain active for a short period before automatically shutting off to conserve battery.

5.2 Pinseeker with JOLT Technology

Pinseeker mode allows for easy acquisition of the flag without inadvertently capturing background targets. When multiple objects are acquired, the rangefinder will display the closer distance. JOLT Technology provides short vibrating bursts to confirm that the laser has locked onto the flag.

- While looking through the rangefinder, press and hold the Power/Fire button.
- Slowly pan the rangefinder across the flag and surrounding area.
- Once the flag is isolated and the distance is displayed, the device will vibrate, confirming Pinseeker with JOLT.

5.3 Shift (Slope Compensation) Feature

The Shift feature allows you to toggle between Slope-compensated distance (legal for practice rounds) and non-Slope (actual) distance (legal for tournament play).

- Locate the Shift switch on the side of the rangefinder.
- Slide the switch to the left for Slope-compensated distance (indicated by a red ring).
- Slide the switch to the right for non-Slope (actual) distance (no red ring visible).
- The mode indicator in the display will confirm the current setting.



Figure 3: Power/Fire button and Shift switch. This image highlights the main operational buttons and the slope switch on the rangefinder for easy identification.

5.4 Unit of Measure Selection

To select between yards and meters:

- With the unit powered on, press and hold the Mode button (usually located on the side or top, distinct from the Power/Fire button) for approximately 3 seconds.
- The unit of measure will change, and the display will confirm 'Y' for yards or 'M' for meters.

6. MAINTENANCE AND CARE

- **Cleaning:** Gently wipe the exterior with a soft, clean cloth. For lenses, use the provided cleaning cloth or a soft, lint-free cloth. Avoid abrasive materials.
- **Storage:** Store the rangefinder in its protective case when not in use. Keep it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery:** Remove the battery if the device will not be used for an extended period to prevent leakage.
- **Water Resistance:** The device is waterproof. However, avoid submerging it in water for prolonged periods or exposing it to high-pressure water jets.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No display/Device won't turn on	Dead or incorrectly installed battery	Replace the CR2 Lithium battery, ensuring correct polarity.
Inaccurate readings	Dirty lenses, unstable aiming, or target too far/small	Clean lenses with a soft cloth. Ensure steady aiming. Target larger objects or closer distances.
Cannot acquire target	Target is non-reflective, too small, or beyond range	Aim at a more reflective surface. Ensure target is within the device's operational range.
JOLT feature not activating	Not locked onto flag, or multiple targets detected	Ensure you are panning slowly across the flag to allow Pinseeker to isolate it.

8. SPECIFICATIONS

Feature	Detail
Brand	Bushnell
Model	Pinseeker Tour V4 Shift JOLT
Max Magnification	5X
Waterproof Level	Waterproof
Battery Type	CR2 Lithium (3-volt)
Battery Included	Yes
Color	White
ASIN	B07TQS1JXY

9. WARRANTY AND SUPPORT

Your Bushnell Pinseeker Tour V4 Shift JOLT Golf Laser Rangefinder is backed by a limited warranty. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or visit the official Bushnell website. For technical support, service, or replacement parts, please contact Bushnell customer service through their official website or the contact information provided in your product packaging. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question