

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [AULCMEET](#) /

› [AULCMEET RMT-AH111U Replacement Remote Control User Manual](#)

AULCMEET RMT-AH111U

AULCMEET RMT-AH111U Replacement Remote Control User Manual

For Sony Home Theater Systems

1. INTRODUCTION

This manual provides instructions for the AULCMEET RMT-AH111U replacement remote control. This remote is designed to be compatible with various Sony Home Theater Systems, including models HT-RT5, HT-ST9, SA-RT5, SA-ST9, SA-SLRT5, SA-SRRT5, and SA-WRT5. It requires no programming and is ready for use upon battery installation.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Battery compartment with AAA battery slots.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use with your compatible Sony Home Theater System. No additional programming or pairing is required for basic functions.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your RMT-AH111U remote control.



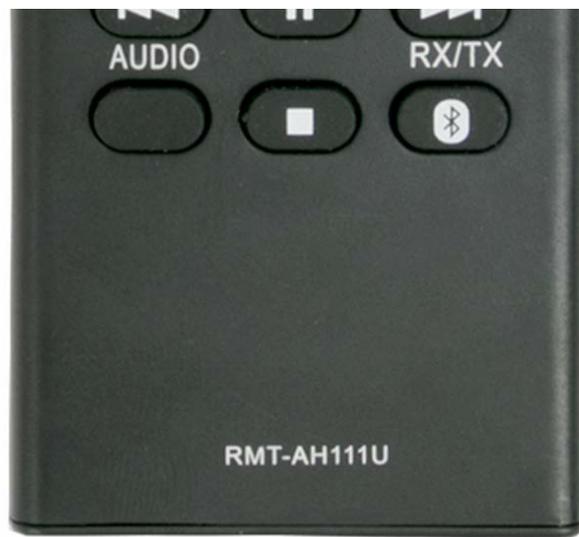


Figure 2: Front view of the RMT-AH111U remote control.

- **Power Button** (Green Circle with Line): Turns the home theater system on or off.
- **INPUT**: Selects the input source for the home theater system.
- **DISPLAY**: Shows information on the screen.
- **CLEAR AUDIO+**: Activates or deactivates the Clear Audio+ sound mode.
- **SOUND FIELD**: Cycles through various sound field modes.
- **FOOTBALL**: Activates the Football sound mode.
- **VOICE**: Adjusts voice enhancement settings.
- **NIGHT**: Activates or deactivates Night Mode for reduced dynamic range.
- **DIMMER**: Adjusts the brightness of the system's display.
- **Colored Buttons** (YELLOW, BLUE, RED, GREEN): Functionality varies depending on the current menu or content.
- **PAIRING**: Used for Bluetooth pairing with compatible devices.
- **MIRRORING**: Initiates screen mirroring with compatible devices.
- **Navigation Pad** (Up, Down, Left, Right, Enter): Used to navigate menus and confirm selections.
- **BACK**: Returns to the previous menu or screen.
- **OPTIONS**: Displays context-sensitive options.
- **HOME**: Accesses the main menu or home screen of the system.
- **Volume Buttons** (SW+, SW-, +,-): Adjusts the master volume and subwoofer volume (SW).
- **Mute Button** (Speaker with X): Mutes or unmutes the audio.
- **Playback Controls** (Rewind, Play/Pause, Fast Forward, Previous Track, Stop, Next Track): Controls media playback.
- **AUDIO**: Cycles through available audio tracks or settings.
- **RX/TX**: Likely related to receiver/transmitter functions, consult your home theater system's manual for specific use.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh ones.
 - Ensure there are no obstructions between the remote control and the home theater system's sensor.
 - Make sure you are within the effective range of the home theater system.
- **Specific functions not working:**
 - Verify that your Sony Home Theater System model is listed as compatible (HT-RT5, HT-ST9, SA-RT5, SA-ST9, SA-SLRT5, SA-SRRT5, SA-WRT5).
 - Some advanced functions may require specific settings on your home theater system. Refer to your system's original manual for details.

6. SPECIFICATIONS

Feature	Detail
Model Number	RMT-AH111U
Brand	AULCMEET
Compatible Devices	Sony Home Theater Systems (HT-RT5, HT-ST9, SA-RT5, SA-ST9, SA-SLRT5, SA-SRRT5, SA-WRT5)
Power Source	2 x AAA Batteries (3V)
Dimensions	7.8 x 2 x 0.6 inches (approx.)
Item Weight	2.4 ounces (approx.)

7. WARRANTY AND SUPPORT

This replacement remote control is designed for reliable performance. For any issues or support inquiries, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 AULCMEET. All rights reserved.