

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [iPlay, iLearn](#) /

› [iPlay, iLearn Kids Blue Golf Toy Set Instruction Manual \(Model SP-NGFM-211\)](#)

### iPlay, iLearn SP-NGFM-211

# iPlay, iLearn Kids Blue Golf Toy Set Instruction Manual

Model: SP-NGFM-211

Brand: iPlay, iLearn

## 1. INTRODUCTION

---

This instruction manual provides important information for the safe and effective use of your iPlay, iLearn Kids Blue Golf Toy Set. Please read this manual thoroughly before assembly and operation. This set is designed to help children develop fine motor skills, hand-eye coordination, and encourage active play.

## 2. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1 x Ball-to-Tee Trainer
- 15 x Golf Balls
- 1 x Club Shaft
- 3 x Club Heads (1 Putter, 1 Left Driver Head, 1 Right Driver Head)

# New Version

## 3 Types of Club Heads

Suitable for different age groups  
Adapts to the different needs of children



*Left*  
**Driver Head**



*Right*  
**Driver Head**



*Ambidextrous*  
**Putter**

Image: All components of the iPlay, iLearn Kids Blue Golf Toy Set, including the ball-to-tee trainer, golf balls, club shaft, and three interchangeable club heads.

### 3. ASSEMBLY INSTRUCTIONS

#### 3.1. Ball-to-Tee Trainer Assembly

1. Attach the spiral ball feeder to the base unit. Ensure it clicks securely into place.
2. Connect the ball release mechanism to the base unit.
3. Place the tee on the designated spot on the ball release mechanism.
4. Load the 15 golf balls into the spiral feeder.

#### 3.2. Golf Club Assembly

1. Select the desired club head (putter, left driver, or right driver).
2. Align the chosen club head with the end of the club shaft.
3. Twist the club head onto the shaft until it is firmly attached. The club head is replaceable and can be

changed as needed.

# Take Exercise Have A Healthy Life



**Observation Judgment Endurance**



**Accompany to Grow Up**

Image: Visual guide for assembling the ball-to-tee trainer and adjusting the golf club. The diagram illustrates connecting the spiral feeder, ball release, and interchangeable club heads.

## 4. OPERATING INSTRUCTIONS

### 4.1. Using the Ball-to-Tee Trainer

1. Place the assembled ball-to-tee trainer on a flat, stable surface.
2. Gently press the foot pedal on the trainer. A golf ball will automatically roll onto the tee.
3. Position yourself with the golf club and swing to hit the ball.
4. Repeat the process by pressing the foot pedal for the next ball.

### 4.2. Adjusting Club Length

The golf club shaft features a length adjuster button. Press the button and slide the shaft to extend or retract it to the desired length (shortest: 22 inches, longest: 32 inches). Release the button to lock the length in place.



Image: Detail of the golf club's length adjuster button, allowing the club to be extended from 22 inches to 32 inches. Also shows an upgraded iron joint for durability.

## 5. PRODUCT FEATURES

---

- **Ball-to-Tee Trainer:** Automatically tees up the next ball with a simple foot pedal press, allowing for continuous play without bending over.
- **Interchangeable Club Heads:** Includes a putter, a left driver head, and a right driver head to accommodate different play styles and handedness.
- **Adjustable Club Length:** The club shaft can be adjusted from 22 to 32 inches, growing with your child.
- **Durable Construction:** Features an upgraded iron joint for enhanced strength and longevity.
- **Skill Development:** Promotes fine motor skills, hand-eye coordination, observation, and judgment.



Image: Close-up view of the three interchangeable club heads included in the set: a left driver head, a right driver head, and an ambidextrous putter, designed for versatility.

## 6. SAFETY GUIDELINES

---

- Adult supervision is recommended during play.
- Ensure the play area is clear of obstacles and other people to prevent accidents.
- Do not aim the golf balls or clubs at people, animals, or fragile objects.
- Inspect all components regularly for damage. Discontinue use if any part is broken or compromised.
- This toy is intended for children aged 36 months to 12 years.

## 7. MAINTENANCE AND CARE

---

- Clean the toy set with a damp cloth and mild soap. Do not immerse in water.
- Store the set in a cool, dry place away from direct sunlight when not in use.
- Ensure all parts are dry before storing to prevent mold or damage.

## 8. TROUBLESHOOTING

---

### 8.1. Ball Not Reloading Properly

- Ensure the ball-to-tee trainer is placed on a completely flat and level surface.
- Check if the spiral feeder is correctly aligned and free of obstructions.
- Verify that the foot pedal is fully depressed and released to trigger the ball release mechanism.

## 9. SPECIFICATIONS

---

Attribute	Detail
Product Dimensions	16 x 11 x 4 inches
Item Weight	2.58 pounds
Item Model Number	SP-NGFM-211
Manufacturer Recommended Age	36 months - 12 years
Manufacturer	iPlay, iLearn