

- › [Amazon Basics](#) /
- › [Amazon Basics Extendable Window Squeegee with Spray, Aluminum Extension Pole, 49 to 69 Inch, Gray Instruction Manual](#)

Amazon Basics DS1908

Amazon Basics Extendable Window Squeegee with Spray Instruction Manual

PRODUCT OVERVIEW

The Amazon Basics Extendable Window Squeegee with Spray is designed for efficient cleaning of indoor and outdoor windows. It features a telescopic aluminum handle that extends from 49 to 69 inches, an integrated spray head with an 80 ml bottle for cleaning solutions, an absorbent microfiber scrubber cloth, and a rubber blade for streak-free results.

Instructions For Use



1. Window squeegee parts



2. Insert the squeegee scraper



3. Then press the small green dot to jam the scraper



4. Insert the mop part



5. Press the velcro to make it adhere tightly



6. Align the buttons, hold the button and push up



7. Align the buttons, hold the button and connect the rod



8. Fill the pot with solution and screw it to the corresponding hole



9. Finish installation

Image: The Amazon Basics Extendable Window Squeegee with Spray, fully assembled.

PARTS LIST

Before assembly, ensure all components are present:

- Squeegee head with microfiber scrubber and rubber blade
- 80 ml spray bottle
- Telescopic aluminum extension pole (multiple sections)



Image: All individual components of the extendable window squeegee.

SETUP INSTRUCTIONS

Follow these steps to assemble your window squeegee:

1. **Insert Squeegee Scraper:** Align the squeegee scraper with the head unit and slide it into place.
2. **Secure Scraper:** Press the small green button to lock the scraper securely.
3. **Insert Mop Part:** Attach the microfiber mop part to the designated area on the squeegee head.
4. **Adhere Mop:** Press the Velcro on the mop to ensure it adheres tightly to the head.
5. **Connect Pole Sections:** Align the buttons on the aluminum extension pole sections. Hold the button and push the sections together until they click into place. Ensure a secure connection.
6. **Fill Spray Bottle:** Fill the 80 ml bottle with your preferred window cleaning solution or plain water.
7. **Insert Spray Bottle:** Insert the filled bottle into the designated slot on the squeegee head.
8. **Final Assembly:** Ensure all parts are firmly connected before use.



Image: Visual guide for assembling the window squeegee components.

Assembly Video

Your browser does not support the video tag.

Video: Demonstrates the assembly process of the Amazon Basics Extendable Window Squeegee.

OPERATING INSTRUCTIONS

To use the squeegee effectively:

- **Extend the Pole:** Adjust the telescopic aluminum handle to the desired length (49 to 69 inches) by pressing the buttons and sliding the sections.
- **Spray Solution:** Press the trigger on the handle to dispense cleaning solution from the 80 ml bottle onto the window surface.
- **Scrub:** Use the absorbent microfiber scrubber cloth to loosen dirt and grime on the window.
- **Squeegee:** Flip the head to use the rubber blade. Gently pull the squeegee across the window in overlapping strokes to remove water and solution, leaving a streak-free finish.

Trigger for spray in 2 position



Image: Shows the spray trigger mechanism on the squeegee handle.



Image: Demonstrates the extendable squeegee in use on a window.

Usage Videos

Your browser does not support the video tag.

Video: A demonstration of the extendable squeegee in action, showing its reach and effectiveness.

Your browser does not support the video tag.

Video: Quick demonstration highlighting the squeegee's ability to clean high windows.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your squeegee:

- **Clean Microfiber Cloth:** The microfiber scrubber cloth is removable and washable. Detach it from the squeegee head and wash it with water and mild detergent. Allow it to air dry completely before reattaching.
- **Prevent Nozzle Clogging:** After each use, especially when using soap solutions, rinse the spray nozzle and the 80 ml bottle with clean water for at least 30 seconds to prevent dried soap residue from blocking the nozzle.

- **Store Properly:** Store the squeegee in a dry place away from direct sunlight.

Removable and washable mop



Image: Close-up of the removable and washable microfiber mop.

Cleaning Demonstration Video

Your browser does not support the video tag.

Video: Shows how to clean the microfiber pad and rinse the spray bottle and nozzle.

SPECIFICATIONS

Brand	Amazon Basics
Model Number	DS1908
Color	Gray
Product Dimensions (LxWxH)	49 - 69 x 10 x 4.3 inches
Item Weight	1.92 pounds

Handle Material	Aluminum
Blade Material	Rubber
Spray Bottle Capacity	80 ml



Image: Detailed diagram illustrating the dimensions and key features of the squeegee.

TROUBLESHOOTING

If you encounter issues with your squeegee, consider the following:

- Clogged Spray Nozzle:** If the spray nozzle is blocked, it may be due to dried soap water. Clean the nozzle and bottle thoroughly with clean water after each use to prevent blockages.
- Squeegee Blade Performance:** For optimal streak-free results, ensure the rubber blade is clean and free of debris. If the blade is worn, replacement may be necessary (replacement parts not specified in product information).
- Loose Pole Sections:** Ensure all pole sections are securely clicked into place during assembly and before use to maintain stability.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please refer to the Amazon Basics official website or contact Amazon customer service directly. Specific warranty details are not provided in this manual.