

Deco Gear DGGMOUS

Deco Gear Wired Gaming Mouse (Model DGGMOUS) User Manual

Comprehensive instructions for setup, operation, and maintenance.

1. INTRODUCTION

Welcome to your new Deco Gear Wired Gaming Mouse. This manual provides detailed instructions for the proper setup, operation, and maintenance of your device to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Deco Gear Wired Gaming Mouse
- User Manual (this document)

3. FEATURES

The Deco Gear Wired Gaming Mouse is equipped with several features designed to enhance your computing and gaming experience:

- Adjustable DPI settings ranging from 800 to 5000 DPI for precise control.
- High-precision optical sensor for accurate tracking.
- Ergonomic design suitable for various grip styles, promoting comfort during extended use.
- 11 distinct RGB backlight modes for customizable aesthetics.
- 6 responsive buttons for versatile command input.
- 1000 Hz polling rate for rapid response times.
- Durable switches with an endurance rating of up to 30 million clicks.

4. SETUP

Follow these steps to set up your Deco Gear Wired Gaming Mouse:

1. **Connect the Mouse:** Plug the USB connector of the Deco Gear Wired Gaming Mouse into an available USB port on your computer.
2. **Driver Installation:** The mouse is designed for plug-and-play functionality and typically does not require additional driver installation for basic operation. Your operating system should automatically detect and install the necessary drivers.
3. **Initial Use:** Once connected, the mouse will illuminate, indicating it is powered on and ready for use.

5. OPERATING INSTRUCTIONS

5.1. DPI Adjustment

The Deco Gear Gaming Mouse features adjustable DPI settings, allowing you to customize cursor sensitivity to your preference. There are 6 color-assigned DPI modes:

- 800 DPI
- 1200 DPI
- 1800 DPI
- 2500 DPI
- 3200 DPI
- 5000 DPI

To adjust the DPI, press the dedicated **DPI button** located on the top of the mouse, behind the scroll wheel. Each press cycles through the available DPI settings, indicated by a change in the mouse's LED color.



USER ADJUSTABLE DPI

Press the DPI button to adjust up to 5000 DPI.

This mouse also has a polling rate of 1000 Hz



Image: The DPI button is located behind the scroll wheel, used to cycle through sensitivity settings.

5.2. RGB Backlight Modes

The mouse features 11 distinct RGB backlight modes. To change between these modes, press the **Mouse Scroll Wheel (B3)** and **Mouse Button 5 (B5)** simultaneously.



RGB BACKLIGHT MODES

11 Themed Backlight Modes

Press Mouse Scroll Wheel (B3) + Mouse Button 5 (B5)
to change modes.



Image: Mouse Scroll Wheel (B3) and Mouse Button 5 (B5) are used together to change RGB backlight modes.

5.3. Ergonomics and Grip

The mouse is designed with an ergonomic shape to provide comfort and reduce strain during prolonged use, accommodating various hand sizes and grip styles.



ERGONOMIC GAMING MOUSE

With an endurance rating of up to 30 million clicks, this mouse fits comfortably in your hand during long gaming sessions.



Image: A hand comfortably holding the Deco Gear Gaming Mouse, illustrating its ergonomic shape.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your gaming mouse:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the mouse. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the mouse's internal components. Avoid abrasive cleaners.
- **Storage:** Store the mouse in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity.
- **Cable Care:** Avoid sharp bends, kinks, or excessive pulling on the USB cable to prevent internal wire damage.

7. TROUBLESHOOTING

If you encounter any issues with your Deco Gear Wired Gaming Mouse, refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mouse not responding	Loose USB connection, faulty USB port, temporary driver issue.	Ensure the USB cable is securely plugged into your computer. Try connecting the mouse to a different USB port. Restart your computer to refresh drivers.
Cursor movement is erratic or jumpy	Dirty optical sensor, unsuitable mouse pad surface, incorrect DPI setting.	Clean the optical sensor on the underside of the mouse with a soft, lint-free cloth. Use a clean, uniform mouse pad. Adjust DPI settings to a comfortable level.
RGB lighting not working or stuck	Software glitch, specific lighting mode selected, power issue.	Try cycling through RGB modes using the Scroll Wheel (B3) + Mouse Button 5 (B5) combination. Unplug and replug the mouse. Ensure your USB port provides sufficient power.
Buttons not responding or performing incorrectly	Software conflict, operating system settings, faulty button.	Test the mouse on another computer to rule out system-specific issues. Check your operating system's mouse settings. Ensure no conflicting third-party software is running.
Mouse not detected by PlayStation 4 (PS4)	Compatibility limitations for console use.	While some users may find limited functionality, this mouse is primarily designed for PC/Mac platforms. Full compatibility and functionality on gaming consoles like PS4 are not guaranteed and may require specific console settings or third-party adapters.

8. SPECIFICATIONS

Key technical specifications for the Deco Gear Wired Gaming Mouse:

- **Brand:** Deco Gear
- **Model Number:** DGGMOUS
- **Hardware Platform:** PC/Mac
- **Item Weight:** 4.6 ounces
- **Product Dimensions (LxWxH):** 4.8 x 2.7 x 1.6 inches
- **Color:** Black
- **Power Source:** Corded Electric (USB)
- **DPI Settings:** 800, 1200, 1800, 2500, 3200, 5000
- **Polling Rate:** 1000 Hz
- **Buttons:** 6
- **Switch Endurance:** Up to 30 million clicks

9. WARRANTY AND SUPPORT

Deco Gear products typically come with a manufacturer's limited warranty. For specific warranty details, product support, or technical assistance, please refer to the official Deco Gear website or contact their customer service directly. It is recommended to keep your purchase receipt for any warranty claims.

Online Support: For additional information and support, you may visit the official Deco Gear store on Amazon: [Deco Gear Store](#)

