

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Snow Peak](#) /

› [Snow Peak Home & Camp Burner \(GS-600SL\) Instruction Manual](#)

Snow Peak GS-600SL

Snow Peak Home & Camp Burner (GS-600SL) Instruction Manual

Model: GS-600SL | Brand: Snow Peak

[Introduction](#) [Safety Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)
[Warranty & Support](#) [Specifications](#)

1. INTRODUCTION

The Snow Peak Home & Camp Burner (GS-600SL) is a versatile and compact gas stove designed for both indoor and outdoor cooking. Its innovative collapsible design allows for easy storage and transport, making it ideal for camping, picnics, or as an auxiliary burner at home. This manual provides essential information for the safe and efficient use of your burner.



Image 1.1: Snow Peak Home & Camp Burner (GS-600SL) and its variants.

2. SAFETY INFORMATION

WARNING: Failure to follow these instructions may result in fire, explosion, property damage, personal injury, or death.

- Use only A4 CB Butane fuel canisters.
- Operate in a well-ventilated area. Do not use indoors without proper ventilation.
- Keep away from flammable materials.
- Ensure the burner is on a stable, level surface before use.
- Do not leave the operating burner unattended.
- Allow the burner to cool completely before handling or storing.
- Keep out of reach of children.
- Inspect the burner and fuel canister for damage before each use.

3. SETUP

3.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Verify that all parts are present and undamaged. The package should include the Home & Camp Burner (GS-600SL).



HOME&CAMP バーナー



GS-600BK

GS-600SL

GS-600KH

Image 3.1: The Home & Camp Burner in its compact, folded form.

3.2 Assembling the Burner

1. Place the burner on a flat, stable surface.
2. Locate the lock pin on the underside of the main body. Press the lock pin and rotate the burner head assembly outwards until it locks into the open position.
3. Extend the pot supports from the burner head. Ensure all four supports are fully extended and stable.



Image 3.2: Diagram illustrating the lock pin and rotation for assembly.



炎は、 人類が最初に手にしたギア。

1998年、世界をあっと驚かせた超小型ストーブ
「ギガパワーストーブ“地”」を開発して以来、スノーピークは、
他にはない燃焼系のギアを次々と世に送り出してきた。

炎にまつわる道具をつくるたびに、
今でも私たちはついつい熱くなりすぎてしまします。

Image 3.3: The burner fully assembled and ready for fuel connection.

3.3 Connecting the Fuel Canister

1. Ensure the burner's control knob is in the "OFF" position.
2. Open the fuel canister compartment cover.
3. Align the nozzle of the A4 CB Butane fuel canister with the burner's gas inlet.
4. Push the canister firmly into place until it clicks, ensuring a secure connection.
5. Close the fuel canister compartment cover.

Your browser does not support the video tag.

Video 3.1: Demonstrates the assembly and fuel connection process for the Snow Peak Home & Camp Burner.

4. OPERATION

4.1 Igniting the Burner

1. With the fuel canister securely connected, slowly turn the control knob counter-clockwise to release a small amount of gas.

2. Press the auto-ignitor button firmly until the burner ignites.
3. If the burner does not ignite after a few attempts, turn the control knob to "OFF", wait a few seconds, and repeat the process.



Image 4.1: Operating the control knob and ignitor.

4.2 Adjusting the Flame

Once ignited, rotate the control knob to adjust the flame intensity. Turn clockwise to decrease the flame and counter-clockwise to increase it. The burner is designed to provide stable heat output for various cooking needs.

既成概念を覆す、 コンパクトデザイン

「HOME&CAMPバーナー」の最大の特徴は、ガス缶をセットする本体部分に五徳を格納できるということ。収納にある程度のスペースが必要となる一般的な卓上コンロに比べて場所をとらず、洗練されたデザインも魅力です。



Image 4.2: The burner in operation with a pot, showing stable flame and cooking surface.

4.3 Turning Off the Burner

To turn off the burner, rotate the control knob fully clockwise until the flame extinguishes. Ensure the gas supply is completely shut off.

5. MAINTENANCE

5.1 Cleaning

- Allow the burner to cool completely before cleaning.
- Wipe the burner body and pot supports with a damp cloth. For stubborn stains, use a mild detergent.
- Do not use abrasive cleaners or solvents, as these can damage the finish.
- Ensure all parts are dry before storing.

5.2 Storage

1. Disconnect the fuel canister and store it separately in a cool, dry place.

2. Press the lock pin and fold the pot supports and burner head back into the compact storage position.
3. Ensure the burner is clean and dry before storing in its original packaging or a protective case.



Image 5.1: Diagram illustrating the lock pin and folding for storage.



Image 5.2: The burner in its compact, folded state for easy transport and storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner does not ignite.	<ul style="list-style-type: none"> Fuel canister empty or improperly connected. Ignitor malfunction. Gas flow obstructed. 	<ul style="list-style-type: none"> Check fuel level and ensure canister is securely attached. Ensure gas is flowing by listening for a hiss. If not, check for obstructions. If ignitor fails, use a long-stem lighter to manually ignite.
Weak or inconsistent flame.	<ul style="list-style-type: none"> Low fuel level. Partial obstruction in gas line. Cold ambient temperature affecting fuel pressure. 	<ul style="list-style-type: none"> Replace fuel canister. Inspect gas line for kinks or debris. Warm the fuel canister slightly (e.g., in a pocket) if operating in cold conditions.

7. SPECIFICATIONS

- Model:** GS-600SL
- Brand:** Snow Peak
- Fuel Type:** Liquefied Petroleum Gas (A4 CB Butane)
- Material:** Aluminum, Brass, Resin, Rubber
- Dimensions (Folded):** 5.4" L x 4.6" W x 11" H (approx. 13.7 x 11.7 x 27.9 cm)
- Dimensions (Open):** 11.8" L x 13.6" W x 4.72" H (approx. 30 x 34.5 x 12 cm)
- Weight:** 1.4 kg (3.08 lbs)
- Maximum Energy Output:** 2442.16 Watts (8,333 BTU)
- Included Components:** Home & Camp Burner, Silver

8. WARRANTY & SUPPORT

8.1 Product Guarantee

Snow Peak products are designed and manufactured to meet top engineering standards, ensuring durability in challenging outdoor conditions. This product comes with a **Lifetime Product Guarantee**. If a product does not function properly due to manufacturing defects or material failure, please contact Snow Peak User Services for repair or exchange at no charge.

8.2 Customer Support

For further assistance, questions, or to report an issue, please contact Snow Peak User Services. Refer to the official Snow Peak website for the most current contact information.

Online Resources: www.snowpeak.com

