

[Manuals.plus](#) /

› [SIMAX](#) /

› Simax Glass Baking Dish with Lid - Large Oval Shaped Casserole - 3 Qt with Ridges User Manual

SIMAX B07TW87617

Simax Glass Baking Dish with Lid User Manual

Brand: SIMAX | Model: B07TW87617

INTRODUCTION

The Simax Glass Baking Dish with Lid is a versatile kitchen essential designed for preparing, cooking, serving, baking, storing, and reheating food. Crafted from lab-grade, shatter-resistant borosilicate glass, this 3-quart oval casserole dish features ridged grill lines to allow food to cook above excess grease, promoting healthier meals. Its durable construction ensures it can withstand extreme temperatures and thermal shock, making it suitable for various culinary applications.



Image: The Simax Glass Baking Dish with its lid, showcasing its use for baking dishes like stuffed peppers.

KEY FEATURES

- **Oven-to-Table Versatility:** Designed for seamless transition from oven to table, and then to fridge and microwave, simplifying your cooking and serving process. The clear glass offers an attractive presentation.
- **Healthy Cooking Design:** Features raised ridges on the bottom, allowing food to cook above excess grease for a healthier meal preparation.
- **Tight-Fitting Lid:** The lid fits securely, creating a Dutch oven-like effect for excellent slow cooking. Dimples on the lid

help distribute moisture for even basting. The lid can also be used as a small baking dish (0.6 quarts capacity).

- **Premium Borosilicate Glass:** Made in the Czech Republic from lab-grade borosilicate glass, ensuring high quality, durability, and resistance to thermal shock. It does not absorb odors or flavors and is Cadmium and Lead-free.
- **Wide Temperature Range:** Can withstand temperatures from -40°F (-40°C) to 572°F (300°C), making it suitable for freezing, refrigeration, baking, and reheating.
- **Easy Storage and Cleaning:** Transparent glass allows for easy monitoring of cooking and identification of leftovers. It is microwave and dishwasher safe for convenient use and cleanup.



Image: Illustration of the dimpled lid for even basting and raised ridges for low-fat cooking, along with "Cadmium and Lead Free" and "Made in Europe" labels.

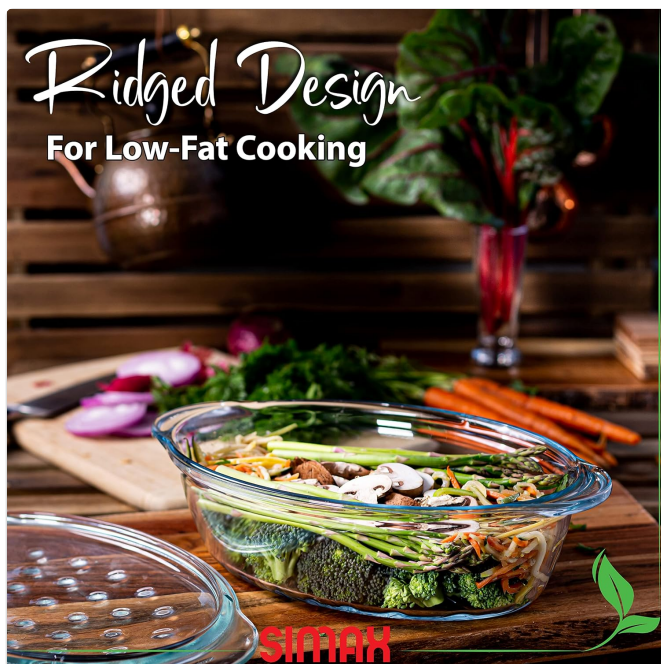


Image: The baking dish filled with vegetables, emphasizing its ridged design for low-fat cooking.



Image: The baking dish with raw ingredients, highlighting its oven-safe borosilicate glass material, capable of withstanding up to 572°F/300°C.

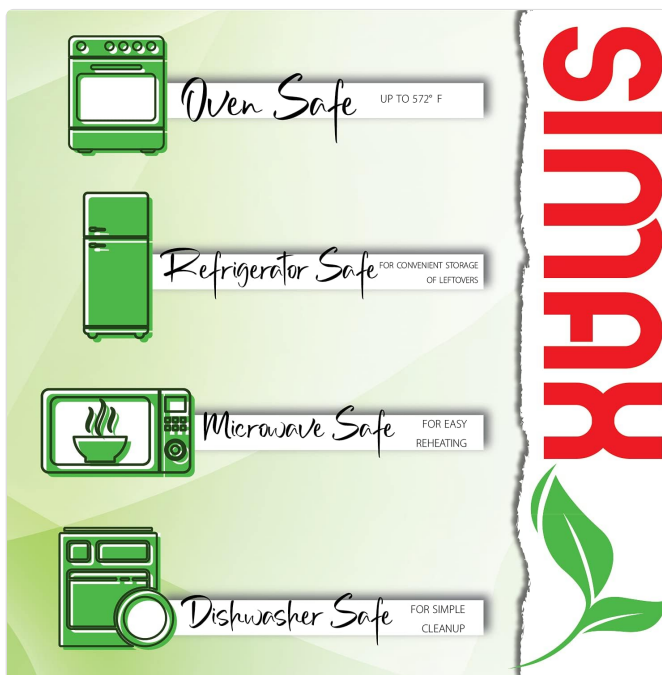


Image: Icons indicating the dish is safe for oven, refrigerator, microwave, and dishwasher use.

SETUP

1. **Unpacking:** Carefully remove the baking dish and lid from its packaging. Inspect for any damage during transit.
2. **Initial Cleaning:** Before first use, wash the baking dish and lid thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth.
3. **Placement:** Ensure the baking dish is placed on a stable, flat surface when in use, especially when hot.

OPERATING INSTRUCTIONS

Oven Use:

- The Simax baking dish is oven safe up to 572°F (300°C).
- It is safe to use the lid in the oven along with the dish.
- Always place the dish in a preheated oven. Avoid extreme temperature changes, such as placing a hot dish directly onto a cold surface or vice-versa.
- The ridged bottom allows for healthier cooking by keeping food elevated from excess fats.

Microwave Use:

- The dish and lid are microwave safe for reheating and cooking.
- Ensure the lid is not sealed tightly when microwaving to allow steam to escape.

Refrigeration and Freezing:

- The dish can be used for convenient storage of leftovers in the refrigerator or freezer, withstanding temperatures down to -40°F (-40°C).
- Allow frozen dishes to thaw partially before placing them in a hot oven to prevent thermal shock.

Serving:

- The clear glass design makes the dish suitable for direct serving from oven to table.
- Use oven mitts or heat-resistant pads when handling the hot dish.



Image: The Simax baking dish filled with a cooked meal, illustrating its "Oven to Table" functionality.

CARE AND MAINTENANCE

- **Dishwasher Safe:** The Simax baking dish and lid are completely dishwasher safe for easy cleaning.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Avoid using harsh scouring pads or abrasive cleaners that could scratch the glass surface.
- **Stubborn Food:** For baked-on food, soak the dish in warm, soapy water for a period before cleaning.
- **Storage:** Store the dish and lid in a manner that prevents chipping or breakage. The lid can be inverted and placed inside the dish for compact storage.

TROUBLESHOOTING

While Simax borosilicate glass is highly durable, proper handling is key to its longevity. Most issues can be avoided by

following the care instructions.


- **Glass Breakage/Cracking:** This is typically caused by sudden, extreme temperature changes (thermal shock) or impact. Always allow the dish to cool down gradually before washing or placing in a cold environment. Do not place a hot dish on a wet or cold surface.
- **Food Sticking:** Ensure adequate greasing or non-stick spray is used for certain recipes, especially when baking. The ridged design helps minimize sticking by elevating food.
- **Cloudiness/Stains:** Over time, mineral deposits from water or certain foods might cause cloudiness. This can often be removed by soaking in white vinegar or a solution of baking soda and water.

If you encounter persistent issues not covered here, please refer to the manufacturer's website or contact customer support.

PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	SIMAX
Model Number (ASIN)	B07TW87617
Material	Borosilicate Glass
Color	Clear
Shape	Oval
Capacity (Dish)	3 Quarts (96 Oz)
Capacity (Lid)	0.6 Quarts
Item Weight	5.59 Pounds
Product Dimensions	8.2"D x 14.3"W x 4.4"H
Oven Safe Temperature	Up to 572°F (300°C)
Freezer Safe Temperature	Down to -40°F (-40°C)
Care Instructions	Oven Safe, Microwave Safe, Dishwasher Safe
Origin	Made in Czech Republic

3 Qt / 96 Oz Capacity
+ 0.5 Qt Lid

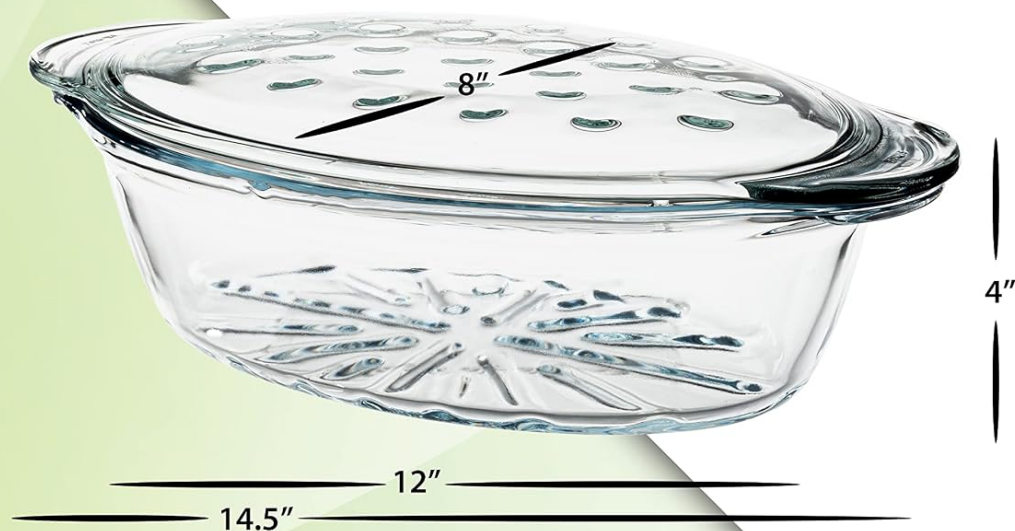

Lid Doubles as Additional Baking Dish
Holds 0.5 Qt

SIMAX



Image: Diagram showing the dimensions and capacity of the 3-quart Simax baking dish and its 0.5-quart lid.

WARRANTY AND SUPPORT

Specific warranty details for the Simax Glass Baking Dish with Lid are not provided in this manual. For information regarding product warranty, returns, or technical support, please contact the manufacturer directly or refer to the product's official website.

For general inquiries or assistance, you may also reach out to the retailer from whom the product was purchased.

© 2025 SIMAX. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question