

[Manuals.plus](#) /

› [XHDATA](#) /

› XHDATA D-318BT MP3 Player & Portable Radio User Manual

XHDATA D-318BT

XHDATA D-318BT MP3 Player & Portable Radio User Manual

Model: D-318BT

INTRODUCTION

Welcome to the user manual for your new XHDATA D-318BT MP3 Player, Portable Radio, and Bluetooth Speaker. This device is designed to provide versatile audio entertainment and learning functionalities, including FM radio, MP3 playback, Bluetooth connectivity, and recording capabilities. Its compact and lightweight design makes it ideal for various uses, from outdoor activities to educational settings. Please read this manual carefully to ensure proper operation and to fully utilize all features of your D-318BT.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- 1 x D318BT Bluetooth Speaker
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x Operation Manual (this document)
- 1 x BL-5C Rechargeable Battery

PRODUCT OVERVIEW



Front View of D-318BT: This image displays the front of the XHDATA D-318BT, highlighting its compact design, speaker grille, digital display, and the arrangement of control buttons for various functions like playback, recording, and navigation. The extendable antenna is visible at the top.



Bluetooth Connectivity: The D-318BT is shown on a desk, wirelessly connected to a smartphone, demonstrating its capability to function as a Bluetooth speaker for streaming audio from mobile devices.



Camping



Travel



Home



Kitchen



Compact Dimensions: This image illustrates the compact size of the D-318BT, held in a hand, with its dimensions clearly marked: 4.33 inches (L), 0.98 inches (W), and 2.56 inches (H), emphasizing its portability.



TF/SD Card



AUX



Speaker



FM Radio



Recording

MP3

MP3 Player



Wireless BT

Versatile Features: The D-318BT is shown in a learning environment, accompanied by icons representing its key features: TF/SD Card support, AUX input, built-in speaker, FM Radio, Recording function, MP3 Player capability, and Wireless Bluetooth connectivity.

SETUP

1. Battery Installation

The D-318BT uses a BL-5C rechargeable battery.

1. Locate the battery compartment cover on the back of the device.
2. Slide or lift the cover to open the compartment.
3. Insert the BL-5C battery, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Charging the Battery

Before first use, fully charge the battery.

1. Connect the supplied USB Charging Cable to the D-318BT's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. It will typically turn off or change color when charging is complete.

3. Initial Power On

To power on the device, slide the power switch (usually located on the side or top) to the "ON" position. The display will light up.

OPERATING INSTRUCTIONS

1. FM Radio Mode

1. Extend the telescopic antenna for better reception.
2. Press the "MODE" button (if available, or the device may default to FM) until "FM" is displayed.
3. **Automatic Scan:** Press and hold the "PLAY/PAUSE" or "SCAN" button to automatically scan and save available FM stations.
4. **Manual Tuning:** Use the "PREV/NEXT" or number buttons to manually tune to a specific frequency or navigate through saved stations.

2. MP3 Player Mode (TF/SD Card)

1. Insert a TF/SD card (up to 32GB, FAT32 format recommended) with MP3 audio files into the designated slot.
2. The device should automatically switch to MP3 mode, or you may need to press the "MODE" button.
3. Use the "PLAY/PAUSE" button to start or pause playback.
4. Use the "PREV/NEXT" buttons to skip tracks.
5. Use the number buttons (0-9) to directly select a track by its number (if supported).

3. Bluetooth Speaker Mode

1. Press the "MODE" button until "BT" or "Bluetooth" is displayed. The device will enter pairing mode, indicated by a flashing Bluetooth icon or sound.
2. On your smartphone or other Bluetooth-enabled device, go to Bluetooth settings and search for available devices.
3. Select "XHDATA D-318BT" from the list.
4. Once paired, the device will confirm with a sound, and the Bluetooth indicator will become solid.
5. You can now play audio from your connected device through the D-318BT.

4. Recording Feature

The D-318BT allows recording of FM radio broadcasts or external audio via AUX input.

1. Ensure a TF/SD card is inserted for saving recordings.
2. **Recording FM Radio:** Tune to the desired FM station. Press the "REC" button to start recording. Press "REC" again to stop.
3. **Recording via AUX Input:** Connect an external audio source (e.g., another radio, microphone) to the D-318BT's AUX input using the supplied AUX cable. Press the "REC" button to start recording. Press "REC" again to stop.
4. Recordings are saved as MP3 files on the TF/SD card.

5. A-B Repeat Function

This feature is useful for repeating a specific segment of an audio file (e.g., for language learning).

1. While playing an MP3 file, press the "A/B" button at the desired starting point (A).
2. Press the "A/B" button again at the desired ending point (B).
3. The segment between A and B will repeat continuously.
4. Press the "A/B" button a third time to cancel the repeat function.

6. AUX Input Mode

1. Connect an external audio device (e.g., smartphone, computer, CD player) to the D-318BT's AUX input port using the supplied AUX cable.
2. The device should automatically switch to AUX mode, or you may need to press the "MODE" button until "AUX" is displayed.
3. Audio from the connected device will now play through the D-318BT's speaker.

MAINTENANCE

- Keep the device dry. Avoid exposure to water or high humidity.
- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid dropping the device or subjecting it to strong impacts.
- Store the device in a cool, dry place when not in use for extended periods.
- If the device will not be used for a long time, it is recommended to remove the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is low or not installed correctly.	Charge the battery or ensure it is installed with correct polarity.
No sound.	Volume is too low; device is paused; incorrect mode selected.	Increase volume; press PLAY/PAUSE; ensure correct mode (FM, MP3, BT, AUX) is selected.
Poor FM reception.	Antenna not extended; weak signal.	Fully extend the telescopic antenna; try repositioning the device.
Bluetooth not connecting.	Device not in pairing mode; D-318BT not discoverable; too far from source.	Ensure D-318BT is in BT mode and flashing; restart both devices; move closer.
Cannot record.	No TF/SD card inserted; card full or corrupted.	Insert a TF/SD card; check card capacity; try formatting the card (this will erase data).

SPECIFICATIONS

- **Brand:** XHDATA
- **Model:** D-318BT
- **Color:** Black
- **Special Feature:** Bluetooth radio, Recording, MP3 Player, A-B Repeat
- **Connectivity Technology:** Auxiliary, USB, Bluetooth
- **Product Dimensions (L x W x H):** 4.33" x 0.98" x 2.56"
- **Tuner Technology:** FM

- **Radio Bands Supported:** FM
- **Power Source:** DC (via USB), BL-5C Rechargeable Battery
- **Item Weight:** 107 Grams

WARRANTY AND SUPPORT

Your XHDATA D-318BT comes with a One-Year Warranty from the date of purchase. This warranty covers manufacturing defects and workmanship. For any issues, questions, or technical support, please contact XHDATA customer service. Timely customer service is provided to assist you with any concerns. Please refer to your purchase documentation or the XHDATA official website for specific contact information.

© 2023 XHDATA. All rights reserved.
XHDATA D-318BT User Manual

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question