

## TecTake 401675-3

# TecTake 2-Person Pop-Up Tent Instruction Manual

Model: 401675-3

## 1. INTRODUCTION

This manual provides essential information for the proper setup, use, and maintenance of your TecTake 2-Person Pop-Up Tent. Designed for quick assembly, this tent is suitable for camping, hiking, and other outdoor activities. Please read these instructions carefully before use to ensure safety and optimal performance.

## 2. SAFETY INSTRUCTIONS

- Keep all flame and heat sources away from the tent fabric. The tent is made of flammable material.
- Do not use gas appliances, heaters, or cooking equipment inside the tent.
- Ensure adequate ventilation to prevent suffocation, especially when sleeping.
- Secure the tent properly with pegs and guy ropes to prevent it from being blown away in strong winds.
- Avoid setting up the tent under trees with dead branches that could fall.
- Do not pitch the tent on uneven ground or in areas prone to flooding.
- Keep children away from the tent during setup and takedown to prevent injury from spring-loaded poles.

## 3. PACKAGE CONTENTS

Verify that all components are present before attempting to set up the tent:

- 1 x Pop-Up Tent
- 1 x Carry Bag
- 8 x Pegs (Piquetas)
- 4 x Guy Ropes (Cuerdas tensoras)

## 4. SETUP INSTRUCTIONS

1. **Unpack the Tent:** Remove the tent from its carry bag. The tent is designed to 'pop up' automatically when released from its folded state.
2. **Unfold and Position:** Gently unfold the tent and allow the integrated fiberglass poles to spring into shape. Lay the tent flat on your chosen campsite.
3. **Secure with Pegs:** Use the provided pegs to secure the tent's base to the ground. Insert pegs through the loops at the tent's corners and sides.
4. **Attach Guy Ropes:** Extend the four guy ropes from the designated attachment points on the tent. Secure them to the ground using the remaining pegs, pulling them taut to stabilize the tent against wind.



Image: Exterior view of the TecTake 2-Person Pop-Up Tent fully set up.

## 5. OPERATING THE TENT

- **Entrance:** The tent features a zippered entrance. Unzip to open and zip to close.
- **Mosquito Net:** An integrated mosquito net is present at the entrance to protect against insects while allowing airflow. This can be zipped independently.
- **Ventilation:** The tent design includes ventilation points to reduce condensation and improve air circulation. Ensure these are not obstructed.



Image: Detail of the tent entrance, showing the zippered opening and integrated mosquito net.

## 6. MAINTENANCE

- **Cleaning:** Clean the tent with a damp cloth and mild soap. Do not use harsh detergents or

abrasive cleaners. Rinse thoroughly and allow to air dry completely before packing.

- **Drying:** Always ensure the tent is completely dry before storing to prevent mold and mildew growth.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Pole Care:** Inspect fiberglass poles for damage before and after each use. Replace any broken poles immediately.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent does not pop up correctly	Poles are tangled or stuck.	Gently untangle poles and guide them into position. Ensure no fabric is caught.
Water leakage	Improper setup, damaged fabric, or extreme weather conditions.	Ensure all zippers are fully closed. Check for tears and repair if necessary. Re-pitch the tent on higher ground if possible.
Tent unstable in wind	Insufficient pegging or loose guy ropes.	Ensure all pegs are firmly in the ground. Tighten all guy ropes and adjust their angles for maximum stability.
Difficulty folding the tent	Incorrect folding technique.	Refer to the folding instructions (often included as a diagram with the product or available online). Practice the technique.

## 8. TECHNICAL SPECIFICATIONS

Feature	Specification
Water Column	1500 mm/cm <sup>2</sup>
Overall Dimensions (L x W x H)	Approx. 215 x 117 x 98 cm (84.6 x 46.1 x 38.6 inches)
Interior Dimensions (L x W x H)	Approx. 209 x 110 x 95 cm (82.3 x 43.3 x 37.4 inches)
Packed Dimensions (Ø x H)	Approx. 69 x 4 cm (27.2 x 1.6 inches)
Weight	Approx. 1.5 kg (3.3 lbs)

Feature	Specification
Material	100% Polyester / Fiberglass poles
UV Protection	UV 30+
Occupancy	2 persons



Image: Visual representation of the tent with key dimensions (length, width, height) indicated.

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.