

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Objecto](#) /

> [Objecto F5 Flow Fan User Manual](#)

Objecto F5 Flow Fan

Objecto F5 Flow Fan User Manual

Model: F5 Flow Fan (FN72BL)

INTRODUCTION

Thank you for purchasing the Objecto F5 Flow Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this fan.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Always unplug the fan when moving it, cleaning, or when not in use.
- Do not insert fingers or foreign objects into any ventilation or exhaust opening.
- Do not use outdoors. This fan is designed for indoor use only.
- Do not use in wet locations such as bathrooms or laundry areas.
- Place the fan on a stable, flat surface to prevent tipping.
- Keep the fan away from curtains, drapes, and other fabrics that could be drawn into the fan.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

PACKAGE CONTENTS

Please check the package contents upon unpacking. If any items are missing or damaged, contact customer support.

- Objecto F5 Flow Fan Unit
- Remote Control
- User Manual (this document)

SETUP

1. Unpacking

Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.

2. Assembly and Placement

The F5 Flow Fan can be used as a table-top or floor-standing fan. Adjust the height of the fan by extending or retracting the telescopic pole. Ensure the pole is securely locked in place before operation.



Image: Objecto F5 Flow Fan configured for table-top use. The fan head is mounted on a shorter pole, resting on its circular base.



Image: Objecto F5 Flow Fan configured for floor-standing use. The fan head is elevated on an extended pole, standing on its circular base.

Place the fan on a firm, level surface. Ensure there is adequate space around the fan for proper airflow and oscillation. Avoid placing the fan near loose materials like curtains or paper that could obstruct the fan blades.

3. Power Connection

Plug the power cord into a standard 120-volt AC electrical outlet. Ensure the plug is fully inserted.

OPERATING INSTRUCTIONS

Control Panel and Remote Control

The F5 Flow Fan can be operated using the control panel on the base of the unit or the included remote control. The remote control requires batteries (not included).

1. Power On/Off

- Press the **Power** button on the control panel or remote control to turn the fan on or off.

2. Adjusting Fan Speed

- The fan features 30 speed levels.
- Use the **Speed Up** (+) or **Speed Down** (-) buttons on the control panel or remote control to increase or decrease the fan speed.

3. Oscillation Function

- Press the **Oscillation** button to activate or deactivate the oscillating movement of the fan head.
- The fan will oscillate horizontally to distribute air across a wider area.

4. Timer Function

- The integrated timer allows you to set the fan to automatically turn off after a specified period.
- Press the **Timer** button repeatedly to cycle through available timer settings (e.g., 1 hour, 2 hours, 4 hours, etc.). The selected time will be displayed on the fan's indicator.

5. Wind Rhythm Mode

- Press the **Mode** button to activate the unique wind rhythm feature. This mode simulates natural breezes by varying fan speed.

AROMA THERAPY FEATURE

The F5 Flow Fan includes an aroma therapy option to diffuse essential oils into your space.

1. Locate the aroma pad compartment, typically on the back or side of the fan head.
2. Open the compartment and place a few drops of your preferred essential oil onto the aroma pad (not included).
3. Close the compartment securely.
4. As the fan operates, the airflow will gently diffuse the aroma into the room.
5. Replace the aroma pad periodically or when changing essential oil scents.

MAINTENANCE

Cleaning

- **Always unplug the fan before cleaning.**
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully remove the front grille (refer to specific instructions in the full manual if available, or consult manufacturer support). Wipe the blades with a soft cloth. Ensure all parts are dry before reassembling and operating.
- The aroma pad should be replaced or cleaned as needed.

Storage

When not in use for extended periods, unplug the fan and store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Power cord not securely plugged in.	Check if the power outlet is working. Ensure the power cord is firmly plugged into the outlet and the fan.
Weak airflow.	Fan speed is too low. Air intake/output blocked. Fan blades are dirty.	Increase the fan speed. Ensure nothing is obstructing the front or rear grilles. Clean the fan blades (refer to Maintenance section).
Fan makes unusual noise.	Fan not on a level surface. Obstruction in fan blades. Loose parts.	Place the fan on a stable, level surface. Unplug the fan and check for any foreign objects in the blades. If noise persists, contact customer support.
Remote control not working.	Batteries are dead or incorrectly inserted. Obstruction between remote and fan.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the signal path.

SPECIFICATIONS

Feature	Detail
Model Name	F5 Flow Fan
Item Model Number	FN72BL
Brand	Objecto
Color	Black
Electric Fan Design	Floor Fan (convertible to Table Fan)
Power Source	Corded Electric (Remote Control is Battery Powered)
Voltage	120 Volts
Number of Blades	3
Number of Power Levels	30
Control Method	Remote Control, On-unit controls
Features	Integrated Timer Mode, Aroma Therapy Option, Unique Wind Rhythm, Oscillation

Feature	Detail
Material	Acrylonitrile Butadiene Styrene
Product Dimensions	22 x 15.1 x 13.6 inches (approximate, varies with height adjustment)
Item Weight	13.4 pounds
Indoor/Outdoor Usage	Indoor
Certification	UL certified
UPC	019102007213

WARRANTY AND SUPPORT

Manufacturer's Warranty

The Objecto F5 Flow Fan is covered by a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty inquiries, or replacement parts, please contact Objecto customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

When contacting support, please have your product model number (FN72BL) and proof of purchase available.