



Manuals.plus /

› Nespresso /

› Nespresso Expert & Milk D85 Coffee Machine User Manual

Nespresso D85-ME-GR-NE

Nespresso Expert & Milk D85 Coffee Machine User Manual

Model: D85-ME-GR-NE

INTRODUCTION

Welcome to the Nespresso Expert & Milk D85 Coffee Machine user manual. This guide provides essential information for the setup, operation, maintenance, and troubleshooting of your new coffee machine. Please read this manual carefully before using the appliance to ensure safe and optimal performance.



Image: The Nespresso Expert & Milk D85 Coffee Machine in grey, featuring its main unit with control buttons, a clear water tank, and a separate Aeroccino milk frother. A glass containing a layered latte macchiato is positioned on the cup support.

SAFETY INSTRUCTIONS

- Always read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquid.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Use only Nespresso capsules.
- Keep out of reach of children.

SETUP

Unpacking and First Use

1. Carefully remove the machine from its packaging.
2. Place the machine on a flat, stable, heat-resistant surface, away from water splashes and heat sources.
3. Remove the water tank and rinse it with fresh drinking water. Fill the water tank with fresh drinking water up to the MAX level.
4. Place a container (minimum 0.6 L) under the coffee outlet.
5. Plug the machine into a grounded power outlet.
6. Press any coffee button to turn the machine ON. The buttons will blink during heating up (approx. 25 seconds).
7. Once the buttons are steady, press the Lungo button to perform a rinsing cycle. Repeat this process three times.

Bluetooth Connection

The Nespresso Expert & Milk D85 features Bluetooth connectivity. Download the Nespresso app on your smartphone or tablet to connect to your machine for additional features and settings, including temperature control and personalized coffee recipes. Follow the in-app instructions for pairing.

OPERATING INSTRUCTIONS

Making Coffee

1. Ensure the water tank is filled with fresh drinking water.
2. Lift the lever completely and insert a Nespresso capsule. Close the lever.
3. Place a cup under the coffee outlet.
4. Select your desired coffee size by pressing one of the coffee buttons:
 - **Ristretto:** Smallest volume, intense flavor.
 - **Espresso:** Standard espresso volume.
 - **Lungo:** Larger volume, milder taste.
 - **Americano:** Coffee with added hot water.
5. The machine will automatically stop when the selected volume is reached.
6. After brewing, lift the lever to eject the used capsule into the capsule container.

Using the Aeroccino Milk Frother

The integrated Aeroccino allows for preparation of hot or cold milk froth for various coffee recipes.

1. Ensure the whisk is correctly inserted in the Aeroccino.
2. Pour fresh, cold milk into the Aeroccino. Do not exceed the MAX level indicator for milk froth.
3. Place the lid on the Aeroccino.
4. Press the button on the Aeroccino:
 - For hot milk froth, press briefly (button illuminates red).
 - For cold milk froth, press and hold for 2 seconds (button illuminates blue).
5. The Aeroccino will stop automatically when the preparation is complete.

MAINTENANCE

Daily Cleaning

- Empty and rinse the drip tray and used capsule container daily.
- Clean the coffee outlet with a damp cloth.

- Rinse the water tank with fresh drinking water.
- Clean the Aeroccino immediately after each use. Remove the whisk and rinse all parts with warm water. The Aeroccino base should be wiped with a damp cloth.

Descaling

Descaling is crucial for maintaining the machine's performance and ensuring consistent coffee quality. The machine will indicate when descaling is needed (e.g., specific light pattern).

1. Refer to the Nespresso descaling kit instructions for detailed steps.
2. Ensure the machine is empty of capsules and the drip tray is removed.
3. Fill the water tank with the descaling solution and water as per the descaling kit instructions.
4. Place a large container (min. 1 L) under the coffee outlet.
5. Initiate the descaling cycle as per the machine's specific descaling mode (refer to the Nespresso app or Nespresso website for model-specific instructions).
6. Rinse the machine thoroughly after descaling by running several cycles with fresh water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No coffee flow, only water.	Machine needs descaling.	Perform a descaling cycle.
Coffee is not hot enough.	Cups are cold; machine not preheated.	Preheat cups with hot water; ensure machine is fully heated. Adjust temperature via Nespresso app.
Milk frother not producing froth.	Incorrect milk type or temperature; whisk not clean.	Use fresh, cold, semi-skimmed milk. Ensure whisk is clean and correctly inserted.
Machine not turning on.	No power supply.	Check power cord connection and wall outlet.

SPECIFICATIONS

Feature	Detail
Brand	Nespresso
Model Number	D85-ME-GR-NE
Color	Grey
Dimensions (W x D x H)	38.54 x 22.3 x 28.7 cm
Weight	6.66 kg
Water Tank Capacity	1.11 Liters
Pressure	19 bars
Capsule Container Capacity	9-10 used capsules
Special Features	Bluetooth connection, Removable Tank, Sliding cup support
Material	Stainless Steel, Silicone, Plastic

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Nespresso website or contact Nespresso customer service in your region. Keep your proof of purchase for warranty claims.

You can visit the official Nespresso store for more information: [Nespresso Store](#)

