Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Chefman /
- > Chefman Digital Electric Glass Kettle User Manual

Chefman RJ11-15-SSTC

Chefman Digital Electric Glass Kettle

USER MANUAL

Introduction

The Chefman Digital Electric Glass Kettle is designed for optimal brewing of various beverages with accurate digital temperature control. This 1.5-liter capacity kettle can brew over 6 cups of hot water, boiling faster than traditional methods. It features 8 presets for different temperatures, a keep-warm function, and includes a removable tea infuser for loose-leaf or bagged teas. Crafted with high-quality borosilicate glass and stainless steel, it combines sleek design with practical functionality.



Image: Chefman Digital Electric Glass Kettle, showcasing its sleek design and glass body.

Important Safety Information

When using electrical appliances, basic safety precautions should always be followed. This kettle includes advanced safety features for your protection:

- Stay-Cool Handle: Designed to remain cool to the touch, preventing burns during handling.
- Auto Shutoff: The kettle automatically shuts off once water reaches a boil.

• **Boil-Dry Protection:** The kettle turns off automatically if there is little or no water inside, preventing damage from overheating.

Always ensure the kettle is unplugged before cleaning. Do not immerse the base or cord in water. Keep out of reach of children.

Components and Parts

Familiarize yourself with the components of your Chefman Digital Electric Glass Kettle:

- Kettle: The main glass carafe with stainless steel base.
- Removable Lid: Top cover for the kettle.
- Tea Infuser: Stainless steel mesh infuser for loose-leaf tea.
- Power Base: The unit that powers the kettle and houses the digital controls.



Image: Overview of the kettle highlighting its 6+ cup capacity, removable top for easy cleaning, boil-dry protection, and stainless steel finish.

Setup

- 1. **Unpack:** Carefully remove all packaging materials from the kettle and its components.
- 2. **Initial Cleaning:** Before first use, clean the kettle and tea infuser as described in the 'Maintenance and Cleaning' section.
- 3. **Placement:** Place the power base on a stable, flat, heat-resistant surface. Ensure the power cord is not dangling where it can be pulled or tripped over.

Operating Instructions

Filling the Kettle

Open the lid and fill the glass kettle with fresh, cold water. Do not fill below the MIN (0.5 L) mark or above the MAX (1.5 L) mark. Ensure the lid is securely closed before operating.



Image: A hand pouring water into the kettle, illustrating the filling process.

Using Temperature Presets

The kettle features a digital touch display with 8 preset temperature options for various beverages:

- Black Tea
- Herbal Tea
- Oolong Tea
- Oil (for specific uses)
- French Press Coffee
- White Tea
- Green Tea
- Delicate (for sensitive teas)

Simply turn the knob on the power base to select your desired preset. The display will show the corresponding temperature. Press the 'Start/Stop' button to begin heating.

Using the Tea Infuser

For brewing loose-leaf or bagged teas directly in the kettle:

- 1. Remove the lid from the kettle.
- 2. Insert the removable tea infuser into the kettle.
- 3. Add your desired amount of loose-leaf tea or tea bags into the infuser.
- 4. Replace the lid, ensuring it is properly aligned and secured.
- 5. Fill with water and select your desired temperature preset.



Image: The Chefman kettle with its tea infuser, alongside a cup of matcha tea, demonstrating its versatility.

Keep-Warm Function

The kettle can maintain your desired temperature for up to 60 minutes. After heating, the keep-warm function will automatically activate. To deactivate, press the 'Start/Stop' button.

Product Overview Video

Your browser does not support the video tag.

Video: An official product overview demonstrating the features and operation of the Chefman Digital Electric Glass Kettle.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your kettle:

- 1. Unplug: Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- 2. **Exterior Cleaning:** Wipe down the glass and stainless steel exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- 3. **Kettle Interior:** The kettle has a filter to keep water/tea clean. It only needs to be rinsed with hot water. For stubborn mineral deposits, you may use a descaling solution or a mixture of vinegar and water.
- 4. **Tea Infuser:** The tea infuser can be washed in warm soapy water and rinsed thoroughly.
- 5. **Drying:** Ensure all parts are completely dry before storing or next use.

Note: The kettle is not dishwasher safe. Hand wash only.

Troubleshooting

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

- Kettle not turning on:
 - Ensure the power base is securely plugged into a working outlet.
 - Check that the kettle is properly seated on the power base.
 - · Verify that the lid is securely closed.
- · Water not heating:
 - Confirm that a temperature preset has been selected and the 'Start/Stop' button has been pressed.
 - · Check for boil-dry protection activation (kettle may have shut off due to low water). Refill and restart.
- Mineral deposits/scale buildup:
 - This is normal, especially in hard water areas. Refer to the 'Maintenance and Cleaning' section for descaling instructions.

If the issue persists, please contact customer support.

Specifications

Brand	Chefman

Model Name	Digital Electric Glass Kettle, Removable Tea Infuser Included		
Item Model Number	RJ11-15-SSTC		
Color	Team Infuser		
Capacity	1.5 Liters (6+ Cups)		
Material	Borosilicate Glass, Stainless Steel		
Special Features	Keep Warm, 8 Temperature Control Presets, Programmable		
Power	1300 Watts / 120 Volts		
Product Dimensions	9.5"L x 8"W x 8"H		
Item Weight	3.3 Pounds		



Image: The kettle with its dimensions (9"L x 11"H x 7"W) clearly marked.

Warranty and Support

Your Chefman Digital Electric Glass Kettle is cETL approved with advanced safety technology for long-lasting durability. It comes with a **1-year assurance** provided by Chefman, ensuring a worry-free purchase.

For additional information or support, please refer to the official User Guide available in PDF format. You can typically find this document on the product's support page or by searching for "Chefman RJ11-15-SSTC User Manual PDF" online.

Related Documents - RJ11-15-SSTC



Chefman Fast-Boil 1L Infuser Kettle User Guide

User guide for the Chefman Fast-Boil 1L Infuser Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.



Chefman Custom-Temp 1.8L Keep Warm Kettle User Guide

Comprehensive user guide for the Chefman Custom-Temp 1.8L Keep Warm Kettle (Model RJ11-18-CTI-UK), covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information.



Chefman Fast-Boil 1L Infuser Kettle User Guide

Comprehensive user guide for the Chefman Fast-Boil 1L Infuser Kettle. Learn about safety instructions, features, operating procedures, cleaning, maintenance, and warranty information for your Chefman kettle.



Chefman Power Infusion Plus 1.8L Kettle User Guide

User guide for the Chefman Power Infusion Plus 1.8L Kettle, covering safety instructions, features, operating instructions, cleaning and maintenance, terms and conditions, and warranty registration.



Chefman Lightning 1.8L Custom-Temp Electric Kettle User Manual & Guide

Comprehensive user manual and guide for the Chefman Lightning 1.8L Custom-Temp Electric Kettle (Model RJ11-18-CTI-HP-SERIES). Learn about features, safety, operation, cleaning, and warranty.



Chefman Easy-Steep 1.8L Kettle User Guide: Features, Safety, and Warranty

Comprehensive user guide for the Chefman Easy-Steep 1.8L Kettle. Learn about safety instructions, features, operating procedures, cleaning, maintenance, terms and conditions, and warranty registration for your Chefman appliance.