

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Magic Motion](#) /
- › [Magic Motion Flamingo Wearable Vibes Instruction Manual](#)

Magic Motion 1907

Magic Motion Flamingo Wearable Vibes Instruction Manual

Model: 1907


Brand: Magic Motion

INTRODUCTION

The Magic Motion Flamingo Wearable Vibes is an intelligent personal massager designed for versatile use. This device offers multiple vibration frequencies and can be controlled via a dedicated mobile application or used in an offline mode. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Flamingo device.

PRODUCT OVERVIEW

The Magic Motion Flamingo is crafted from high-quality silicone and features a unique ergonomic design for comfortable use. Its compact size and app-controlled capabilities make it a discreet and versatile personal massager.

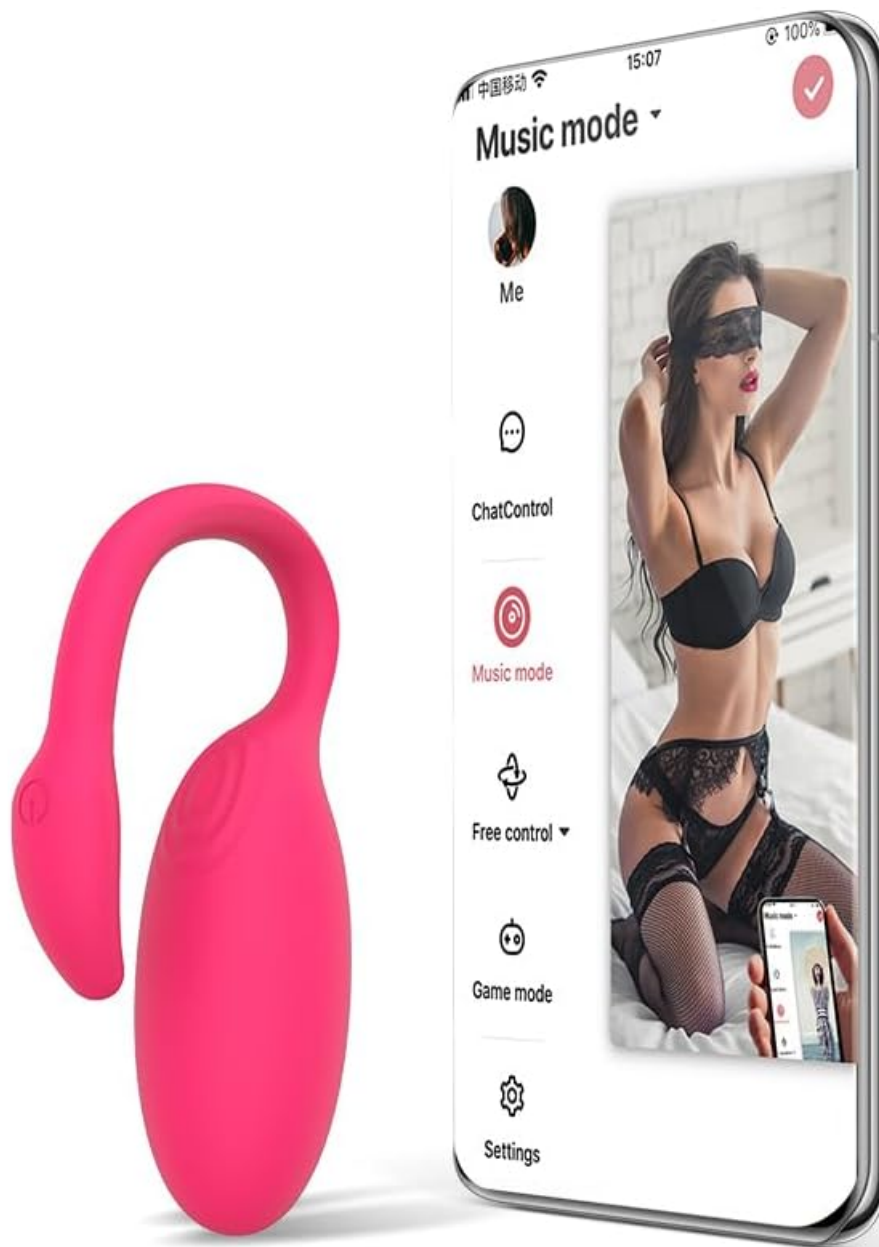

This image shows the Magic Motion Flamingo device, a flexible, pink silicone massager, positioned next to a smartphone. The phone screen displays the Magic Motion app interface, highlighting various control modes such as 'Music mode', 'ChatControl', 'Free control', and 'Game mode'. This illustrates the device's app-controlled functionality.



Spec.

- 45g / 1.6oz
- 90min
- >120min
- IPX6
- Silicone/ABS

2.8in
72mm

1.2in/φ30mm


This diagram provides key specifications for the Magic Motion Flamingo. It indicates dimensions of 2.8 inches (72mm) in length and 1.2 inches (30mm) in diameter. Weight is 45g (1.6oz). Battery life is specified as 90 minutes of use and over 120 minutes of standby. The device has an IPX6 waterproof rating and is made from Silicone/ABS materials.

SETUP

Charging the Device

Before first use, fully charge your Magic Motion Flamingo. Use the provided proprietary USB charging cable. Connect the small end of the cable to the charging port on the device and the larger USB end to a compatible power source (e.g., computer USB port, USB wall adapter, power bank).


USB CHARGING

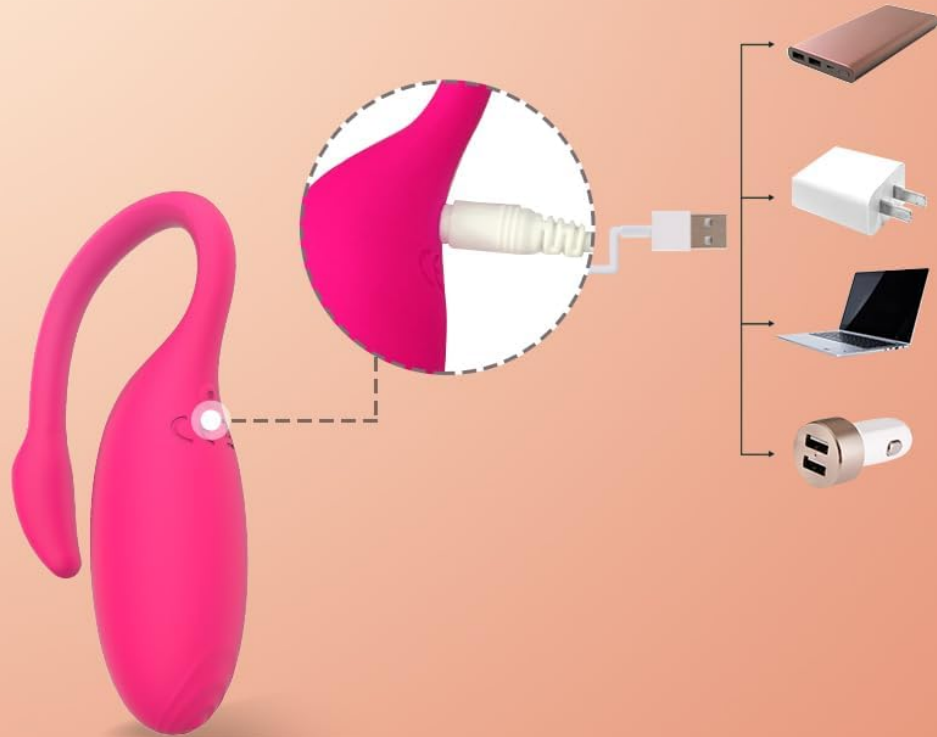

This image demonstrates how to charge the Magic Motion Flamingo. The device is shown with its charging port connected to a USB cable. The cable can be plugged into various power sources such as a power bank, wall adapter, laptop, or car charger.

App Installation and Connection

1. **Download the App:** Search for 'Magic Motion' in the Apple App Store (for iOS devices) or Google Play Store (for Android devices) and install the official application.
2. **Power On Device:** Press and hold the power button on your Flamingo device until it vibrates or an indicator light appears.
3. **Open App:** Launch the Magic Motion app on your smartphone.
4. **Connect:** Follow the in-app instructions to connect your device. **Important:** Do not attempt to pair the device directly through your phone's Bluetooth settings. Connection must be established within the Magic Motion application.

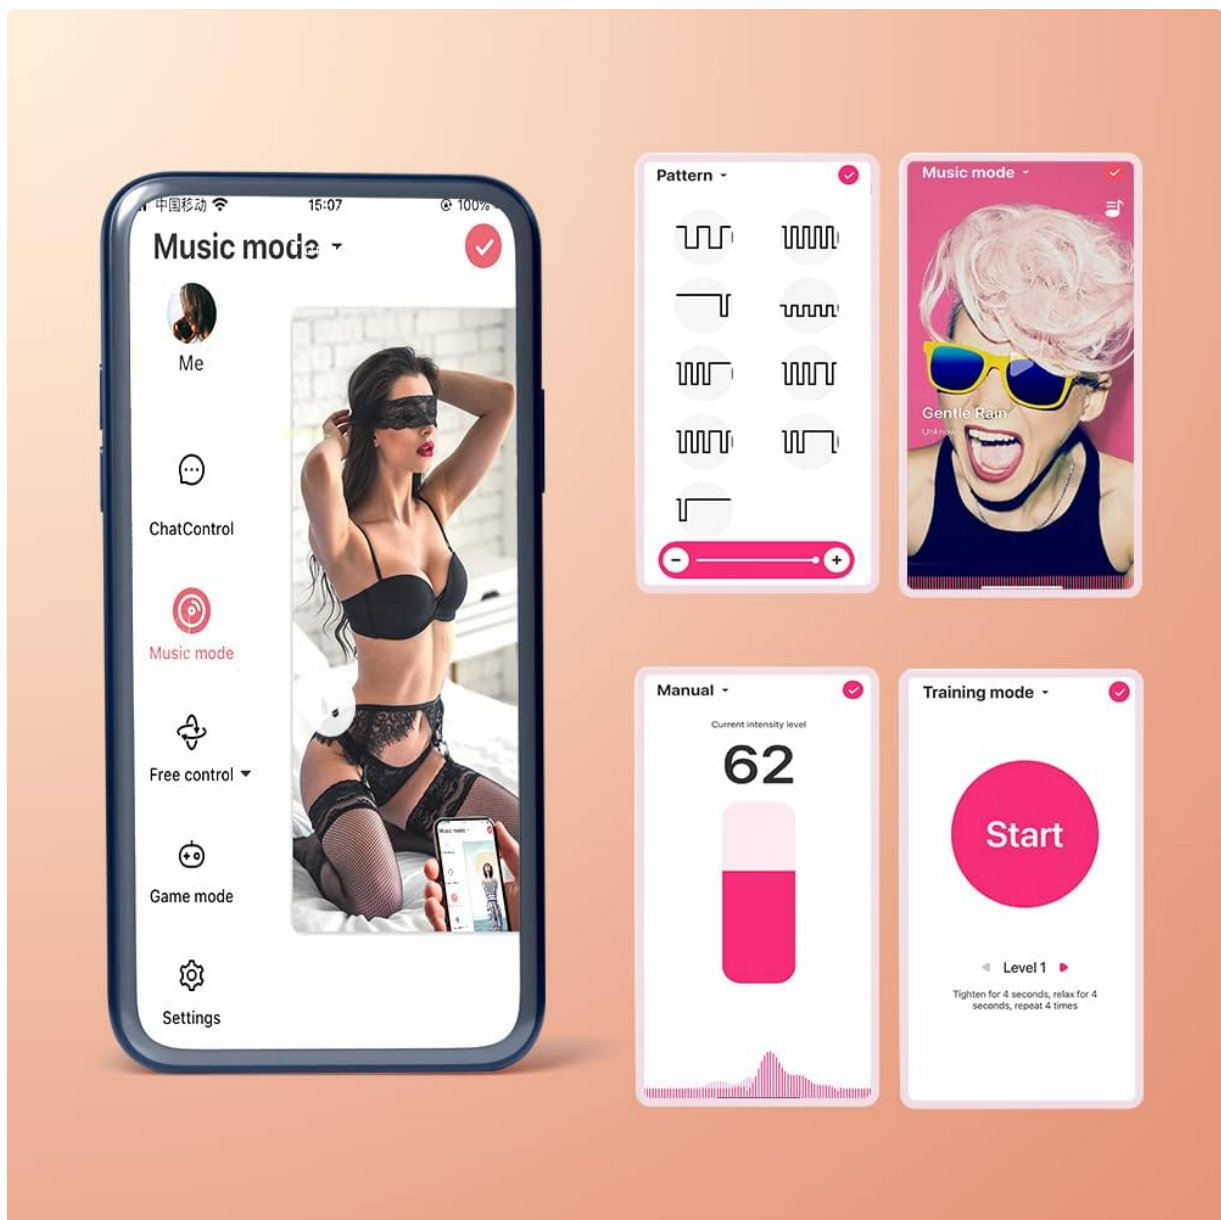

This image displays multiple screenshots of the Magic Motion app. The main screen shows 'Music mode', 'ChatControl', 'Free control', and 'Game mode'. Other screens illustrate 'Pattern' mode with various vibration patterns, a 'Music mode' interface, a 'Manual' intensity control, and a 'Training mode' with instructions for Kegel exercises.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the power button for approximately 2-3 seconds until the device activates.
- **To Power Off:** Press and hold the power button for approximately 2-3 seconds until the device deactivates.

Using with the App

Once connected to the Magic Motion app, you can access various control modes:

- **Music Mode:** Synchronize vibrations with your favorite music.
- **ChatControl:** Allow a partner to control the device remotely.
- **Free Control:** Manually adjust vibration patterns and intensity.
- **Game Mode:** Engage with interactive games within the app that control the device.

For optimal app performance, ensure your smartphone is kept in close proximity to the device to maintain a stable Bluetooth connection.

Offline Mode

The device can also be used without the app. After powering on, short-press the power button to cycle through the seven pre-programmed vibration modes. The device will remember the last used mode when powered off and on again.

MAINTENANCE

Cleaning

The Magic Motion Flamingo is IPX6 waterproof, allowing for easy cleaning. After each use, wash the device with warm water and a mild, antibacterial soap. Rinse thoroughly and pat dry with a lint-free cloth. Do not use harsh chemicals or abrasive cleaners.



This image shows the Magic Motion Flamingo device partially submerged in water with bubbles, illustrating its waterproof capability. This indicates the device can be safely cleaned with water.

Storage

Store the device in a clean, dry place, away from direct sunlight and extreme temperatures. It is recommended to use the provided storage pouch to protect the device from dust and damage.



This image displays the complete contents of the Magic Motion Flamingo package. It includes the Flamingo device, a USB charging cable, a grey storage pouch, and the instruction manual, all neatly arranged next to the product box.

TROUBLESHOOTING

Connectivity Issues

- **Device Disconnects:** Ensure your smartphone is within close range of the device. Physical obstructions or distance can interfere with the Bluetooth signal.
- **Cannot Pair:** Confirm you are attempting to connect through the Magic Motion app and not directly via your phone's Bluetooth settings. Restart both the device and the app, then try connecting again.

Charging Problems

- **Not Charging:** Verify that the proprietary USB charging cable is securely inserted into both the device's charging port and the power source. Try a different USB port or wall adapter.
- **Charging Indicator:** Check if the charging indicator light (if present) is active. If not, ensure connections are firm.

Device Not Responding

- **No Power:** Ensure the device is fully charged. If the battery is depleted, it may not respond immediately after

plugging in. Allow a few minutes for a minimal charge before attempting to power on.

- **Stuck Mode:** If the device is unresponsive or stuck in a mode, try performing a soft reset by holding the power button for an extended period (e.g., 10-15 seconds) until it powers off completely, then restart.

SPECIFICATIONS

- **Model Number:** 1907
- **Product Dimensions:** 1.2 x 1.2 x 2.8 inches (30 x 30 x 72 mm)
- **Weight:** 1.6 ounces (45 grams)
- **Material:** Silicone / ABS
- **Batteries:** 1 Lithium Polymer battery (included)
- **Battery Life (Approx.):** 90 minutes (usage), >120 minutes (standby)
- **Waterproof Rating:** IPX6
- **Connectivity:** Bluetooth (via Magic Motion App)

WARRANTY AND SUPPORT

The Magic Motion Flamingo Wearable Vibes is covered by a one-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims, technical support, or any inquiries regarding your device, please contact Magic Motion customer service through the official website or the contact information provided in the product packaging. Please retain your proof of purchase for warranty validation.