

Manuals.plus /

› Piebert /

› Piebert Kneading Hook (830) Instruction Manual for Beem Multiback Bread Machines B7.001, D1000310

## Piebert 830

# Piebert Kneading Hook (830) Instruction Manual

For Beem Multiback Top Class Bread Machines B7.001 & D1000310

## INTRODUCTION

---


This manual provides essential instructions for the proper installation, use, and maintenance of your Piebert 830 Kneading Hook. This replacement part is specifically designed for compatibility with Beem Multiback Top Class 3-in-1 B7.001 and 5-in-1 D1000310 bread machines. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

## INSTALLATION

---

Follow these steps to correctly install the kneading hook in your bread machine:

1. **Ensure Safety:** Before handling any parts, ensure your bread machine is unplugged from the power outlet to prevent accidental operation.
2. **Remove Bread Pan:** Carefully remove the bread pan from the bread machine housing.
3. **Locate Drive Shaft:** Inside the bread pan, identify the drive shaft at the bottom.
4. **Attach Kneading Hook:** Align the square opening at the base of the Piebert 830 Kneading Hook with the drive shaft. Press the kneading hook firmly onto the shaft until it is securely seated. Ensure it rotates freely without excessive wobble.
5. **Verify Placement:** Double-check that the kneading hook is fully engaged with the drive shaft. Improper installation can lead to poor kneading results or damage to the machine.
6. **Return Bread Pan:** Place the bread pan back into the bread machine, ensuring it locks into position.

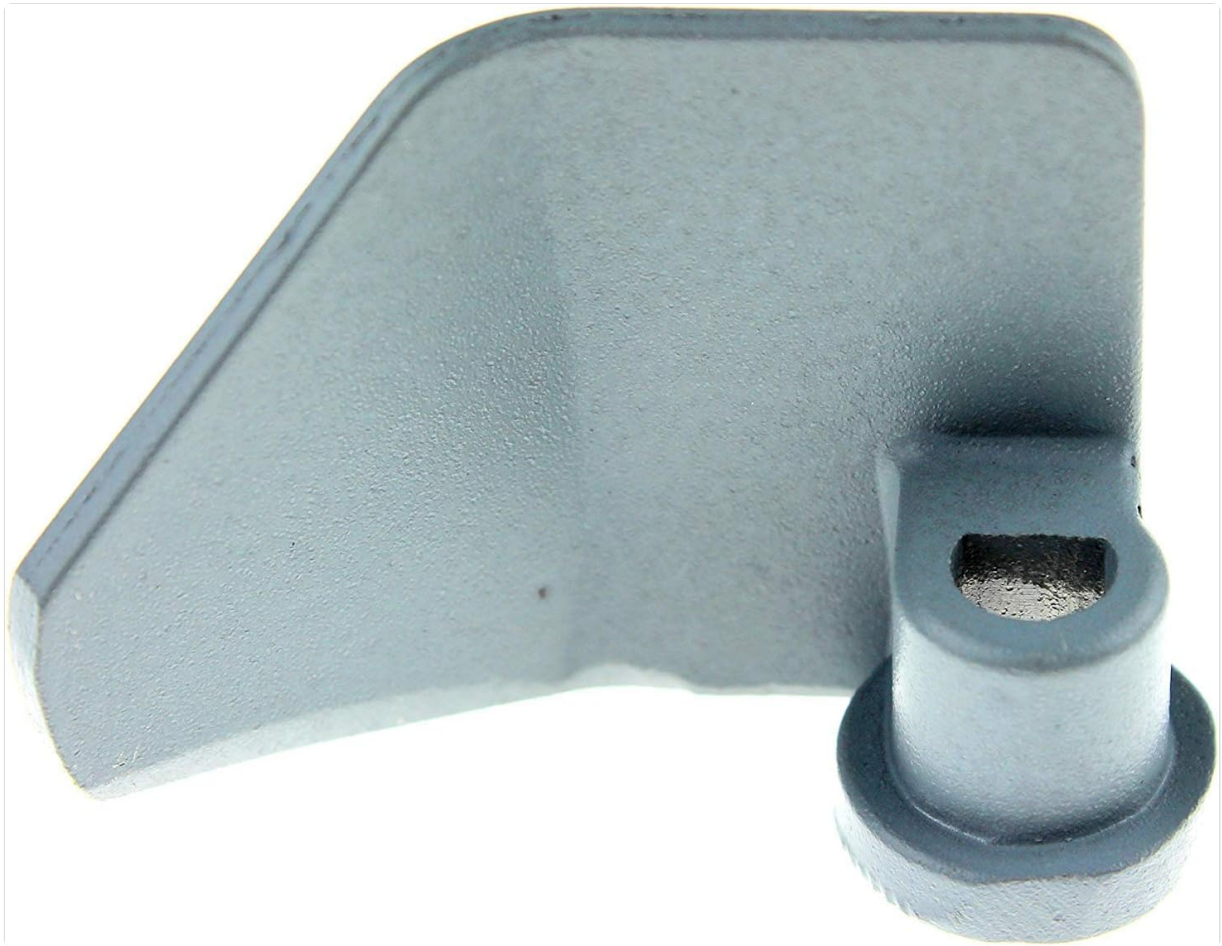

*Image 1: The Piebert 830 Kneading Hook. This grey metallic component features a paddle-like blade and a square-shaped attachment point at its base, designed for secure fitting onto a bread machine's drive shaft.*

## OPERATION

---

Once the kneading hook is correctly installed, the operation of your bread machine remains unchanged. The kneading hook is an integral part of the bread-making process, responsible for mixing and kneading the dough.

- **Ingredient Placement:** Add ingredients to the bread pan according to your recipe, ensuring they are placed around the kneading hook.
- **Program Selection:** Select the desired program on your Beem Multiback bread machine. The machine will automatically engage the kneading hook during the kneading cycles.
- **Monitoring:** Periodically check the kneading process to ensure the dough is being mixed effectively. If the dough appears to be sticking excessively to the hook or pan, you may need to adjust ingredient ratios slightly or clean the hook more thoroughly before use.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will extend the life of your kneading hook and ensure hygienic operation.

- **Immediate Cleaning:** After each use, remove the kneading hook from the bread pan. It is easiest to

clean when dough residue has not yet dried.

- **Washing:** Wash the kneading hook by hand using warm, soapy water and a soft sponge or brush. Avoid abrasive cleaners or scouring pads, which can damage the surface.
- **Removing Stuck Dough:** If dough is stuck, soak the kneading hook in warm water for 10-15 minutes to soften the residue before cleaning. A small, non-metallic utensil can be used to gently dislodge stubborn pieces.
- **Drying:** Thoroughly dry the kneading hook with a soft cloth before storing or reinstalling it. Ensure no moisture remains in the shaft opening to prevent corrosion.
- **Storage:** Store the kneading hook in a dry place.

## TROUBLESHOOTING

---

If you encounter issues with your kneading hook, consider the following common solutions:

Problem	Possible Cause	Solution
Dough not kneading properly.	Kneading hook not securely attached or worn out.	Ensure the hook is fully seated on the drive shaft. If the hook appears loose or damaged, consider replacement.
Kneading hook stuck in dough/bread.	Common occurrence, especially with sticky doughs.	Allow bread to cool slightly before attempting to remove. If still stuck, gently twist and pull. Soaking the pan in warm water can help loosen it.
Residue buildup on hook.	Insufficient cleaning after previous use.	Soak the hook in warm, soapy water and clean thoroughly with a non-abrasive brush.

## SPECIFICATIONS

---

- **Model:** 830
- **Brand:** Piebert
- **Material:** Stainless Steel
- **Color:** Grey
- **Weight:** 30 grams
- **Dimensions (Packaging):** 7 x 6 x 3 cm
- **Compatibility:** Beem Multiback Top Class 3-in-1 B7.001, Beem Multiback 5-in-1 D1000310 bread machines

## SUPPORT AND WARRANTY

---

For further assistance or inquiries regarding your Piebert Kneading Hook, please contact the retailer or

manufacturer directly. Information regarding spare parts availability is not provided in the product details. Please refer to your bread machine's original manual for specific instructions related to its operation and maintenance.

This product is intended as a replacement part. Any warranty claims should be directed to the point of purchase, adhering to their return and warranty policies.