

## Eurotime 22074

# Eurotime Model 22074 Firefighter Analog Alarm Clock User Manual

Model: 22074 | Brand: Eurotime

## INTRODUCTION

---

Welcome to your new Eurotime Model 22074 Analog Alarm Clock. This manual provides detailed instructions for setting up, operating, and maintaining your alarm clock to ensure optimal performance. Please read these instructions carefully before use.

## PRODUCT OVERVIEW

---

The Eurotime Model 22074 is an analog alarm clock featuring a unique firefighter design, perfect for children's rooms. It includes a silent, non-ticking quartz movement, a loud bell alarm, snooze function, and an LED backlight for easy viewing in the dark.

### Key Features:

- Silent Quartz Movement (no ticking)
- Double Bell Alarm
- Firefighter Design
- Crescendo Alarm
- Snooze Function
- Blue LED Backlight
- Durable Metal and Plastic Casing



Front view of the Eurotime Model 22074 Firefighter Analog Alarm Clock, showing the clock face with firefighter illustration and the double bell alarm mechanism.

## SETUP

---

### Battery Installation

The alarm clock requires 2 x 1.5V AA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the alarm clock.
2. Remove the cover by sliding or gently prying it open.
3. Insert two AA alkaline batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

**Important: Use only alkaline batteries. Do not use carbon-zinc batteries or rechargeable batteries, as these may affect the clock's performance or cause damage.**



Side view of the Eurotime Model 22074 Firefighter Analog Alarm Clock, showing the blue casing and bell mechanism.

## OPERATING INSTRUCTIONS

---

### Setting the Time

1. Locate the **Time Setting Knob** on the back of the alarm clock.
2. Rotate the knob in either direction until the hour and minute hands display the correct time.

### Setting the Alarm

1. Locate the **Alarm Setting Knob** on the back of the alarm clock.
2. Rotate this knob to move the alarm hand to your desired alarm time.
3. Ensure the alarm ON/OFF switch (usually a small lever or button) is in the "ON" position to activate the alarm.

### Activating/Deactivating the Alarm

Use the **Alarm ON/OFF Switch** (typically a small lever or button on the back or side) to turn the alarm function on or off.

- **ON:** The alarm will sound at the set time.
- **OFF:** The alarm will not sound.

### Snooze Function

When the alarm sounds, press the **Snooze Button** (usually located on top of the clock, often integrated with the backlight button). The alarm will temporarily stop and sound again after a few minutes.

### Backlight Function

Press the **Backlight Button** (often the same as the Snooze Button) to illuminate the clock face for a few seconds, allowing you to read the time in the dark. The backlight is a blue LED.

# EUROTIME

**Ihre Uhrenfabrik aus  
Mainfranken seit 1949!**

**Alle Vorteile:**

- bewährte Uhrwerke
- hohe Materialstärke
- Qualitätsprüfung
- persönlicher Support



Close-up view of the Eurotime Model 22074 clock face, highlighting the firefighter design and clear numbering.

## MAINTENANCE

---

### Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the casing or clock face.

### Battery Replacement

Replace batteries when the clock starts to lose time or the alarm/backlight functions weaken. Always replace both batteries at the same time with new alkaline batteries.

### Storage

If storing the alarm clock for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

---

## Clock Not Working / Losing Time

- Check if batteries are inserted correctly with the correct polarity.
- Replace with new alkaline batteries.
- Ensure the batteries are 1.5V AA alkaline type.

## Alarm Not Sounding

- Check if the alarm is set to the desired time.
- Ensure the alarm ON/OFF switch is in the "ON" position.
- Replace batteries if they are low.

## Backlight Not Working

- Check battery level and replace if necessary.
- Ensure the backlight button is being pressed correctly.

## SPECIFICATIONS

Feature	Detail
Model Number	22074
Brand	Eurotime
Movement Type	Silent Quartz
Alarm Type	Double Bell, Crescendo
Special Features	Snooze, Blue LED Backlight, Silent Second Hand
Material	Metal, Plastic
Color	Blue
Dimensions	12 x 7 x 17 cm (approx. 4.7 x 2.8 x 6.7 inches)
Weight	282 g (approx. 0.62 lbs)
Power Source	2 x 1.5V AA Alkaline Batteries (not included)

*Note: Specifications are subject to change without prior notice.*

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased this product or visit the official Eurotime website. Keep your proof of purchase for any warranty claims.

**Manufacturer:** Eurotime

**Product First Available:** July 29, 2019

© 2024 Eurotime. All rights reserved.