

Manuals.plus /

› Wansa /

› Wansa 32-inch HD LED TV (Model WLE32E7762) User Manual

Wansa WLE32E7762

Wansa 32-inch HD LED TV User Manual

Model: WLE32E7762

1. INTRODUCTION

Thank you for purchasing the Wansa 32-inch HD LED TV, Model WLE32E7762. This manual provides essential information for the safe and efficient operation of your television. Please read it thoroughly before using the product and retain it for future reference.

2. SAFETY INFORMATION

- **Power Supply:** Ensure the TV is connected to an AC 100-240V, 50/60Hz power source. Do not overload power outlets.
- **Ventilation:** Maintain adequate space around the TV for proper ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the TV to rain, moisture, or place objects filled with liquids on or near it.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Avoid liquid cleaners or aerosol sprays.
- **Placement:** Place the TV on a stable, level surface. Avoid direct sunlight, heat sources, and areas with excessive dust.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Wansa 32-inch HD LED TV
- Remote Control
- TV Stand (2 pieces)
- Batteries for Remote Control
- User Manual (this document)



Image 3.1: Front view of the Wansa 32-inch HD LED TV, showcasing the display, bezel, and included stand. The remote control is also typically included in the package.

4. SETUP

4.1 Unpacking

Carefully remove the TV and all accessories from the packaging. Retain the packaging materials for future transport or servicing.

4.2 Attaching the TV Stand

1. Place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand piece with the corresponding slots on the bottom of the TV.
3. Secure the stand pieces using the provided screws. Ensure they are firmly attached.



Image 4.1: Front view of the Wansa 32-inch HD LED TV with its two-piece stand securely attached, ready for placement on a flat surface.

4.3 Connecting External Devices

Your Wansa TV is equipped with multiple ports for connecting various devices:

- **HDMI Ports (x2):** Connect Blu-ray players, gaming consoles, set-top boxes, or other HDMI-enabled devices.
- **USB Ports (x2):** Connect USB storage devices for media playback.
- **Antenna/Cable Input:** Connect an antenna or cable TV signal.



Image 4.2: Rear view of the Wansa 32-inch HD LED TV, highlighting the location of the HDMI, USB, and other input/output ports for connecting external devices.

4.4 Power Connection

After connecting all desired external devices, plug the TV's power cord into a wall outlet. The TV will enter standby mode.

5. OPERATING THE TV

5.1 Initial Power On and Setup

Press the Power button on the remote control or on the TV itself. The first time you power on the TV, a setup wizard may guide you through language selection, channel scanning, and basic settings.

5.2 Remote Control Functions

The included remote control allows you to access all TV functions:

- **Power Button:** Turns the TV on or off (standby mode).
- **Volume Up/Down:** Adjusts the audio level.
- **Channel Up/Down:** Changes TV channels.
- **Input/Source:** Selects the input source (HDMI1, HDMI2, USB, TV).
- **Menu:** Accesses the main settings menu.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate through menus and confirm selections.

5.3 Selecting Input Source

Press the 'Input' or 'Source' button on your remote control. Use the navigation buttons to select the desired input (e.g., HDMI 1 for a gaming console, USB for a flash drive) and press 'OK'.

5.4 USB Media Playback

Insert a USB storage device into one of the TV's USB ports. Select the USB input source. The TV's media browser

will appear, allowing you to navigate and play supported video, audio, or image files.

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water (do not spray directly on the screen).
- **Casing:** Use a soft, dry cloth to wipe the TV casing. Avoid using abrasive cleaners or solvents.

6.2 Storage

If the TV will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

Before contacting customer support, try the following solutions for common issues:

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio settings in the menu.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna/cable connections. Adjust picture settings (brightness, contrast, sharpness) in the TV menu.

8. SPECIFICATIONS

Key technical specifications for the Wansa 32-inch HD LED TV (Model WLE32E7762):

- **Model Number:** WLE32E7762
- **Screen Size:** 32 Inches (82 cm visible diagonal)
- **Display Technology:** LED
- **Resolution:** 1366x768 (HD 720p)
- **Refresh Rate:** 60 Hz
- **Aspect Ratio:** 16:9
- **Connectivity:** 2 x HDMI, 2 x USB
- **Special Features:** Flat Screen
- **Included Components:** TV, Remote Control, Stand, Batteries
- **Manufacturer:** Wansa



Image 8.1: Side profile view of the Wansa 32-inch HD LED TV, illustrating its slim design.

9. WARRANTY AND SUPPORT

This Wansa TV comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. For technical support, service, or warranty claims, please contact your retailer or the authorized Wansa service center using the contact information provided at the time of purchase.