

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Educator](#) /

› [Educator FT-330 Finger Trainer Micro Educator E-Collar Instruction Manual](#)

Educator FT-330

Educator FT-330 Finger Trainer Micro Educator E-Collar Instruction Manual

Model: FT-330 | Brand: Educator

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Educator FT-330 Finger Trainer Micro Educator E-Collar system. The FT-330 is designed to assist in dog training through static, vibration, and sound stimulation, featuring a remote finger trainer for hands-free operation. Please read this manual thoroughly before operating the device to ensure safe and effective training.

2. PACKAGE CONTENTS

The Educator FT-330 system includes the following components:

- Remote Transmitter (Yellow)
- Receiver Collar (Black)
- Finger Trainer Wireless Button
- Dual Battery Charger
- Contact Points (5/8 inch and 3/4 inch sets)
- 3/4 inch x 30 inch Biothane Collar Strap
- PetsTEK Dog Training Clicker
- Lanyard for Remote Transmitter



Figure 2.1: An image displaying the complete Educator FT-330 kit, including the yellow remote transmitter, the black receiver collar, the finger trainer remote, a dual charger, contact points, and a PetsTEK training clicker, all laid out on a brown background.

3. SETUP

3.1 Charging the System

Before initial use, fully charge both the remote transmitter and the receiver collar. Use the provided dual charger to charge both units simultaneously. A full charge typically takes 2 hours or less and provides 24-48 hours of battery life, depending on usage.

3.2 Attaching Contact Points

Select the appropriate contact points (5/8 inch or 3/4 inch) based on your dog's fur thickness. Ensure the contact points make consistent skin contact for effective stimulation. Hand-tighten the contact points onto the receiver collar.

3.3 Fitting the Collar

The biothane collar strap is adjustable and cut-to-fit, suitable for dogs weighing 5 lbs and up. Place the

receiver collar on your dog's neck so that the contact points are positioned underneath the neck, making firm contact with the skin. The collar should be snug enough to prevent movement but not so tight as to cause discomfort. You should be able to fit two fingers comfortably between the strap and your dog's neck. Trim any excess strap length after proper fitting.

3.4 Pairing the Finger Trainer

The Finger Trainer Wireless Button is designed to replicate either the 'S' (Static) or 'T' (Tone/Vibration) button on the main transmitter. Refer to the specific instructions included with your Finger Trainer for initial pairing with the remote transmitter. Once paired, the finger trainer allows remote activation of the chosen stimulation type within a 12-foot range of the main transmitter.

4. OPERATION

4.1 Turning On/Off

- **Remote Transmitter:** Press and hold the power button until the display illuminates. To turn off, press and hold the power button until the display shuts off.
- **Receiver Collar:** Place the red dot on the remote transmitter against the red dot on the receiver collar until the indicator light flashes. Repeat to turn off.

4.2 Stimulation Modes

The FT-330 offers three primary stimulation modes:

- **Static Correction:** Provides a mild static pulse. The system offers 100 levels of static correction, including Momentary (brief pulse) and Continuous (pulse for as long as the button is held, up to 10 seconds). Boost levels from 1 to 60 can be applied for increased intensity.
- **Vibration:** Delivers a non-aversive vibration.
- **Sound (Tone):** Emits an audible tone.

4.3 Using the Remote Transmitter

The remote transmitter features an easy-to-read display and flush-mounted buttons for quick access to controls. The patented