

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Nowodvorski](#) /
- › [Nowodvorski THIKA 9120 Outdoor LED Wall Lamp Instruction Manual](#)

Nowodvorski THIKA 9120

Nowodvorski THIKA 9120 Outdoor LED Wall Lamp Instruction Manual

Model: THIKA 9120 | Brand: Nowodvorski

INTRODUCTION

Thank you for choosing the Nowodvorski THIKA 9120 Outdoor LED Wall Lamp. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lighting fixture. Please read these instructions carefully before installation and retain them for future reference.

SAFETY INFORMATION

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician in accordance with all local electrical codes.
- Ensure the mounting surface is structurally sound and can support the weight of the fixture.
- Do not connect this fixture to an ungrounded electrical system.
- This fixture is rated IP54, meaning it is protected against dust ingress and splashing water from any direction. It is suitable for outdoor use.
- Do not attempt to modify the fixture or its components.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Nowodvorski THIKA 9120 Outdoor LED Wall Lamp fixture
- Integrated LED lamp (1x9W)
- Mounting hardware (screws, wall anchors)
- Instruction Manual

SETUP AND INSTALLATION

Follow these steps for proper installation:

1. **Prepare the Installation Area:** Turn off power at the circuit breaker. Ensure the wall surface is clean,

dry, and flat.

2. **Mark Drilling Points:** Hold the mounting bracket against the wall at the desired installation location. Use a pencil to mark the positions for drilling holes.
3. **Drill Holes:** Drill holes at the marked positions. Insert appropriate wall anchors if necessary (e.g., for masonry walls).
4. **Mount the Bracket:** Secure the mounting bracket to the wall using the provided screws.
5. **Wire the Fixture:** Connect the electrical wires from the wall to the fixture's wires. Ensure correct polarity:
 - Connect the live (brown or black) wire from the wall to the live (L) terminal on the fixture.
 - Connect the neutral (blue) wire from the wall to the neutral (N) terminal on the fixture.
 - Connect the earth/ground (green/yellow) wire from the wall to the earth/ground terminal on the fixture.
6. **Attach the Fixture:** Carefully align the lamp fixture with the mounting bracket and secure it using the provided screws or fasteners. Ensure a tight seal against the wall to maintain the IP54 rating.
7. **Restore Power:** Once the fixture is securely mounted and wired, restore power at the circuit breaker.



Figure 1: Dimensional drawing of the THIKA 9120 wall lamp. The lamp extends approximately 25 cm from the wall and has a width of 18 cm.

OPERATING INSTRUCTIONS

The Nowodvorski THIKA 9120 wall lamp is designed for simple operation:

- Once installed and powered, the lamp can be controlled via a standard wall switch connected to its electrical circuit.
- Flip the switch to the 'ON' position to illuminate the lamp.
- Flip the switch to the 'OFF' position to turn off the lamp.

This fixture does not include integrated dimming capabilities or motion sensors unless connected to an external compatible system.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your lamp:

- Cleaning:** Disconnect power before cleaning. Use a soft, damp cloth to wipe the exterior of the fixture. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- Inspection:** Periodically inspect the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.
- LED Replacement:** The LED lamp is integrated and not user-replaceable. If the LED fails, the entire fixture may need to be replaced.

TROUBLESHOOTING

If your Nowodvorski THIKA 9120 lamp is not functioning correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Check the circuit breaker and wall switch. Ensure power is restored.
	Loose wiring connection.	Turn off power at the circuit breaker. Inspect wiring connections and tighten if loose. Consult an electrician if unsure.
	Faulty LED driver or integrated LED.	Contact customer support or a qualified electrician. The LED is not user-replaceable.
Light is dim or flickers.	Unstable power supply.	Consult an electrician to check the electrical circuit.
	Internal component issue.	Contact customer support.

If you are unable to resolve the issue after following these steps, please contact Nowodvorski customer support or a qualified electrician.

SPECIFICATIONS

Feature	Detail
Brand	Nowodvorski
Model	THIKA 9120
Type	Outdoor Wall Lamp
Material	Aluminum
Color	Black
Style	Modern
Shape	Square
Light Source	Integrated LED
Number of Lamps	1
Wattage	9 Watt
Voltage	230 Volt
Color Temperature	3000 Kelvin
IP Rating	IP54 (Dust protected, splash-proof)
Weight	2 Kilograms
Dimensions (approx.)	Width: 18 cm, Projection from wall: 25 cm
Power Source	Wired Electric
Country of Origin	China
First Available Date	January 15, 2020

WARRANTY INFORMATION

Nowodvorski products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the specific warranty terms provided at the time of purchase or visit the official Nowodvorski website for detailed information regarding warranty coverage, duration, and claims procedures. Keep your proof of purchase for warranty validation.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Nowodvorski customer support:

- **Website:** Visit the official Nowodvorski website for contact details, FAQs, and additional product information. You can often find support information on their Amazon store page: [Nowodvorski Amazon Store](#)

- **Email/Phone:** Refer to the contact information provided on the product packaging or the official website.

When contacting support, please have your product model (THIKA 9120) and ASIN (B07V2CMQ2R) ready.