

## Daewoo SYM-2806

# Daewoo SYM-2806 Hair Dryer Multi Set User Manual

Model: SYM-2806

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Improper use can cause hazards.

- Do not use this appliance near water, such as in bathtubs, washbasins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not use the appliance with wet hands.
- Keep the appliance away from heat sources and direct sunlight.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not block the air intake or outlet during operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

## 2. PRODUCT OVERVIEW

The Daewoo SYM-2806 Hair Dryer Multi Set is designed for versatile hair styling, offering a range of attachments for different looks.



Figure 2.1: The complete Daewoo SYM-2806 Hair Dryer Multi Set, showcasing the main unit and all included styling attachments.

## 2.1 Components

- Main Hair Dryer Unit
- Concentrator Nozzle
- Large Round Brush Attachment
- Small Round Brush Attachment
- Half-Brush Attachment
- Curling Iron Attachment
- Crimper Attachment



Figure 2.2: The main hair dryer unit, featuring controls for power and heat settings.



Figure 2.3: A selection of the included styling attachments, including various brushes, a curling iron, and a crimper.

## 2.2 Key Features

- **360° Swivel Cord:** Provides flexibility and prevents tangling during use.
- **180 cm Cord:** Offers ample reach for convenient styling.
- **Easy to Use:** Designed for straightforward attachment changes and operation.

## 3. SETUP

Before first use, ensure all packaging materials are removed. Connect the desired attachment to the main hair dryer unit.

1. Select the appropriate styling attachment for your desired hairstyle.
2. Align the attachment with the opening on the main hair dryer unit.
3. Gently push and twist the attachment until it clicks securely into place. Ensure it is firmly attached before use.
4. To remove an attachment, twist it gently in the opposite direction and pull it off.



Figure 3.1: The main unit and attachments, illustrating how they connect for various styling options.

## 4. OPERATING INSTRUCTIONS

Always ensure your hair is clean and towel-dried before styling. Plug the appliance into a suitable power outlet.

### 4.1 General Operation

1. After attaching the desired accessory, plug the appliance into a power socket.
2. Use the power switch (usually located on the handle) to turn the appliance ON.
3. Select the desired heat/speed setting. Start with a lower setting and increase if needed.
4. After styling, turn the appliance OFF and unplug it from the power socket.
5. Allow the appliance and attachments to cool down completely before storing.

4.2 Using Specific Attachments

- **Concentrator Nozzle:** Directs airflow for precise drying and styling. Use with a brush for smooth, straight styles.
- **Round Brush Attachments (Large/Small):** Ideal for adding volume, waves, or curls. Wrap sections of hair around the brush and dry.
- **Half-Brush Attachment:** Suitable for smoothing and straightening hair, or for creating soft waves.
- **Curling Iron Attachment:** For creating defined curls. Wrap a section of hair around the barrel, hold for a few seconds, then release.
- **Crimper Attachment:** For creating textured, crimped hair. Place a section of hair between the plates, press firmly, hold briefly, then release.

**Note:** Always use caution when handling heated attachments to avoid burns.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wipe the main unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. Remove any hair or debris from the brush attachments using a comb or brush cleaner.
4. Clean the air intake filter regularly to prevent overheating and maintain airflow. Gently remove any dust or lint.
5. Store the appliance and its attachments in a dry, safe place when not in use.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; appliance switch off.	Ensure appliance is securely plugged in. Test the outlet with another device. Turn the power switch to ON.
Low airflow or heat.	Air intake filter blocked; incorrect heat setting.	Clean the air intake filter. Select a higher heat/speed setting.
Attachments are difficult to connect/disconnect.	Incorrect alignment; debris in connection point.	Ensure proper alignment. Clean any debris from the connection points. Do not force attachments.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

**Model Number:** SYM-2806

**Brand:** Daewoo

**Dimensions (Package):** 35.4 x 31.8 x 7.4 cm

**Weight (Package):** 750 g

**Cord Length:** 180 cm

**Features:** 360° Swivel Cord

## 8. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in the product packaging or visit the official Daewoo website.

For technical support, troubleshooting assistance, or spare parts, please contact Daewoo customer service. Contact details can typically be found on the product packaging or the official brand website.

You can visit the Daewoo store on Amazon for more products and information:[Daewoo Store](#)