

[Manuals.plus](#) /

› [FoodVille](#) /

› FoodVille MF05 Rechargeable Milk Frother User Manual

FoodVille MF05

FoodVille MF05 Rechargeable Milk Frother User Manual

Model: MF05

INTRODUCTION

Thank you for choosing the FoodVille MF05 Rechargeable Milk Frother. This handheld foam maker is designed to create rich, creamy froth for a variety of beverages and mixes. This manual provides essential information for the safe and efficient use, maintenance, and care of your new frother.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Main Handle
- 1 x Frother Head (Balloon Whisk)
- 1 x Whisk Head (Egg Whisk)
- 1 x USB Charging Cable
- 1 x Metal Stand
- 16 x Latte Art Templates

16 Pcs Latte Art Templates

(Package Includes)

Take your Latte to the next Level!



Image: All components included in the FoodVille MF05 package.

PRODUCT FEATURES

- **Rechargeable Design:** Equipped with a USB Type-C port for convenient and quick charging. A full charge can last up to 1 month with everyday use.
- **Upgraded Connection:** The MF05 features enhanced materials and assembly to minimize damaged parts and reduce shaking during operation. A spare whisk head is included for future replacement.
- **Two Speed Levels:** Offers two distinct speed settings. Press the "ON" button for a low-speed mode, and press again to activate the powerful turbo mode for high-speed frothing, blending, mixing, and beating.
- **One-Button Operation:** Easily turn off the device by pressing the "OFF" button, eliminating the need to cycle through all speed modes. This design helps prevent liquid splashing and maintains a clean countertop.

POWERFUL HANDHELD MILK FROTHER



Image: Key features of the FoodVille MF05 frother, including the control buttons and whisk.

SETUP

1. Charging the Frother

Before first use, fully charge the frother. Connect the provided USB charging cable to the USB Type-C port located at the top of the frother handle and plug the other end into a compatible USB power source (e.g., wall adapter, computer USB port). The indicator light will show charging status.



Image: The FoodVille MF05 frother being charged via its USB-C port.

2. Attaching the Whisk Head

Select the desired whisk head (frother head or whisk head). Gently push the whisk head into the connector port at the bottom of the main handle until it clicks securely into place. Ensure it is firmly attached before use.

OPERATING INSTRUCTIONS

1. Frothing Milk or Mixing Beverages

1. Pour your desired liquid (milk, coffee, protein shake, etc.) into a cup or container. For best frothing results, use cold milk and ensure the container is not overfilled to prevent spills.
2. Immerse the whisk head into the liquid, ensuring it is fully submerged but not touching the bottom or sides of the container.
3. Press the "ON" button to start the frother at the low-speed setting.
4. For a more powerful mix or thicker froth, press the "ON" button again to switch to turbo mode.
5. Move the frother gently up and down or in a circular motion to achieve the desired consistency.
6. Once finished, press the "OFF" button to stop the frother. This prevents splashing and keeps your workspace clean.
7. Carefully remove the frother from the liquid.



Image: The FoodVille MF05 frother in action, creating rich, creamy froth.

2. Using Latte Art Templates

After frothing your beverage, place a latte art template over the cup. Sprinkle cocoa powder, cinnamon, or other toppings over the template to create decorative patterns on your foam.



Image: Demonstrating the use of latte art templates to decorate beverages.

MAINTENANCE

Cleaning

The FoodVille MF05 is designed for easy cleaning. The manufacturer recommends **Hand Wash Only** for the whisk heads. To clean:

1. Remove the whisk head from the main handle.
2. Rinse the whisk head under warm running water immediately after each use. You may use a mild soap if necessary.
3. Wipe the main handle with a damp cloth. **Do not submerge the main handle in water** as it contains electronic components.
4. Dry all parts thoroughly before storing.

Storage

Use the included metal stand to store your frother upright, keeping it easily accessible and preventing damage to the whisk head. Store in a dry place.



Image: The frother stored on its convenient metal stand.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery.	Charge the frother using the provided USB cable.

Problem	Possible Cause	Solution
Whisk head is loose or detaches during use.	Whisk head not properly attached.	Ensure the whisk head is pushed firmly into the main handle until it clicks.
Liquid splashes during operation.	Frother not fully submerged or container overfilled.	Ensure the whisk head is fully immersed in the liquid. Do not overfill the container. Use the "OFF" button to stop before removing.
Insufficient froth.	Type of milk or liquid, or frothing technique.	Use cold, fresh milk for best results. Experiment with different frothing techniques (e.g., moving up and down near the surface). Ensure the frother is on the appropriate speed setting.

SPECIFICATIONS

- **Brand:** FoodVille
- **Model Name:** MF05
- **Color:** White
- **Material:** Plastic, Stainless Steel
- **Product Dimensions:** 4.2"W x 9.1"H
- **Item Weight:** 1.76 ounces (50 Grams)
- **Power Source:** Battery Powered (1 Lithium Ion battery required)
- **Wattage:** 800 watts
- **Special Feature:** Cool-Touch Casing
- **Product Care Instructions:** Hand Wash Only
- **UPC:** 612590711374
- **ASIN:** B07V2ZGYJ1

WARRANTY AND SUPPORT

FoodVille offers a 2-year warranty for the MF05 Rechargeable Milk Frother. For warranty registration, product support, or any inquiries, please contact FoodVille customer service. Details for contacting customer service are typically provided in the product packaging or on the official FoodVille website.

Note: Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question