

Basic GC-7310P-2

Basic GC-7310P-2 3-Burner Gas Stove Instruction Manual

Model: GC-7310P-2

1. IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Ensure proper ventilation when operating the gas stove.
- Do not store flammable materials near the appliance.
- Keep children and pets away from the stove during operation.
- Always use appropriate cookware.
- Turn off all burners and the gas supply when not in use.
- If you smell gas, immediately turn off the gas supply, open windows, and do not operate any electrical switches. Contact a qualified technician.

2. PRODUCT OVERVIEW

The Basic GC-7310P-2 is a 3-burner gas stove designed for countertop use. It features a stainless steel construction for durability and ease of cleaning.



Figure 1: Front view of the Basic GC-7310P-2 3-burner gas stove, showing the three burners and control knobs.

Components:

- **Burners (3):** Gas outlets for cooking.
- **Pan Supports:** Removable grates to hold cookware.
- **Control Knobs (3):** Adjust flame intensity for each burner.
- **Gas Inlet:** Connection point for the gas supply hose.
- **Body:** Stainless steel housing.

3. SETUP AND INSTALLATION

Proper installation is crucial for safe operation. If you are unsure, consult a qualified technician.

1. **Unpacking:** Carefully remove the stove from its packaging. Inspect for any damage. Retain packaging for potential future transport.
2. **Placement:** Place the stove on a stable, level, and heat-resistant surface. Ensure adequate clearance from walls and flammable materials. The stove is designed for countertop installation.
3. **Gas Connection:**
 - Ensure the main gas supply valve is in the OFF position.
 - Connect a suitable gas hose (not included) to the gas inlet on the back of the stove and to your gas supply regulator.
 - Use appropriate gas-rated sealant tape on threaded connections to prevent leaks.
 - Tighten all connections securely, but do not overtighten.
 - Perform a leak test using soapy water on all connections. Bubbles indicate a leak. If a leak is detected, tighten the connection or replace the hose/sealant. Do not use an open flame for leak detection.
4. **Pan Support Placement:** Place the pan supports securely over the burners.

4. OPERATING INSTRUCTIONS

4.1 Before First Use:

Wipe down the stove surface and pan supports with a damp cloth to remove any manufacturing residues.

4.2 Lighting a Burner:

1. Ensure the gas supply valve is open.
2. Place your cookware on the pan support over the desired burner.
3. Push in and turn the corresponding control knob counter-clockwise to the "HIGH" position. You should hear the igniter clicking.
4. Once the flame ignites, release the knob. If the flame does not ignite within 5 seconds, turn the knob to "OFF", wait for a minute, and try again.
5. Adjust the flame intensity by turning the knob between "HIGH" and "LOW" settings.

4.3 Turning Off a Burner:

Turn the control knob clockwise until it clicks into the "OFF" position. Ensure the flame is extinguished.

4.4 General Cooking Tips:

- Use cookware appropriate for the burner size.
- Do not leave cooking unattended.
- Ensure proper ventilation in the cooking area.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your gas stove.

5.1 Daily Cleaning:

- Allow the stove to cool completely before cleaning.
- Remove pan supports and wash them with warm, soapy water.
- Wipe the stainless steel surface with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, which can scratch the surface.
- Clean burner caps and rings if they are soiled. Ensure they are dry before reassembling.
- Dry all parts thoroughly before reassembly.

5.2 Burner Maintenance:

Periodically check burner ports for blockages. Use a small wire or needle to clear any debris. Ensure burner caps are correctly seated after cleaning.

5.3 Gas Hose Inspection:

Regularly inspect the gas hose for cracks, kinks, or signs of wear. Replace immediately if any damage is found.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Burner does not ignite.	No gas supply; igniter not sparking; burner ports blocked; burner cap incorrectly placed.	Check gas supply valve; ensure igniter is clicking; clean burner ports; reposition burner cap.
Flame is weak or uneven.	Low gas pressure; burner ports blocked; burner cap incorrectly placed.	Check gas regulator; clean burner ports; reposition burner cap.
Gas smell detected.	Gas leak.	Immediately turn off gas supply, ventilate area, and contact a qualified technician. Do not operate any electrical switches.

If the problem persists after attempting these solutions, contact customer support or a qualified service technician.

7. SPECIFICATIONS

- **Brand:** Basic
- **Model Number:** GC-7310P-2
- **Type:** Table Gas Stove
- **Fuel Type:** Gas
- **Number of Burners:** 3
- **Material:** Stainless Steel
- **Color:** Silver
- **Product Dimensions (D x W x H):** 37 cm x 61 cm x 37 cm
- **Installation Method:** Countertop
- **Ignition System Type:** Gas Pilot

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Basic customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Basic

Date First Available: 9 July 2019

Related Documents - GC-7310P-2



[HWW 650 Hauswasserwerk User Manual | BASIC](#)

Comprehensive user manual for the BASIC HWW 650 Hauswasserwerk, covering operation, safety, technical specifications, maintenance, and troubleshooting.

