

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bissell](#) /
- › [Bissell PowerFresh Vac & Steam All-in-One Vacuum and Steam Mop User Manual](#)

Bissell 2747A

Bissell PowerFresh Vac & Steam All-in-One Vacuum and Steam Mop

Model: 2747A | Brand: Bissell

INTRODUCTION

The Bissell PowerFresh Vac & Steam All-in-One Vacuum and Steam Mop is designed to simplify your floor cleaning routine by combining vacuuming and steam cleaning into a single, efficient step. This appliance utilizes the natural power of steam to sanitize hard floors, eliminating 99.9% of germs and bacteria. Its versatile design allows for simultaneous vacuuming and steaming, or independent operation of each function, providing flexibility for various cleaning needs.





This image shows the Bissell PowerFresh Vac & Steam All-in-One Vacuum and Steam Mop in its upright position, showcasing its sleek design with white, green, and dark grey accents. The vacuum's dustbin is visible, and the steam mop head is at the base.

INCLUDED COMPONENTS


Your Bissell PowerFresh Vac & Steam includes the following items:

- Bissell PowerFresh Vac & Steam Unit
- 1 Microfiber Soft Pad
- 1 Microfiber Scrubby Pad
- Detachable Mop Pad Tray

Includes



**MICROFIBER
SOFT PAD**

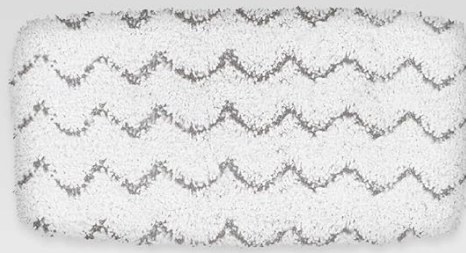

**MICROFIBER
SCRUBBY PAD**



DETACHABLE MOP PAD TRAY

This image displays the included accessories: one microfiber soft pad, one microfiber scrubby pad, and a detachable mop pad tray, essential for the steam cleaning function.

SETUP GUIDE

Assembly

The Bissell PowerFresh Vac & Steam requires minimal assembly. Ensure all components are present before beginning.

1. Insert the handle into the main body of the unit until it clicks securely into place.
2. Attach the desired mop pad (soft or scrubby) to the detachable mop pad tray. The pads are designed to easily adhere to the tray.
3. Attach the mop pad tray to the base of the unit.

Filling the Water Tank

The water tank is located on the back of the unit. Use distilled water for optimal performance and to prevent mineral buildup.

1. Locate the water tank cap on the back of the unit.
2. Open the cap and fill the tank with distilled water up to the 'Max Fill' line.
3. Securely close the water tank cap.



Kills 99.9% of germs, bacteria & viruses¹

Tested & proven to kill 99.9% of
Coronavirus & Influenza viruses¹

This image shows the fully assembled Bissell PowerFresh Vac & Steam unit, ready for use. It highlights the main body, handle, and the mop head with a pad attached.

OPERATING INSTRUCTIONS

Powering On and Digital Controls

Plug the power cord into a suitable electrical outlet. The unit features Easy Touch Digital Controls on the handle for seamless switching between functions.

- **Vacuum Mode:** Press the vacuum icon button to activate the vacuum function. The vacuum provides powerful cyclonic suction to capture dirt and debris.
- **Steam Mode (Low/High):** Select either the low steam or high steam icon button. Press and hold the steam trigger on the handle to release steam. Release the trigger to stop steaming.

- **Simultaneous Vacuum & Steam:** You can operate both the vacuum and steam functions concurrently for a comprehensive cleaning experience.

Digital Touch Control

Easily Switch Between Vacuum, Steam, or Both



This image provides a close-up of the digital touch controls on the handle, illustrating the icons for vacuum, low steam, and high steam settings.

MAINTENANCE

Emptying the Dry Tank

The dry tank technology ensures debris remains dry even while steaming. Empty the tank regularly to maintain optimal vacuum performance.

1. Ensure the unit is unplugged and cooled down.
2. Detach the dry tank from the main unit.
3. Open the tank and dispose of collected debris.
4. Clean the filter as needed.
5. Reattach the dry tank securely.

Safe to Use on Sealed Surfaces



This image highlights the dry tank technology, showing the transparent dustbin filled with dry debris, demonstrating how it keeps vacuumed particles separate from the steam.

Cleaning Mop Pads

The microfiber mop pads are reusable and washable.

- Remove the mop pad from the tray after use.
- Machine wash the pads with warm water. Do not use bleach or fabric softeners.
- Tumble dry low or air dry.

General Care

Wipe the exterior of the unit with a damp cloth as needed. Store the unit in a dry place.

TROUBLESHOOTING

If you encounter issues with your Bissell PowerFresh Vac & Steam, refer to the following common solutions:

Problem	Possible Cause	Solution
No Steam Output	Water tank empty; Unit not heated; Steam trigger not held.	Refill water tank; Allow 30 seconds for heating; Press and hold steam trigger.
Reduced Vacuum Suction	Dry tank full; Filter clogged; Hose/nozzle blockage.	Empty dry tank; Clean or replace filter; Check for and clear blockages.
Streaking on Floor	Mop pad dirty; Too much steam.	Replace or clean mop pad; Use low steam setting.
Unit Not Powering On	Not plugged in; Power outlet issue.	Ensure unit is securely plugged in; Test outlet with another device.

SPECIFICATIONS

Feature	Detail
Brand	Bissell
Special Feature	Detachable
Surface Recommendation	Floor
Wattage	1400 watts
Item Weight	13.62 pounds (6.19 Kilograms)
Tank Volume	0.4 Liters
Form Factor	Upright
Heat Time	30 seconds
Color	2747a
Power Source	Corded Electric
Voltage	110 Volts
Capacity	0.4 Liters
Product Dimensions	9"D x 11"W x 46.5"H
UPC	011120252323
Global Trade Identification Number	00011120252323
Manufacturer	Bissell
ASIN	B07V39K883
Country of Origin	China
Item model number	2747A

WARRANTY & SUPPORT

Warranty Information

The Bissell PowerFresh Vac & Steam All-in-One Vacuum and Steam Mop comes with a manufacturer's warranty. For specific details regarding coverage and duration, please refer to the official product documentation or contact Bissell customer support.

Customer Support

For further assistance, troubleshooting, or to purchase replacement parts and accessories, please visit the [Bissell Store on Amazon](#) or consult the official [User Guide \(PDF\)](#).

