

[Manuals.plus](#) /

› [INTERNOVA](#) /

› Internova 1500 Lumen LED Camping Lantern Instruction Manual

## INTERNOVA INT-MNST-BLACK

# Internova 1500 Lumen LED Camping Lantern Instruction Manual

Model: INT-MNST-BLACK

## INTRODUCTION

Thank you for choosing the Internova 1500 Lumen LED Camping Lantern. This manual provides essential information for the safe and efficient operation of your lantern. Please read it thoroughly before use and retain it for future reference.

## PRODUCT FEATURES

- **High Brightness:** Up to 1500 Lumens output for extensive illumination.
- **Long Battery Life:** Operates for up to 31 hours on a single set of batteries (at 270 lumens).
- **Multiple Lighting Modes:** Includes Low, Medium, High, Maximum, Red, and Flashing Red for various situations.
- **Durable Design:** Water-resistant construction with a rubber and plastic molded base.
- **Convenient Handling:** Features a sturdy retractable handle and a built-in S-hook for versatile hanging options.
- **Tri-Strip LED Lighting:** Provides 360-degree illumination.

## SAFETY INFORMATION

- Do not look directly into the LED light when operating at high brightness to avoid eye strain.
- Ensure batteries are inserted with correct polarity.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the lantern will not be used for an extended period.
- Keep out of reach of children.
- The lantern is water-resistant, not waterproof. Do not submerge in water.

## SETUP

### Battery Installation

1. **Remove Base Cap:** Locate the rubberized base cap on the bottom of the lantern. Rotate it counter-clockwise and pull it off to access the battery compartment.
2. **Insert Batteries:** Insert four (4) D-size batteries (not included). Ensure the positive (+) and negative (-) ends are aligned correctly as indicated inside the compartment.
3. **Replace Base Cap:** Align the guide posts on the base cap with the corresponding slots on the battery compartment. Slide the posts into the slots, then twist the base cap clockwise while pushing down to lock it securely into place.



*Image: Battery compartment with four D-size batteries installed. The base cap is shown next to the lantern.*



*Image: A hand twisting the base cap clockwise to secure it onto the lantern.*

## Initial Check

After battery installation, press the power button once to ensure the lantern illuminates. If it does not, recheck battery polarity and ensure the base cap is securely fastened.

## OPERATING INSTRUCTIONS

### Power Button Functions

The Internova 1500 Lantern features a single power button for all operations:

- **Turn On:** Press the power button once. The lantern will turn on in Low mode.
- **Cycle Modes:** While the lantern is on, press the power button repeatedly to cycle through the available lighting modes: Low → Medium → High → Maximum → Red → Flashing Red.

- **Turn Off (Method 1):** After cycling through all modes (Flashing Red), press the power button one more time to turn the lantern off.
- **Turn Off (Method 2 - Quick Off):** At any brightness setting, press and hold the power button for approximately 2 seconds to turn the lantern off directly.

Your browser does not support the video tag.

Video: Official operating instructions for the Internova 1500 Monster Camping Lantern, demonstrating battery installation and mode cycling.

## Hanging and Placement

- Use the sturdy retractable handle for carrying or hanging the lantern from branches, tent loops, or other suitable fixtures.
- A built-in S-hook on the base allows for inverted hanging, ideal for directing light downwards, such as when working under a car hood or hanging from a tent ceiling.



Image: The lantern highlighting its easy-to-hang features, including the top handle and the S-hook on the base.

## MAINTENANCE

- **Cleaning:** Wipe the lantern with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace all four D-size batteries simultaneously when the light dims significantly.
- **Storage:** Store the lantern in a cool, dry place. Remove batteries if storing for extended periods to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Dead or incorrectly inserted batteries. Loose battery cap.	Replace batteries with new D-size batteries, ensuring correct polarity. Ensure the base cap is securely twisted and locked into place.
Light is dim or flickers.	Low battery power.	Replace all four D-size batteries.

## SPECIFICATIONS

Feature	Detail
Model	INT-MNST-BLACK
Brightness	Up to 1500 Lumens (Black model)
Battery Type	4 x D-size batteries (not included)
Battery Life	Up to 31 hours (at 270 lumens)
Light Source	Tri-Strip LED
Dimensions	4.25 x 4.25 x 8.5 inches
Weight	1.5 Pounds (without batteries)
Water Resistance	Water Resistant (Do not submerge)
Special Features	Adjustable Brightness, Built-in S-hook, Retractable Handle, Red Light Mode, Flashing Red Mode

## WARRANTY AND SUPPORT

For any questions or concerns regarding your Internova 1500 Lumen LED Camping Lantern, please contact Internova customer support. Our team is located just outside of St. Louis, Missouri, USA, and is ready to assist you.

Refer to the product packaging or the official Internova website for the most current warranty information and contact details.

