

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JVC](#) /

› [JVC 32 Inch LED Standard TV LT-32N355 Instruction Manual](#)

JVC LT-32N355

JVC 32 Inch LED Standard TV Instruction Manual

Model: LT-32N355

IMPORTANT SAFETY INSTRUCTIONS

Please read all safety and operating instructions carefully before using this television. Keep these instructions for future reference.

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Verify that all items are included in the package:

- JVC 32 Inch LED Standard TV (Model LT-32N355)
- Remote Control
- TV Stand (Base and Screws)
- Power Cord
- Instruction Manual (This document)

SETUP

1. Attaching the TV Stand

1. Carefully place the TV screen-down on a soft, clean surface to prevent damage.
2. Align the stand base with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure the stand is firmly attached.



Image: Front view of the JVC 32 Inch LED Standard TV (Model LT-32N355) with its stand attached, displaying a scenic landscape.

2. Connecting External Devices

The TV features various input ports for connecting external devices. Refer to the rear view image for port locations.



Image: Rear view of the JVC 32 Inch LED Standard TV, highlighting the various input and output ports for connectivity.

- **HDMI:** Connect Blu-ray players, game consoles, or set-top boxes.
- **USB:** For media playback from USB storage devices.
- **AV (RCA):** Connect older devices like VCRs or DVD players using composite video and stereo audio cables.
- **Antenna/Cable:** Connect an antenna or cable TV feed for broadcast channels.

3. Power Connection

After connecting all desired devices, plug the power cord into the TV's power input and then into a wall outlet.

OPERATING THE TV

1. Remote Control Functions

The included remote control allows full operation of the TV. Insert two AAA batteries (not included) into the remote control, observing polarity.

- **Power Button:** Turns the TV on or off.
- **Input/Source:** Selects the input source (HDMI, AV, USB, TV).
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes TV channels.
- **Menu:** Accesses the main menu for settings adjustments.
- **Navigation Buttons (Up/Down/Left/Right):** Navigates through menu options.
- **OK/Enter:** Confirms selections.
- **Exit/Back:** Exits menus or returns to the previous screen.

2. Initial Setup and Channel Scan

1. Press the Power button on the remote control to turn on the TV.
2. The first time you turn on the TV, an initial setup wizard may appear. Follow the on-screen prompts to select language, country, and perform a channel scan.
3. If the wizard does not appear, press the **Menu** button, navigate to **Channel** or **Setup**, and select **Auto Scan** or **Auto Tuning** to find available channels.

3. Adjusting Settings

Press the **Menu** button to access various settings:

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and picture mode (Standard, Dynamic, Movie, etc.).
- **Sound Settings:** Adjust bass, treble, balance, and sound mode (Standard, Music, Movie, etc.).
- **Time Settings:** Set current time, sleep timer, and auto standby.
- **System Settings:** General settings like OSD language, factory reset, and software update (if applicable).

MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of water or a specialized screen cleaner. Do not spray liquid directly onto the screen.
- **Cleaning the Cabinet:** Use a soft, dry cloth to wipe the TV cabinet. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, replace it with a suitable cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Wall outlet not active; Remote control batteries depleted.	Ensure power cord is securely plugged in. Test the wall outlet with another device. Replace remote control batteries.
No picture, but sound is present	Incorrect input source selected; Loose video cable connection.	Press the Input/Source button on the remote to select the correct input. Check video cable connections (HDMI, AV).

Problem	Possible Cause	Solution
No sound, but picture is present	Volume is muted or too low; Audio cable loose; External audio system connected.	Press the Mute button or increase volume. Check audio cable connections. If using an external audio system, ensure it is powered on and correctly configured.
Remote control not working	Batteries depleted or incorrectly inserted; Obstruction between remote and TV sensor.	Replace batteries, ensuring correct polarity. Remove any obstructions. Ensure remote is pointed at the TV's remote sensor.
Poor picture quality (fuzzy, distorted)	Weak antenna signal; Incorrect picture settings; Faulty cable.	Adjust antenna position or check cable connection. Reset picture settings to default. Try a different cable if connecting an external device.

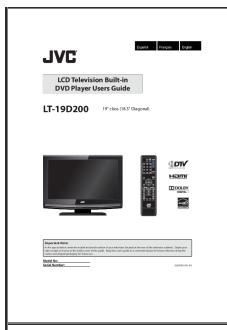
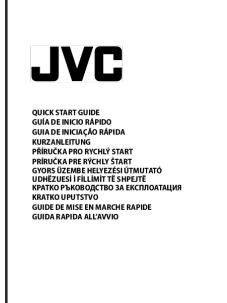
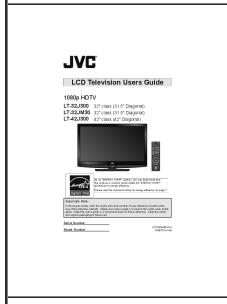
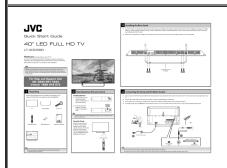
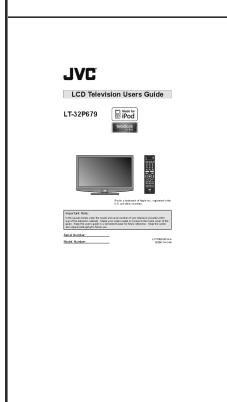
SPECIFICATIONS

Feature	Detail
Brand	JVC
Model Number	LT-32N355
Screen Size	32 Inch
Display Type	LED
HD Type	Full HD
Display Resolution	1920x1080
Aspect Ratio	16:9
Included Components	Remote Control, Stand, TV
Mounting Type	Table Mount
Audio Input	RCA

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official JVC website. Keep your purchase receipt as proof of purchase for warranty claims.

Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

	<p>JVC LT-19D200 LCD Television Built-in DVD Player User Guide</p> <p>This user guide provides comprehensive information for the JVC LT-19D200 LCD Television with built-in DVD player, covering setup, features, operation, and troubleshooting for an optimal home entertainment experience.</p>
	<p>JVC Quick Start Guide: Setup and Operation</p> <p>Get started with your new JVC television. This quick start guide provides essential setup instructions, connection details, and safety information for your JVC TV.</p>
	<p>JVC LCD Television Users Guide: LT-32J300, LT-32JM30, LT-42J300</p> <p>User guide for JVC 1080p HDTV LCD televisions, models LT-32J300, LT-32JM30, and LT-42J300. Covers setup, safety, operation, features, and troubleshooting.</p>
	<p>JVC LT-42DS9BU LCD TV Manuel d'instructions</p> <p>Ce manuel d'instructions JVC LT-42DS9BU fournit des informations complètes sur l'installation, l'utilisation, les fonctionnalités, le dépannage et les spécifications techniques de votre téléviseur LCD.</p>
	<p>JVC LT-40C590 40-inch LED Full HD TV Quick Start Guide</p> <p>A concise guide for setting up your JVC LT-40C590 40-inch LED Full HD TV, covering unpacking, remote control operation, base stand installation, and initial TV setup procedures.</p>
	<p>JVC LT-32P679 LCD Television User Guide</p> <p>A comprehensive user guide for the JVC LT-32P679 LCD Television, covering setup, remote control, picture and sound settings, iPod integration, device connectivity, and troubleshooting.</p>