

Manuals.plus /

› Panasonic /

› Panasonic Cordless Phone User Manual

## Panasonic KX-TGC413UEB

# Panasonic Cordless Phone User Manual

Model: KX-TGC413UEB

## PRODUCT OVERVIEW

---

The Panasonic KX-TGC413UEB is an affordable cordless phone system designed for ease of use and stylish integration into your home or office. This system includes three handsets, offering flexibility and convenience for multiple users or rooms.

Key features include:

- Cordless phone functionality for freedom of movement.
- A shared phonebook with capacity for 50 entries, accessible from all handsets.
- Extended talk time of up to 18 hours and standby time of 200 hours.
- Integrated speakerphone for hands-free conversations.
- Three included handsets for multi-room coverage.



Image: The Panasonic KX-TGC413UEB cordless phone system, showing three handsets and the main base unit.

## SETUP GUIDE

### 1. Unpacking and Component Check

Before you begin, ensure all components are present:

- Main Base Unit
- Three Handsets
- Three Chargers (for additional handsets)
- Power Adapters for Base Unit and Chargers
- Telephone Line Cord
- Six AAA Rechargeable Batteries (two per handset)

### 2. Battery Installation and Charging

1. Open the battery compartment cover on the back of each handset.
2. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover.
4. Place each handset on its respective charger (main base unit or auxiliary charger). Ensure the charging indicator lights up.
5. Allow the handsets to charge for at least 7 hours before initial use to ensure full battery capacity.

### 3. Connecting the Base Unit

1. Connect one end of the telephone line cord to the LINE jack on the main base unit.
2. Connect the other end of the telephone line cord to your telephone wall jack.

3. Connect the power adapter to the DC IN jack on the main base unit.
4. Plug the power adapter into a standard electrical outlet.
5. For additional chargers, connect their power adapters to electrical outlets.



## Stylish, Compact Base Unit

وحدة قاعدة أنيقة وصغيرة الحجم

Image: The stylish and compact base unit of the Panasonic cordless phone.

## OPERATING INSTRUCTIONS

### Making and Receiving Calls

- **To Make a Call:** Pick up a handset, dial the number, and press the **TALK** button.
- **To Receive a Call:** When the phone rings, press the **TALK** button on any handset.
- **To End a Call:** Press the **OFF** button or place the handset back on the charger.

### Using the Speakerphone

The speakerphone function allows for hands-free communication, useful for multitasking or group conversations.

1. During a call, press the **SPEAKERPHONE** button (often indicated by a speaker icon).
2. To switch back to handset mode, press the **SPEAKERPHONE** button again.

# Speakerphone مكبر الصوت

## Do something else while talking

You can talk with your hands free. It's convenient when you need to take notes, etc. Also everyone around you can join the conversation.



Image: An illustration demonstrating the convenience of the speakerphone feature, allowing users to talk hands-free.

## Shared Phonebook

The system features a shared phonebook, allowing all registered handsets to access the same contact list of up to 50 entries.

- **Adding an Entry:** Navigate to the phonebook menu on any handset, select "Add New Entry," and follow the on-screen prompts to enter the name and number.
- **Dialing from Phonebook:** Press the **PHONEBOOK** button, scroll to the desired entry, and press **TALK**.

# Shared Phonebook دليل هاتف مشترك

## Reduce phonebook entry work

Any number added on one handset will automatically go to the base unit and can be shared with every handset registered to the base unit.



Image: Two individuals using handsets, demonstrating how the shared phonebook simplifies contact management across multiple devices.

## Nuisance Call Block

This feature helps reduce unwanted calls, such as those from telemarketers. It requires a subscription to Caller ID service from your provider.

- **Blocking a Number:** During or after a call, access the call block menu, and add the unwanted number to the block list. You can block specific numbers or number ranges (2 to 8 digits).
- Note: Calls with "no number provided" may not be blockable depending on your service provider.

# Nuisance Call Block\*1 حظر المكالمات المزعجة

## Reduce unwanted calls such as telemarketers

You can block any specified number, as well as any head string of 2 to 8 digits matching your specified numbers or “no number is provided” calls\*2.



\*1 Requires subscription to Caller ID service offered by your provider / telephone company.

\*2 No number calls cannot be blocked depending on the service of your provider / telephone company.

Image: An illustration showing how the nuisance call block feature can prevent unwanted calls from reaching your phone.

## One-Touch Eco Mode

Activate Eco Mode to reduce power consumption and signal output when the handset is close to the base unit.

- Press the **ECO** button on the handset to activate or deactivate this mode. An "ECO" indicator will appear on the display when active.

## On Touch Eco Mode

وضع Eco بلمسة واحدة



Image: A close-up of the Panasonic cordless phone handset, highlighting the "R ECO" button for activating the one-touch Eco Mode.

### Power Back-Up Operation

In the event of a power outage, the handset can temporarily draw power from the base unit's charged batteries to allow for limited phone use.

- Place a charged handset on the base unit during a power failure to enable temporary speakerphone operation.

# Power Back-Up Operation تشغيل بالطاقة الاحتياطية

There for you in a power failure

By placing the handset on the base unit, you can use the speaker phone temporarily even during a power failure.



Image: An illustration depicting the power back-up operation, where the phone can still be used during a power outage by placing the handset on the base unit.

## MAINTENANCE

- **Cleaning:** Wipe the phone and base unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only the specified rechargeable AAA batteries. If the phone will not be used for an extended period, remove the batteries from the handsets.
- **Placement:** Avoid placing the phone in direct sunlight, near heat sources, or in areas with high humidity. Keep it away from other electrical appliances to prevent interference.

## TROUBLESHOOTING

Problem	Solution
No dial tone.	<p>Ensure the telephone line cord is securely connected to the base unit and the wall jack.</p> <p>Check if the power adapter is properly connected to the base unit and the electrical outlet.</p> <p>Verify that the handset batteries are charged.</p>
Handset not charging.	<p>Ensure the handset is correctly seated in the charger cradle.</p> <p>Check the power connection to the charger.</p> <p>Clean the charging contacts on both the handset and charger with a dry cloth.</p>
Poor sound quality or static.	<p>Move closer to the base unit.</p> <p>Avoid placing the base unit near other electronic devices (e.g., microwaves, Wi-Fi routers) that may cause interference.</p> <p>Check the telephone line cord for damage.</p>
Cannot make or receive calls during a power outage.	<p>Ensure a charged handset is placed on the main base unit for power back-up operation. Note that only speakerphone functionality may be available during power outages.</p>

## SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Number	KX-TGC413UEB
Phone Type	Cordless
Color	Black
Number of Handsets	3
Power Source	Battery Powered
Batteries Required	6 AAA (Included)
Talk Time	Up to 18 hours
Standby Time	Up to 200 hours
Phonebook Capacity	50 entries (Shared)
Answering System Type	Digital
Item Dimensions (LxWxH)	11 x 11 x 11 cm
Item Weight	1.2 Kilograms
Material	Electronic components

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Panasonic website for your region. Keep your purchase receipt as proof of purchase for warranty claims.

You can also visit the Panasonic Brand Store on Amazon for additional product information and support resources.