

Midea WQP15J7631AS

Midea Dishwasher WQP15J7631AS User Manual

Model: WQP15J7631AS

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Midea WQP15J7631AS Freestanding Dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

Your Midea dishwasher is designed to provide excellent cleaning performance for your dishes, offering convenience and efficiency in your kitchen. It features 15 place settings and 8 wash programs to suit various needs.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Always disconnect the appliance from the power supply before cleaning or maintenance.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified technician.

Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your retailer immediately.

Placement

Place the dishwasher on a firm, level surface. Ensure it is positioned near a water supply, drain, and a grounded

electrical outlet. Leave adequate space around the appliance for ventilation and door opening.



Figure 1: Front view of the Midea WQP15J7631AS Freestanding Dishwasher. This image illustrates the overall design and silver finish of the appliance, which is important for planning its placement in your kitchen.

Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is secure to prevent leaks. The drain hose should be connected to a suitable drain pipe or sink trap, ensuring it is not kinked or obstructed.

Electrical Connection

The dishwasher operates on 220/240V, 60Hz. Connect the power cord to a dedicated, grounded electrical outlet. Do not use extension cords or adapters.

Initial Use

Before the first wash cycle, it is recommended to fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. Refer to the "Operating" section for detailed instructions on adding these consumables.

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel is located on the top edge of the dishwasher door. It features an LED display and push-button controls for program selection, start/pause, and other functions.

(Note: Specific button layouts and display indicators may vary slightly. Refer to the diagram in your physical manual for exact details.)

Loading the Dishwasher

Proper loading ensures optimal cleaning results. Scrape off large food particles before loading. Place larger items in the lower basket and smaller, delicate items in the upper basket. Ensure spray arms can rotate freely.

- Lower Basket:** Ideal for plates, bowls, pots, and pans.
- Upper Basket:** Suitable for glasses, cups, and small plates.
- Cutlery Basket:** Place forks, spoons, and knives with handles down (knives with sharp points down for safety).

Adding Detergent, Rinse Aid, and Salt

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser cover firmly. Check the rinse aid indicator and refill if necessary. For areas with hard water, regularly check and refill the salt dispenser.

Program Selection

Your dishwasher offers 8 wash programs. Select the appropriate program based on the type and soil level of your dishes.

Table 1: Wash Programs Overview

Program	Description	Typical Use
Intensive	For heavily soiled dishes and pots.	Pots, pans, dishes with dried-on food.
Normal	Standard daily wash for normally soiled dishes.	Everyday dishes, glasses, bowls.
Eco	Energy and water efficient program for normally soiled dishes.	Everyday dishes, energy saving.

Program	Description	Typical Use
Glass	Gentle program for delicate items.	Delicate glassware, crystal.
90 min	Quick wash for lightly soiled dishes.	Lightly soiled dishes, quick turnaround.
Rapid	Very short wash for lightly soiled dishes without drying.	Rinsing dishes before a full wash, very light soil.
Pre-wash	Rinses dishes to prevent food from drying on.	Pre-rinsing, especially if not washing immediately.
Half Load	For smaller loads, saving water and energy.	When the dishwasher is not full.

Starting a Wash Cycle

Close the dishwasher door firmly. Select your desired program using the program selection button. Press the Start/Pause button to begin the cycle. The display will show the remaining time.

Interrupting/Cancelling a Cycle

To interrupt a cycle, open the door slightly. The dishwasher will pause. To resume, close the door. To cancel a cycle, press and hold the Start/Pause button for a few seconds until the program resets. Be cautious when opening the door during a cycle as hot steam may escape.

End of Cycle

At the end of the cycle, the dishwasher will beep and the display will indicate completion. Open the door slightly to allow steam to escape and dishes to cool before unloading. Unload the lower basket first to prevent water from dripping onto dry dishes.

MAINTENANCE AND CLEANING

Regular maintenance ensures the efficient operation and extends the lifespan of your dishwasher.

Cleaning the Filters

The filter system prevents larger food particles from entering the pump. Clean the filters regularly (at least once a week) to ensure optimal cleaning performance.

1. Twist the cylindrical filter counter-clockwise and lift it out.
2. Remove the fine filter from the bottom of the wash tub.
3. Rinse all filter components under running water to remove food particles. Use a soft brush if necessary.
4. Reassemble the filters in reverse order, ensuring they are securely in place.

Cleaning the Spray Arms

Check the spray arm nozzles for blockages (e.g., from food particles). If blocked, remove the spray arms and clean the nozzles with a thin object like a toothpick. Rinse thoroughly and reattach.

Cleaning the Interior and Exterior

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run a dishwasher cleaner or a

cycle with white vinegar to remove grease and limescale buildup.

Descaling

In hard water areas, limescale can build up. Use a dishwasher descaler as per the product instructions, or run an empty cycle with a cup of white vinegar placed in the lower basket.

Winterizing (for non-use periods)

If the dishwasher will be out of use for an extended period or in an unheated location during winter, drain all water from the appliance to prevent freezing damage. Disconnect water and power supplies.

TROUBLESHOOTING

Before contacting service, please check the following common issues and their solutions:

Table 2: Common Troubleshooting Guide

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown/circuit breaker tripped.	Ensure power cord is securely plugged in; Close door firmly until it latches; Check household fuse/circuit breaker.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program selected; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Add more detergent; Select appropriate program; Clean filters.
Water not draining	Clogged drain hose; Clogged filters; Drain pump malfunction.	Check and clear drain hose for kinks or blockages; Clean filters; If problem persists, contact service.
Dishwasher leaks	Loose hose connections; Too much detergent/foaming; Door seal damaged.	Check and tighten hose connections; Use correct amount of detergent; Inspect and clean door seal, replace if damaged.
Cloudy glassware	Too much or too little detergent; Insufficient rinse aid; Hard water.	Adjust detergent amount; Refill rinse aid dispenser; Use dishwasher salt and adjust water softener setting if available.

If the problem persists after attempting these solutions, please contact authorized service personnel.

SPECIFICATIONS

Detailed technical specifications for the Midea WQP15J7631AS Dishwasher:

Feature	Detail
Model Name	WQP15J7631AS
Brand	Midea

Feature	Detail
Type	Freestanding Dishwasher
Color	Silver
Material Type	Mixed Materials
Voltage	240 Volts
Frequency	60 Hz
Cycle Options	8 Programs
Place Settings	15
Display Type	LED
Product Dimensions (DxWxH)	66 x 87 x 64 cm
Item Weight	51 Kilograms
Special Feature	Smart
Control Type	Push Button
Handle Type	Recessed

WARRANTY AND SUPPORT

Your Midea WQP15J7631AS Dishwasher comes with a **two-year warranty** from the date of purchase, covering manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. For technical assistance, service requests, or to inquire about spare parts, please contact Midea customer support. You can find contact information on the official Midea website or through your local retailer. For more information about Midea products, visit the official Midea store: [Midea Official Store](#)

© 2024 Midea. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.