

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EGLO](#) /

› [EGLO 49097A Priddy 17-inch Desk Lamp User Manual](#)

EGLO 49097A

EGLO Priddy 17-inch Desk Lamp

Model: 49097A

INTRODUCTION

This manual provides essential information for the safe and efficient use of your EGLO Priddy 17-inch Desk Lamp. Please read these instructions carefully before installation and operation, and retain them for future reference.

PRODUCT OVERVIEW AND FEATURES

The EGLO Priddy Desk Lamp is a versatile lighting solution designed for various indoor settings. Key features include:

- Pastel Light Green Finish
- Adjustable Arm for flexible positioning
- Adjustable Lamp Head to direct light
- LED Compatible (bulb not included)
- Push Button Switch for easy operation

Dimensions: 6.18"D x 6.18"W x 17.05"H



Image: EGLO Priddy Desk Lamp showing its length (6.18 inches) and height (17.05 inches).

SAFETY INFORMATION

- Ensure the power is off before installation, cleaning, or changing the bulb.
- Use only the specified bulb type and wattage (max 40 watts, A19 shape).
- Do not expose the lamp to water or excessive moisture. This product is for indoor use only.
- Keep the lamp away from flammable materials.
- If any damage occurs to the cord or lamp, discontinue use immediately and contact customer support.
- This product requires assembly. Follow all assembly instructions carefully.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Light Fixture (includes base, arm, and lamp head)
- Bulb is not included and must be purchased separately.

SETUP AND INSTALLATION

Assembly is required for this desk lamp. Follow these general steps:

1. Carefully unpack all components from the packaging.
2. Assemble the lamp according to the specific instructions provided in the box (if any detailed steps are separate from this general manual). Ensure all connections are secure.
3. Insert a compatible A19 LED or incandescent bulb (max 40 watts) into the lamp head socket.
4. Place the lamp on a stable, flat surface.
5. Plug the power cord into a standard 120V AC electrical outlet.

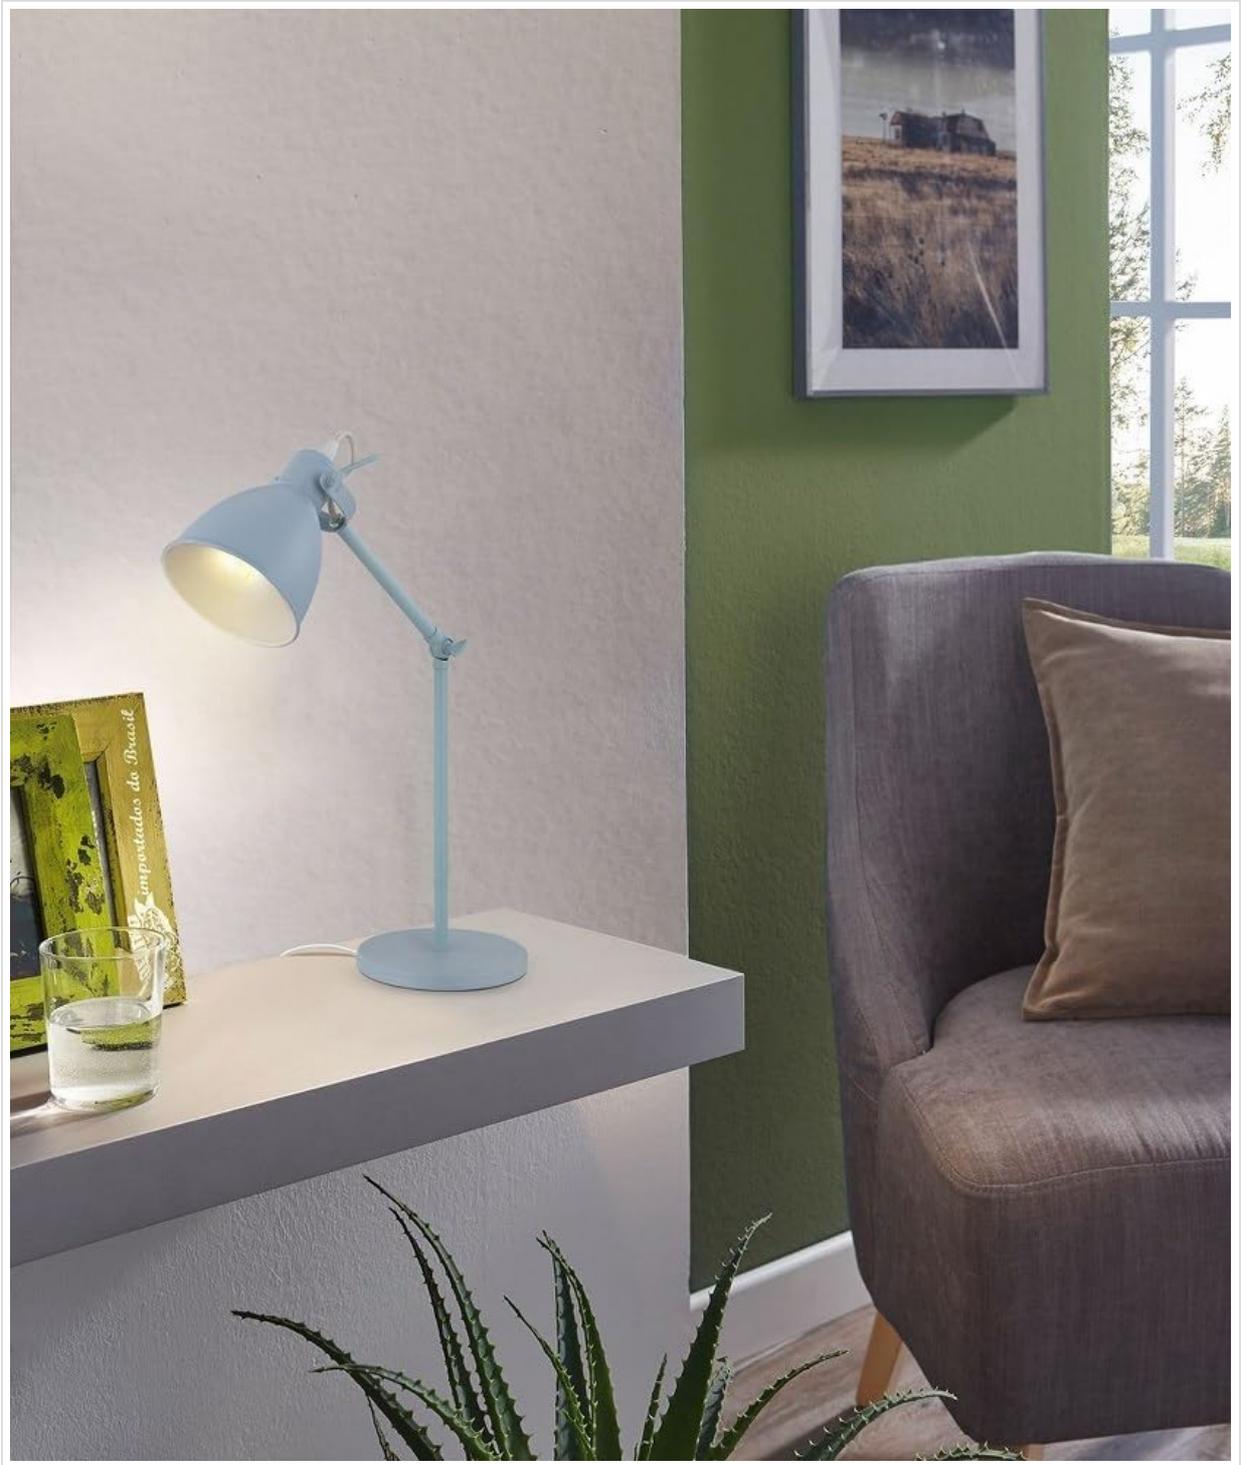


Image: The EGLO Priddy Desk Lamp in pastel light green, positioned on a wooden desk, demonstrating a typical setup.

OPERATING INSTRUCTIONS

1. **Turning On/Off:** Press the push button switch located on the lamp base or cord to turn the lamp on or off.
2. **Adjusting Light Direction:** The lamp features an adjustable arm and lamp head. Gently pivot the arm and tilt the lamp head to direct the light as desired. Avoid excessive force to prevent damage.



Image: The EGLO Priddy Desk Lamp in a pastel pink finish, shown on a white desk with various office items, illustrating its functional placement.

MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power source before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled completely before attempting to replace it. Screw in a new A19 bulb (max 40 watts) firmly but gently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet.	Check if the outlet is working by plugging in another device. Check circuit breaker.
Lamp does not turn on.	Bulb is loose or faulty.	Ensure the bulb is screwed in tightly. Replace the bulb with a new one.
Lamp does not turn on.	Switch is faulty.	Contact customer support for assistance.

SPECIFICATIONS

Attribute	Detail
Model Name	49097A
Brand	EGLO
Product Dimensions	6.18"D x 6.18"W x 17.05"H
Item Weight	4.65 pounds
Color	Pastel Light Green
Material	Alloy Steel, Metal Base
Finish Type	Finished
Lamp Type	Desk Lamp
Light Source Type	LED Compatible
Wattage	Max 40 watts
Bulb Shape Size	A19
Switch Type	Push Button
Power Source	Corded Electric
Voltage	120 Volts
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes

WARRANTY AND SUPPORT

All EGLO products purchased come with a 30-day replacement parts policy to ensure a fully working item. Additionally, all products are covered under a 1-year warranty when purchased on Amazon. The warranty period begins on the day the product is originally shipped.

The warranty covers all items and conditions identified in the original manufacturer's warranty. Items

specifically not covered by the warranty include loss and theft, water damage, customer abuse, and finish deterioration due to UV or coastal exposure.

For support or warranty claims, please contact EGLO customer service through the retailer where the product was purchased.

ADDITIONAL MEDIA

EGLO Brand Video

Your browser does not support the video tag.

Video: An overview video showcasing the EGLO brand and its lighting products. This video provides general brand information and does not contain specific instructions for the Priddy Desk Lamp.