

Manuals.plus /

› VOBAGA /

› VOBAGA Electric Egg Cooker User Manual

## VOBAGA VOB-08-4

# VOBAGA Electric Egg Cooker User Manual

Model: VOB-08-4

## 1. INTRODUCTION

The VOBAGA Electric Egg Cooker is a versatile appliance designed for rapid and convenient preparation of various egg dishes and steamed foods. Its automatic shut-off function ensures safe operation and perfectly cooked results every time. Constructed with durable stainless steel, this compact and space-saving unit is ideal for daily use in any kitchen.



Image: VOBAGA Electric Egg Cooker, showcasing its compact design and retro green color.

## 2. PRODUCT COMPONENTS



Image: Exploded view of the egg cooker, labeling its various parts.

- **Base Tray:** The main heating unit where water is added.
- **Steam Rack:** Stainless steel rack for holding eggs during boiling or steaming.
- **Custard Egg Bowl:** Stainless steel bowl for preparing poached eggs, steamed egg custard, or dumplings.
- **Lid:** Stainless steel cover with a handle and steam vents.
- **Measuring Cup:** Used to measure the precise amount of water required for different cooking styles. Features a pin for piercing eggshells.
- **Switch:** Power button to activate the cooking process.
- **Indicator Light:** Illuminates when the unit is active.

### 3. SETUP AND INITIAL USE

1. **Unpack and Clean:** Carefully remove all packaging materials. Wash the steam rack, custard egg bowl, and lid with warm, soapy water. Wipe the base tray with a damp cloth. Ensure all parts are dry before assembly.
2. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the base

tray. Refer to the cooking guide in Section 4 for specific water quantities based on desired egg doneness or food type.

**3. Place Food:**

- **For Boiled Eggs:** Place the steam rack onto the base tray. Use the pin on the bottom of the measuring cup to gently pierce the larger end of each egg. This helps prevent cracking during cooking. Place the eggs onto the steam rack.
- **For Poached Eggs/Steamed Foods:** Place the custard egg bowl onto the steam rack. Add your desired ingredients (e.g., eggs for poaching, dumplings, vegetables) into the bowl.

**4. Secure Lid:** Place the lid securely over the unit.

**5. Power On:** Plug the power cord into a standard electrical outlet. Press the power switch. The indicator light will illuminate, signaling that the unit has begun heating.

## 4. OPERATING INSTRUCTIONS

The VOBAGA Electric Egg Cooker operates by steaming. The amount of water added determines the cooking time and the doneness of your food. The unit will automatically shut off once all the water has evaporated.

### Cooking Guide for Eggs:

Use the measuring cup to add the specified amount of water to the base tray. The times provided are approximate and may vary slightly based on egg size and ambient temperature.



**EGG SALAD**



**EGG CUSTARD**



**HARD BOILED EGGS**



**EGGS BENEDICT**

Image: Detailed table for water measurements and corresponding cooking times for various egg types.

Egg Cooked Degree	Water (ml)	Time (min)
Soft Boiled Eggs	40ml	6min
Medium Boiled Eggs	60ml	8min
Hard Boiled Eggs	80ml	10min
Egg Custard	100ml	14min
Poached Eggs	80ml	10min

Once the water has evaporated and the cooking cycle is complete, the indicator light will turn off, and the unit will automatically shut off. Carefully remove the lid and cooked food, as steam will be hot.

# Fast Heating Egg Cooker

Versatile Steamer for Various Food



Hard Boiled Eggs



Soft Boiled Eggs



Steamed Egg



Egg Salad



Image: A soft-boiled egg with a perfectly runny yolk, demonstrating the cooker's capability.

## 5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your egg cooker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Base Tray:** The stainless steel heating plate on the base tray may develop mineral deposits (scale) over time. To remove, add a small amount of vinegar or lemon juice to the base tray and let it sit for 5-10 minutes. Gently scrub with a non-abrasive sponge or cloth. Rinse thoroughly and wipe dry.
3. **Wash Accessories:** The steam rack, custard egg bowl, and lid are dishwasher safe or can be washed by hand with warm, soapy water. Rinse thoroughly and dry.
4. **Exterior:** Wipe the exterior of the base unit with a damp cloth. Do not immerse the base unit in water or any other liquid.

## 6. TROUBLESHOOTING

- **Unit does not turn on:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the power switch is pressed and the indicator light is on.
- **Eggs are not cooked to desired doneness:** Verify that the correct amount of water was added according to the cooking guide. Adjust water quantity slightly for future use based on your preference and egg size.
- **Eggs crack during cooking:** Ensure eggshells are pierced with the pin on the measuring cup before cooking. Avoid using eggs directly from the refrigerator; allow them to reach room temperature if possible.
- **Water residue/scale on heating plate:** This is normal due to mineral content in water. Follow the cleaning instructions in Section 5 to remove deposits.

## 7. SPECIFICATIONS

- **Brand:** VOBAGA
- **Model:** VOB-08-4
- **Color:** Retro green
- **Material:** Stainless Steel
- **Product Dimensions:** 6.1"L x 6.1"W x 7.08"H
- **Item Weight:** 2.2 Pounds
- **Capacity:** 7-Egg Capacity
- **Is Electric:** Yes
- **UPC:** 602815748926
- **Manufacturer:** VOBAGA
- **Date First Available:** July 11, 2019

## 8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual PDF available online or contact VOBAGA customer service directly.

Official User Manual (PDF): [Download PDF](#)

## 9. IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.