

UEME PD-708-BLACK

UEME PD-708-BLACK 7-Inch Portable DVD Player Instruction Manual

Model: PD-708-BLACK

Brand: UEME

1. INTRODUCTION

Thank you for choosing the UEME PD-708-BLACK 7-inch Portable DVD Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your product.

2. PRODUCT FEATURES

- **7-Inch Swivel Screen:** High brightness color TFT LCD screen with 270-degree rotation and 180-degree folding capability for versatile viewing angles.
- **Internal Rechargeable Battery:** Built-in lithium battery provides over 3 hours of playback with internal speakers or approximately 5 hours with headphones.
- **Multi-Format Support:** Compatible with various disc types (CD, DVD, VCD, SVCD) and multimedia files (MP3, WMA, VOB, AVI, MPEG 1, MPEG 2, XVID) via USB/SD card (Max 32GB).
- **Easy Connectivity:** Features AV output for connecting to a TV or other external displays, and an audio port for external speakers or headphones.
- **Last Memory Function:** Resumes playback from where you left off. Activate this feature in the setup menu.
- **Portable Design:** Lightweight (1.5 pounds) and compact (8.5 x 6 x 1.7 inches) for easy transport.



Image: The UEME 7-inch Portable DVD Player shown with its swivel screen open, alongside a car headrest mount. The player is compact and designed for on-the-go entertainment.

3. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- UEME Portable DVD Player (x1)
- AV Cable (x1)
- Remote Control (x1)
- Power Adapter (x1)
- Car Charger (x1)
- Car Headrest Mount Holder (x1)

Rich Accessories



1 DVD Player



2 Car Headrest Mount Holder



3 Remote Control



4 Car Charger



5 AV Cable



6 Power Adapter

Image: A visual representation of all included accessories: the DVD player, car headrest mount holder, remote control, car charger, AV cable, and power adapter.

4. SETUP

4.1 Powering On and Charging

1. Connect the provided AC power adapter to the DC IN port on the player and a wall outlet to charge the internal battery. The charging indicator light will illuminate.
2. Alternatively, use the car charger to power the device in a vehicle.

3. Slide the power switch to the 'ON' position to turn on the player.

4.2 Inserting a Disc

1. Gently press the 'OPEN' button or slide the latch to open the disc compartment.
2. Place the DVD or CD onto the spindle with the label side facing up. Ensure it clicks into place.
3. Close the disc compartment firmly until it latches.

4.3 Using USB/SD Card

1. Insert a USB flash drive into the USB port or an SD card into the SD card slot.
2. The player should automatically detect the media. If not, press the 'SOURCE' button to select USB or SD.

Supports Various Devices



Image: A detailed side view of the UEME Portable DVD Player, highlighting the USB port, SD card slot, headphone jack, and AV input/output ports.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

1. After inserting a disc or media, the player will typically begin playback automatically.
2. Use the **PLAY/PAUSE** button to start or pause playback.
3. Use the **STOP** button to end playback.

4. Use the **PREVIOUS/NEXT** buttons to skip tracks or chapters.
5. Use the **FAST FORWARD/REWIND** buttons to scan through content.

5.2 Volume Control

Adjust the volume using the **VOL+** and **VOL-** buttons on the player or the remote control.

5.3 Source Selection

Press the **SOURCE** button to switch between DVD, USB, SD, and AV input modes.

5.4 Menu Navigation

Press the **MENU** button to access disc menus. Use the arrow keys and **OK** button to navigate and select options.

5.5 Swivel Screen Functionality

The screen can swivel 270 degrees and fold back 180 degrees. This allows for various viewing positions, including flat against the base or mounted to a car headrest using the included holder.

Swivling Screen

270° rotation and 180° folding back



1



2



Image: The UEME Portable DVD Player's screen is shown swiveling and then mounted to a car headrest, demonstrating its flexible viewing options for travel.

6. MEDIA COMPATIBILITY

The UEME PD-708-BLACK supports a wide range of media formats:

- **Disc Types:** CD, DVD, VCD, SVCD, CD-R, CD-RW, DVD-R, DVD+RW, DVD-RW.

- **Audio Files:** MP3, WMA.
- **Video Files:** VOB, AVI, MPEG 1, MPEG 2, XVID.
- **External Media:** USB drives and SD/MMC cards up to 32GB.



Image: The UEME Portable DVD Player screen shows icons representing multiple supported DVD formats, including DVD, DVD-R, DVD-RW, CD, CD-R, HDCD, VCD, SVCD, and EVD.

7. CONNECTIVITY

7.1 AV Output

Use the provided AV cable to connect the player's AV OUT port to a television or other external display. This allows you to view content on a larger screen.

7.2 Headphone Jack

Connect standard 3.5mm headphones to the headphone jack for private listening. This is particularly useful in environments where sound might disturb others, such as during travel.

Video: An official UEME product video demonstrating the portable DVD player's features, including multi-format support, high-resolution display, stereo speakers, integrated battery, swivel display, and multi-screen mode for various environments like cars, living rooms, bedrooms, and outdoors.

8. MAINTENANCE

- Keep the player clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Ensure the disc compartment is free of dust and debris.
- Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- Handle discs carefully by the edges to prevent scratches.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on	Low battery or no power connection.	Connect the AC adapter or car charger. Ensure the power switch is ON.
Disc not playing/reading	Disc is dirty, scratched, or incompatible format.	Clean the disc. Try a different disc. Ensure the disc format is supported (refer to Section 6).
No sound	Volume too low, headphones connected, or external speakers not connected properly.	Increase volume. Disconnect headphones if using internal speakers. Check external speaker connections.
No picture on TV	AV cable not connected correctly or incorrect TV input selected.	Ensure AV cable is securely connected to both player and TV. Select the correct AV input on your TV.
Remote control not working	Batteries are dead or remote is not pointed at the sensor.	Replace remote batteries. Point the remote directly at the player's remote sensor.

10. SPECIFICATIONS

Feature	Detail
Product Dimensions	8.5 x 6 x 1.7 inches
Item Weight	1.5 pounds
Item Model Number	PD-708-BLACK
Screen Size	7 Inches
Display Type	LCD

Feature	Detail
Battery	1 Lithium Polymer battery (included)
Media Type	CD-RW, DVD+RW, DVD-RW, SVCD, VCD
Color	Black

11. WARRANTY AND SUPPORT

For warranty information or technical support, please contact UEME customer service. Refer to the contact information provided in your product packaging or visit the official UEME website.

You can also visit the [UEME Store on Amazon](#) for more product information and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question