

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Atatat](#) /
- › [Atatat 10-inch Digital Photo Frame \(Model P100\) User Manual](#)

## Atatat P100

# Atatat 10-inch Digital Photo Frame (Model P100) User Manual

Your Guide to Capturing and Displaying Memories

## 1. PRODUCT OVERVIEW

The Atatat 10-inch Digital Photo Frame (Model P100) provides a vibrant display for your cherished photos and videos. Featuring a 10-inch HD IPS screen, this frame offers clear visuals with wide viewing angles. It supports various media formats and includes user-friendly functions designed for ease of use.



Figure 1: The Atatat 10-inch Digital Photo Frame showcasing a family picture.

## 2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Atatat 10-inch Digital Photo Frame (Model P100)
- Power Adapter
- Remote Control
- Support Rod (for tabletop display)
- User Manual (this document)

## Interface Details

SD Card (16-128GB)

USB Flash Drive (16-128GB)

3.5MM-Headphones or Earphones



Figure 2: Side view of the digital photo frame highlighting its various ports and connections.

 
### 3. KEY FEATURES

- **10-inch HD IPS Screen:** Enjoy crystal-clear photo display with vibrant colors and wide viewing angles.
- **Elder-Friendly Design:** Simplified interface for easy management of settings and photo navigation.
- **Adjustable Brightness & Scheduled On/Off:** Customize screen brightness and set automatic power on/off times.
- **Supports 8-128GB SD Card & Plug-and-Play:** Effortlessly load and display photos from compatible SD cards or USB drives.

- **Slide Show & Background Music:** Showcase memories with customizable slide show modes and optional background music.
- **Auto Rotation:** The frame automatically adjusts photo orientation for optimal viewing.
- **Multi-Window Display:** View multiple photos simultaneously in various layouts.



1080P



180°



SD/USB



Timed shutdown



Background music



Video



Calendar



Calendar

Figure 3: Visual summary of the digital photo frame's core functionalities.

# Auto Rotation

*Place the  
frame As you like*



Figure 4: The auto-rotation feature in action, adapting images to the frame's orientation.

## 4. SETUP

### 4.1 Power Connection

1. Connect the power adapter to the DC IN port on the frame.
2. Plug the power adapter into a standard electrical outlet. The frame will power on automatically.

### 4.2 Stand Installation

To use the frame on a tabletop, screw the provided support rod into one of the designated holes on the back of the frame. Choose the hole that provides your desired viewing angle.

### 4.3 Wall Mounting

The frame includes wall hanging holes on the back. Use appropriate wall anchors and screws (not included) to securely mount the frame on a wall.

## 4.4 Inserting Storage Media

Ensure the photo frame is turned on before inserting any media.

- **SD Card:** Insert an 8-128GB (FAT32 format, Class 10) SD card into the SD card slot.
- **USB Drive:** Insert a compatible USB flash drive into the USB port.

## 5. OPERATING INSTRUCTIONS

---

Navigate the frame using the buttons on the back or the included remote control.

### 5.1 Basic Navigation

From the main interface, use the directional buttons (Up/Down/Left/Right) to select options and the OK button to confirm. The EXIT button returns to the previous menu.

### 5.2 Photo Playback (Slideshow)

1. Select "Photo" from the main interface.
2. Photos will begin playing in a slideshow.
3. To customize the slideshow, go to "Setting" and adjust "Slideshow Effect" and "Slide Speed".

### 5.3 Video Playback

1. Select "Video" from the main interface.
2. Choose your desired video file and press OK to play.
3. Use the remote control for play/pause, fast forward, and rewind functions.

### 5.4 Music Playback

1. Select "Music" from the main interface.
2. Choose your desired music file and press OK to play.
3. Volume can be adjusted using the VOL+ and VOL- buttons on the remote.



## Multi-window Display

- Single window
- Double windows
- Triple windows
- Quadruple windows



Figure 5: Example of the multi-window display feature, allowing simultaneous viewing of several photos.

## 6. SETTINGS

Access the settings menu by selecting "Setting" from the main interface.

- **Date and Time:** Set the current date, time, and alarm time.
- **Slideshow Effect:** Choose from various transition effects for your photo slideshows.
- **Slide Speed:** Adjust the duration each photo is displayed during a slideshow.
- **Repeat Mode:** Configure how media files are repeated (e.g., single, all, random).
- **Display Ratio:** Select "Original" to prevent photo distortion and display images in their native aspect ratio.
- **Adjustable Brightness:** Modify the screen brightness to suit your environment.
- **Sleep Mode/Scheduled On/Off:** Set specific times for the frame to automatically power on or off.

## 7. MEDIA MANAGEMENT

### 7.1 Deleting Photos

1. Select "Explorer" from the main interface.
2. Navigate to the photo you wish to delete.
3. Press and hold the remote's "EXIT" button for 3 seconds, then release to confirm deletion.

## 8. TROUBLESHOOTING

---

- **SD Card Not Recognized:** Ensure you are using an 8-128GB SD card (FAT32 format, Class 10). Make sure the frame is powered on before inserting the card.
- **Distorted Photos:** In the "Setting" menu, select "Display Ratio" and choose "Original" to display photos in their correct aspect ratio.
- **Remote Control Not Responding:** Check if the battery tab has been removed from the remote. Ensure there are no obstructions between the remote and the frame's sensor.

## 9. SPECIFICATIONS

---

Feature	Detail
Model Number	P100
Screen Size	10 Inches
Resolution	1080p
Display Type	HD IPS Screen
Compatible Devices	SD Card (8-128GB), USB Drive, Personal Computer, Smartphone, Tablet
Product Dimensions	9.45 x 6.3 x 0.99 inches
Item Weight	1.98 pounds
Power Input	5V/2A
Color	Black

## 10. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight.
- **Handling:** Handle the frame with care to avoid dropping or impacting the screen.

## 11. SAFETY INFORMATION

---

- Do not expose the frame to water or excessive moisture.
- Keep the frame away from heat sources and direct sunlight.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the frame yourself. Contact customer support for assistance.
- Keep out of reach of children.

## 12. WARRANTY AND SUPPORT

---

Atatat products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the contact details provided in your product packaging or visit the official Atatat website.

Please retain your proof of purchase for warranty claims.