



[Manuals.plus](#) /

› [Magnussen](#) /

› Magnussen Tinley Park Rectangular Dining Table D4646-20 User Manual

Magnussen D4646-20

Magnussen Tinley Park Rectangular Dining Table

MODEL: D4646-20

Introduction

This manual provides essential information for the safe assembly, operation, and maintenance of your Magnussen Tinley Park Rectangular Dining Table, Model D4646-20. Please read these instructions thoroughly before beginning assembly and retain them for future reference. This dining table features a traditional design constructed from pine solids with a weathered Dovetail Gray finish and a planked top.

Safety Information

- Always assemble the table on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand or sit on the table.
- Keep small parts and packaging materials away from children.
- Assembly requires at least two adults due to the weight and size of the components.
- Do not exceed the recommended weight capacity of the table.

Package Contents

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Tabletop (1)
- Pedestal Bases (2)
- Metal Stretcher Bar (1)
- Assembly Hardware Pack (bolts, washers, nuts, Allen key)

Setup and Assembly

Assembly of the Magnussen Tinley Park Rectangular Dining Table requires two people. Recommended tools include an Allen key (usually provided), a hammer, a screwdriver, and a wrench.

1. Carefully unpack all components and place them on a soft, clean, non-abrasive surface to prevent damage.
2. Attach the metal stretcher bar to the two pedestal bases. Ensure the holes align and secure with the provided bolts and washers. Do not fully tighten at this stage.
3. Position the assembled base structure upside down on the floor.
4. Carefully place the tabletop upside down onto the base structure, aligning the pre-drilled holes in the tabletop with the holes in the pedestal bases.
5. Secure the tabletop to the bases using the remaining bolts, washers, and nuts. Once all bolts are in place, fully tighten all connections using the Allen key and wrench.
6. With the assistance of another person, carefully flip the assembled table upright. Lift the table rather than dragging it to avoid damage to the legs or floor.



Image: Angled view of the Magnussen Tinley Park Rectangular Dining Table, illustrating the overall structure and base design.



Image: Front view of the table, showing the two pedestal bases and the metal stretcher bar, key components for assembly.

Operating and Usage

The Magnussen Tinley Park Dining Table is designed for indoor dining use and features two butterfly leaves for extending its length.

Extending the Table with Butterfly Leaves:

1. Ensure there is sufficient space around the table to extend it.
2. Grasp both ends of the tabletop and gently pull them apart. The table will separate in the middle, revealing the butterfly leaves stored underneath.
3. Unfold the butterfly leaves one at a time. The leaves are designed to pivot and lay flat within the table's center opening.
4. Once the leaves are unfolded and positioned, push the two halves of the tabletop back together until they are flush with the leaves and securely locked.

Retracting the Table:

1. Pull the tabletop halves apart to disengage the locking mechanism.
2. Fold the butterfly leaves back into their storage position underneath the tabletop.
3. Push the tabletop halves back together until they are flush and locked.



Image: Top view of the table surface, indicating the central seam for the butterfly leaves.

Maintenance

Proper care will help maintain the appearance and longevity of your dining table.

- **Cleaning:** Wipe the table surface with a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish. Dry immediately with a clean cloth.
- **Spills:** Blot spills immediately with a clean, dry cloth. Do not rub, as this can spread the liquid and damage the finish.
- **Heat and Moisture:** Use placemats, coasters, and hot pads to protect the surface from heat, moisture, and scratches. Avoid placing hot items directly on the table.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Humidity:** Maintain a consistent humidity level in your home to prevent wood from expanding or contracting, which

can lead to cracking or warping.

- **Moving:** When moving the table, always lift it. Do not drag it across the floor, as this can damage the legs and the floor.

Troubleshooting

If you encounter any issues with your dining table, refer to the following common solutions:

- **Wobbly Table:** Check all bolts and connections under the tabletop and at the pedestal bases. Tighten any loose hardware. Ensure the table is on a level surface.
- **Difficulty Extending/Retracting Leaves:** Ensure the tracks for the leaves are clear of debris. Apply a small amount of silicone lubricant to the tracks if movement is stiff. Do not force the mechanism.
- **Scratches or Dents:** For minor surface imperfections, consult a professional furniture repair specialist or use a wood repair kit appropriate for the Dovetail Gray finish.

Specifications

Brand	Magnussen
Model Number	D4646-20
Product Dimensions (D x W x H)	40" x 80" x 30"
Item Weight	196.2 Pounds
Frame Material	Wood (Pine Solids)
Color	Grey (Dovetail Gray finish)
Shape	Rectangular
Table Design	Dining Table with Butterfly Leaves
Style Name	Gustavian
Top Material Type	Pine
Seating Capacity (Unextended)	10
Number of Leaves	2
Required Assembly	Yes
Recommended Uses	Dining
Indoor/Outdoor Usage	Indoor
Tools Recommended For Assembly	Allen Key, Hammer, Screw Driver, Wrench
UPC	788093631652

Warranty and Support

Warranty Information: For specific warranty details regarding your Magnussen Tinley Park Rectangular Dining Table, please refer to the product description on the original purchase platform or contact your retailer directly. Warranty terms

may vary.

Customer Support: If you have any questions, require replacement parts, or need further assistance, please contact Magnussen Home customer service or your authorized dealer. Have your model number (D4646-20) and proof of purchase ready when contacting support.