

T TICCI T0003VB Watch

TICCI Men's Vibrating Alarm Watch User Manual

Model: T0003VB Watch

1. INTRODUCTION

Welcome to the user manual for your new TICCI Men's Vibrating Alarm Watch. This watch is specifically designed to assist with medication reminders, daily alerts, and timekeeping, featuring a strong vibration, large digits for easy readability, and a waterproof design. Please read this manual carefully to understand the full functionality and ensure proper use and maintenance of your watch.

Key features of your TICCI Vibrating Alarm Watch include:

- **Easy-to-Read Display:** Large face and big digits for clear visibility, even for those with impaired eyesight. Includes calendar display (Year, Month, Week, Date).
- **8 Strong Vibrating Alarms:** Tailored for individuals who are hard of hearing. Offers three alarm modes: both sound (beep) and vibration, sound only, or vibration only for discreet alerts. Ideal for medication, pill, and task reminders. Alarms auto-repeat daily.
- **Super Bright Backlight:** Illuminates the entire display with large digits for easy reading in low-light conditions.
- **Countdown Timer:** Adjustable from 15 minutes to 24 hours, with an auto-start feature.
- **Water Resistance:** Rated for 30 meters, suitable for splashes or brief immersion. Not recommended for hot water, swimming, or showering.
- **Lockout Feature:** Prevents accidental changes to settings, beneficial for users who might inadvertently press buttons.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and functions of your TICCI watch.



Figure 2.1: Front view of the TICCI Vibrating Alarm Watch.

This image shows the main display of the watch, highlighting its large digits and clear layout. The watch features a black case and strap, with visible buttons on the sides for various functions.

2.1 Watch Components and Buttons



Figure 2.2: Watch Buttons and Display.

This diagram illustrates the location of the four main control buttons (A, B, C, D) on the watch, along with the digital display. Button A is typically for 'Light', Button B for 'Up/Menu', Button C for 'Down', and Button D for 'Back/Lap'.

Button A (LIGHT): Activates the backlight. In setting modes, it may also function as an 'Up' or 'Increase' button.

Button B (UP/MENU): Used to cycle through different modes (Time, Alarm, Countdown, Stopwatch) and to navigate menus or increase values during settings.

Button C (DOWN): Used to decrease values during settings or navigate menus.

Button D (BACK/LAP): Used to confirm settings, exit menus, or record laps in stopwatch mode.

2.2 Multi-Function Display

MUL-FUNCTION

8 Vibration and Alarm



Vibration



Alarm



Countdown



Stopwatch



**Date/Week
Month/Year**



EL Backlight



Waterproof



12/24 Hour Format



Figure 2.3: Multi-Function Capabilities.

This graphic highlights the various functions of the watch, including vibration alerts, audible alarms, countdown timer, stopwatch, date/week/month/year display, EL backlight, and waterproof rating. It visually represents the versatility of the device.

2.3 Watch Dimensions



Figure 2.4: Watch Dimensions.

This diagram provides approximate measurements of the watch face and strap, including the overall length (58mm), case width (54mm), display width (36mm), and digit height (9.97mm), illustrating its large and easy-to-read display.

3. SETUP

Before using your watch, please follow these steps to set it up.

3.1 Setting Time and Date

1. From the Time Mode, press **Button B** repeatedly until "TIME" appears on the display.
2. Press **Button D** to enter Time Setting Mode. The seconds will start flashing.
3. Press **Button B** to cycle through the setting items: Seconds → Hours → Minutes → Year → Month → Date.
4. Use **Button A** or **Button C** to adjust the flashing value.
5. Once all settings are correct, press **Button D** to confirm and exit Time Setting Mode.

3.2 Setting Alarms (8 Vibrating Alarms)

Your watch supports up to 8 individual alarms. Each alarm can be set for sound, vibration, or both.

1. From the Time Mode, press **Button B** repeatedly until "ALARM" appears on the display.
2. Press **Button D** to select the alarm you wish to set (AL1 to AL8). The alarm number will flash.
3. Press **Button B** to select the alarm number.
4. Press **Button D** to enter alarm time setting. The hours will flash.
5. Use **Button A** or **Button C** to adjust the hours, then press **Button B** to move to minutes and adjust.
6. After setting the time, press **Button B** to select the alarm type (sound, vibration, or both). The corresponding icon will appear/disappear on the display.
7. Press **Button D** to confirm and exit alarm setting.

3.3 Setting Countdown Timer

The countdown timer can be set for intervals from 15 minutes to 24 hours.

1. From the Time Mode, press **Button B** repeatedly until "COUNTDOWN" (Timer) appears.
2. Press **Button D** to enter Countdown Setting Mode. The hours will flash.
3. Use **Button A** or **Button C** to adjust the hours, then press **Button B** to move to minutes and adjust.
4. Press **Button D** to confirm the countdown time.
5. To start the countdown, press **Button D** again. To pause/resume, press **Button D**. To stop and reset, press **Button B**.

3.4 Lockout Function

To prevent accidental changes to your watch settings, you can activate the lockout feature.

To lock the watch, press and hold **Button B** and **Button C** simultaneously for approximately 2 seconds until "LOCK" appears on the display.

To unlock, repeat the same action. The "LOCK" icon will disappear.

4. OPERATING INSTRUCTIONS

4.1 Activating the Backlight

To illuminate the display in dark conditions:

Press **Button A (LIGHT)**. The backlight will activate for a few seconds.



Figure 4.1: Backlight Effect.

This image demonstrates the watch display in normal viewing conditions on the left, and with the super bright backlight activated on the right, showing enhanced visibility of the large digits.

4.2 Using the Stopwatch

Your watch includes a stopwatch function for timing events.

- 1. From the Time Mode, press **Button B** repeatedly until "STOPWATCH" appears.
- 2. Press **Button D** to start the stopwatch.
- 3. Press **Button D** again to pause/resume.
- 4. To reset the stopwatch to zero, press **Button B** while the stopwatch is paused.
- 5. To record a lap time, press **Button A** while the stopwatch is running. The lap time will display briefly.

5. MAINTENANCE

5.1 Cleaning Your Watch

To keep your watch in optimal condition:

- Wipe the watch regularly with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and seals.

5.2 Water Resistance

Your TICCI watch is rated for 30 meters of water resistance. This means it is designed to withstand splashes, rain, or brief immersion in cold water, such as during hand washing.

Important Note:

- Do NOT expose the watch to hot water, steam, or extreme temperature changes. Hot water can compromise the watch's water resistance seals.
- Do NOT press any buttons while the watch is submerged in water.
- The watch is NOT suitable for swimming, diving, or showering, despite its water resistance rating.

5.3 Battery Replacement

The watch uses 1 CR2 battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is maintained.

6. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low battery.	Replace the CR2 battery.
Alarm does not vibrate or sound.	Alarm not activated or set incorrectly; alarm mode set to silent.	Ensure the alarm is enabled and the correct alarm type (vibration/sound) is selected in the alarm settings. Check battery level.

Problem	Possible Cause	Solution
Settings change accidentally.	Lockout feature is not enabled.	Activate the lockout function (refer to Section 3.4).
Moisture inside the watch display.	Exposure to hot water or prolonged immersion beyond specified water resistance.	Stop using the watch immediately. Seek professional repair to prevent further damage. Avoid hot water.
Buttons are unresponsive.	Watch is in lockout mode; internal malfunction.	Unlock the watch (refer to Section 3.4). If still unresponsive, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	T0003VB Watch
Material	Plastic
Clasp Type	Buckle
Water Resistance	30 meters (Not for hot water, swimming, or showering)
Alarms	8 individual vibrating and/or sound alarms
Countdown Timer	15 minutes to 24 hours, auto-start
Backlight	Super Bright EL Backlight
Battery Type	1 x CR2 (required)
Dimensions (Approx.)	Package: 3.5 x 3.5 x 2.7 inches; Watch: Refer to Figure 2.2 for detailed dimensions.
Weight (Approx.)	4.8 ounces

8. WARRANTY INFORMATION

Your TICCI Vibrating Alarm Watch is covered by a manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary based on your region and point of purchase. Please retain your proof of purchase for warranty claims.

For detailed warranty information, please refer to the warranty card included with your product or contact the retailer from whom you purchased the watch.

Extended protection plans may also be available for purchase. Please check with your retailer for options.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with setup, or encounter issues not covered in this manual, please do not hesitate to contact our customer support team.

For the most efficient support, please have your watch model number (T0003VB Watch) and purchase details ready when contacting us.

You can find more information and contact details by visiting the official T TICCI store:[T TICCI Store on Amazon](#).

© 2024 T TICCI. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I replace the battery on my TICCI T0003VB vibrating alarm wrist watch?

According to the TICCI T0003VB Watch manual, the device typically uses a CR2 battery (though some variations may use a CR2032). The manufacturer strongly recommends that battery replacement be performed by a qualified watch...

[Read full answer](#)