

## Yosoo sococo0xpm3w4c69

# Yosoo Electric Clothes Dryer User Manual

Model: sococo0xpm3w4c69

## 1. INTRODUCTION

---

Thank you for purchasing the Yosoo Electric Clothes Dryer. This portable, ventless air drying machine is designed to efficiently dry clothes, shoes, and other garments while preserving their original shape and color. Its foldable design makes it ideal for use in homes, apartments, dormitories, hotels, and for travel. Please read this manual thoroughly before operation to ensure safe and proper use.

## 2. SAFETY INSTRUCTIONS

---

- Always plug the dryer into a grounded electrical outlet.
- Do not operate the dryer with a damaged cord or plug. If damaged, contact customer support.
- Keep the dryer away from water or other liquids to prevent electric shock.
- Ensure adequate ventilation around the dryer during operation.
- Do not overload the dryer. Refer to the specifications for maximum capacity.
- Do not allow children to operate the dryer unsupervised.
- Unplug the dryer when not in use or before cleaning.
- Do not block the air inlet or outlet during operation.
- The internal temperature can reach up to 60°C. Exercise caution when handling clothes immediately after drying.

## 3. PRODUCT OVERVIEW

---

The Yosoo Electric Clothes Dryer consists of a foldable drying cabinet, a hot air pump, and various accessories for hanging clothes.

### Components Included:

- Foldable Drying Cabinet (Blue)
- Hot Air Pump (800W)
- Connecting Tube
- Support Rods (for internal structure)
- Hangers and Clips



Figure 3.1: Overview of all included components.

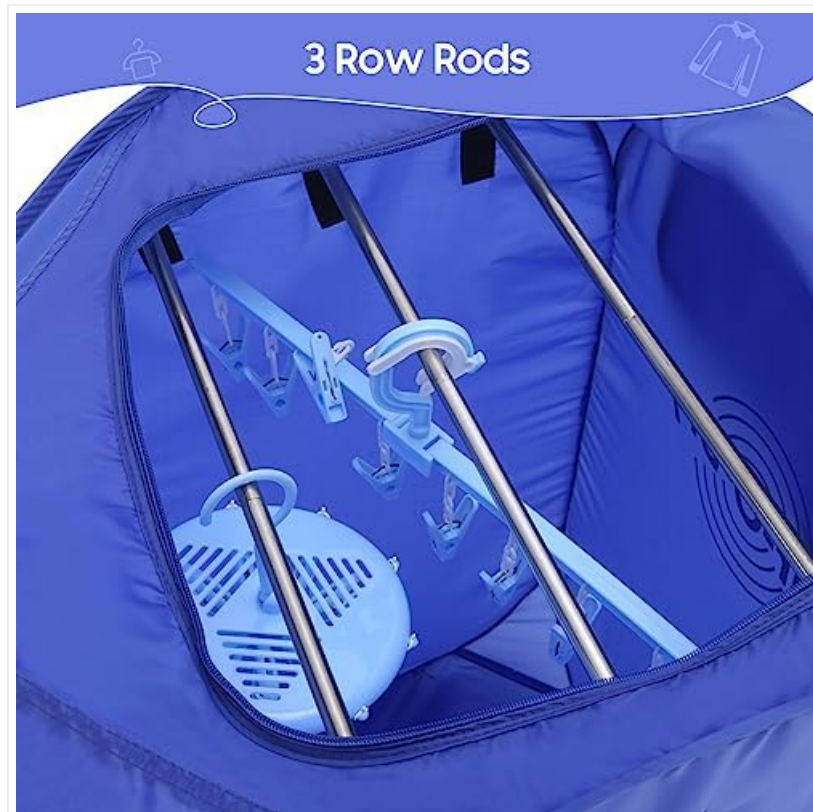


Figure 3.2: Interior view showing the three support rods and hanging accessories.



Figure 3.3: Detailed features including zipper, hanger, motor, fabric, and air inlet.

## 4. SETUP INSTRUCTIONS

---

Follow these steps to assemble your Yosoo Electric Clothes Dryer:

1. Unfold the blue drying cabinet. It will pop open into its cylindrical shape.
2. Assemble the metal support rods by connecting the segments.
3. Insert the assembled support rods into the designated loops or pockets inside the top of the drying cabinet to create a sturdy frame.
4. Locate the air inlet sleeve at the bottom of the drying cabinet.
5. Connect the hot air pump to the air inlet sleeve, ensuring a secure fit to prevent air leakage.
6. Place the hangers and clips onto the support rods inside the cabinet.



Figure 4.1: Visual guide for dryer assembly.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the unboxing, assembly, and initial setup of the Yosoo Electric Clothes Dryer, including connecting the air pump and hanging garments.

## 5. OPERATING INSTRUCTIONS

---

Once assembled, operate your dryer as follows:

1. Hang your damp clothes inside the drying cabinet using the provided hangers. Ensure clothes are not dripping wet and are spaced to allow for proper air circulation. The dryer can hold approximately 5 kg of laundry.
2. Close the zipper on the drying cabinet completely to seal it.
3. Plug the hot air pump into a suitable electrical outlet.
4. Set the desired drying time using the timer dial on the hot air pump. The timer can be set between 30 to 180 minutes.
5. The hot air pump will begin to circulate warm air (up to 60°C) inside the cabinet, drying your clothes.
6. Once the timer completes, the dryer will automatically shut off. Unzip the cabinet and remove your dry clothes.

## Hot Air Vortex Drying Clothes

Isolation and Cleaning



Figure 5.1: Hot air circulation and timer function.

## Professional Drying

Load bearing 5kg, Widely used, put 7 or 8 pieces at a time (Fold the long coat in half)



Figure 5.2: Drying capacity and suitable garment types.

## 6. MAINTENANCE

- **Cleaning the Cabinet:** Wipe the interior and exterior of the drying cabinet with a damp cloth. Do not use abrasive cleaners. Ensure it is completely dry before folding and storing.
- **Cleaning the Air Pump:** Periodically check the air inlet of the hot air pump for dust or lint accumulation. Clean with a soft brush or vacuum cleaner if necessary. Do not immerse the air pump

in water.

- **Storage:** When not in use, unplug the unit, allow it to cool, and fold the drying cabinet for compact storage. Store in a cool, dry place.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer not turning on	Not plugged in; Power outlet issue; Timer not set.	Ensure the power cord is securely plugged in. Check the power outlet with another appliance. Set the timer dial to a desired drying duration.
Clothes not drying efficiently	Overloaded cabinet; Clothes too wet; Insufficient drying time; Blocked air vents.	Reduce the amount of clothes. Ensure clothes are spin-dried before placing them in the dryer. Increase drying time. Check and clear any obstructions from air inlet/outlet.
Unusual noise from air pump	Foreign object in fan; Pump not stable.	Unplug the unit and inspect the air inlet for foreign objects. Ensure the pump is placed on a flat, stable surface.
Cabinet not inflating properly	Air pump not securely attached; Zipper not fully closed.	Ensure the air pump is tightly connected to the cabinet's air inlet sleeve. Verify the cabinet zipper is completely closed.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Yosoo
Model Name	Electric Clothes Dryer
Model Number	sococo0xpm3w4c69
Power	800W
Capacity	5 Kilograms
Form Factor	Portable, Foldable
Drying Method	Ventless Air Drying
Timer Range	30 to 180 minutes
Max Internal Temperature	Up to 60°C
Material Type	Aluminum (frame), Fabric (cabinet)
Item Dimensions (D x W x H)	19.69"D x 19.69"W x 35.43"H (50cm x 50cm x 90cm)
Item Weight	3.31 Pounds



Figure 8.1: Product dimensions.

## 9. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the product packaging or contact the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.