

Amazon Basics DQ1927-Y-SILVER

Amazon Basics Ceramic Space Heater User Manual

Model: DQ1927-Y-SILVER

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Placement:** Always place the heater on a firm, level surface. Do not place on soft surfaces like beds or rugs where openings may be blocked.
- **Power Source:** Ensure the heater is plugged directly into a 120V AC electrical outlet. Do not use with extension cords or power strips.
- **Clearance:** Maintain a minimum distance of 3 feet (0.9 meters) from walls, furniture, curtains, and other combustible materials.
- **Moisture:** This heater is designed for indoor use only in dry environments. **Do not use in humid environments** such as bathrooms, laundry rooms, or areas near sinks, showers, or swimming pools.
- **Supervision:** Do not leave the heater unattended while in use. Always unplug the heater when not in use.
- **Overheat Protection:** The heater is equipped with an automatic overheat protection system that will shut off the unit if it becomes too hot. If this occurs, unplug the heater, allow it to cool for 30 minutes, and then plug it back in.
- **Tip-Over Protection:** A built-in safety switch automatically turns off the heater if it is accidentally tipped over. Ensure the heater is on a stable surface for proper operation.
- **Children and Pets:** Keep the heater out of reach of children and pets. Do not allow them to play with or near the heater.
- **Ventilation:** Do not block air inlets or outlets. Ensure proper airflow around the heater.

2. PRODUCT OVERVIEW

The Amazon Basics Ceramic Space Heater provides efficient and portable heating for small to medium-sized indoor spaces. It features adjustable heat settings and safety mechanisms for reliable operation.

Key Features:

- **Customizable Heating Options:** High (1500W), Low (900W), or Fan Only.
- **Adjustable Thermostat:** Maintains desired room temperature.
- **Compact & Portable Design:** Lightweight with an integrated carry handle.
- **Safety Features:** Built-in Tip-Over Protection and Overheat Protection.
- **Power Indicator Light:** Illuminates when the unit is powered on.



A silver and black Amazon Basics ceramic space heater, showing the front grille and top controls.



An image highlighting the adjustable thermostat, TUV certified auto-shutoff tip-over protection, and power indicator light of the heater.

3. SETUP

Unpacking:

1. Carefully remove the heater from its packaging.
2. Remove all packaging materials, including any protective films or ties.
3. Inspect the heater for any signs of damage. If damaged, do not use and contact customer support.

Placement:

1. Place the heater on a stable, level, and heat-resistant surface.
2. Ensure the heater is at least 3 feet (0.9 meters) away from any walls, furniture, curtains, or other flammable objects.
3. Do not place the heater in areas where it could be easily tipped over or where children or pets might access it.
4. Ensure the power cord is not pinched or placed under the heater.

Portable Convenience

Designed for spaces of
107.7-161.4 sq. ft / 10-15 sq. m



Top rear integrated
easy-to-carry handle



The heater with its dimensions (7.5 inches deep, 6.3 inches wide, 9.5 inches high) and an integrated top handle for portability.

Stable & Secure

Provides tip-over protection switch in its base for added user safety



An illustration demonstrating the heater's tip-over protection switch located on its base, designed to automatically shut off the unit if it is knocked over.

4. OPERATING INSTRUCTIONS

Controls:

The heater features two control dials located on the top of the unit:

- **Left Dial (Thermostat):** Used to set the desired room temperature. Turn clockwise to increase the temperature, counter-clockwise to decrease.
- **Right Dial (Mode Selector):** Used to select the operating mode.
 - **Fan Only:** Circulates air without heat.
 - **Low Heat (900W):** Provides a lower heat output.
 - **High Heat (1500W):** Provides maximum heat output.

How To Use



A detailed view of the heater's two control dials: one for thermostat adjustment and the other for selecting fan, low heat, or high heat modes.

Initial Operation:

1. Plug the heater into a grounded 120V AC electrical outlet. The power indicator light will illuminate.
2. Turn the left (thermostat) dial to the maximum setting (clockwise) to ensure the heater will activate.
3. Turn the right (mode selector) dial to your desired heat setting (Low Heat or High Heat).
4. The heater will begin to emit warm air.

Adjusting Settings:

1. Once the room reaches a comfortable temperature, slowly turn the left (thermostat) dial counter-clockwise until the heater turns off. This sets the thermostat to maintain that temperature.
2. The heater will cycle on and off to maintain the set temperature.
3. To use the fan without heat, turn the right (mode selector) dial to the "Fan Only" setting.
4. To turn off the heater, turn the right (mode selector) dial to the "OFF" position and unplug the unit from the wall outlet.



Warmth On Demand

The ceramic heater with adjustable thermostat maintains warmth in small spaces, with 185-200 °F temperature control and low (750W) or high (1500W) heat settings.

The ceramic heater positioned on a desk next to a computer mouse and headphones, illustrating its use in a home office environment.



The heater placed on the floor next to a bed, with a person sitting nearby, demonstrating its use for personal heating in a living space.

5. MAINTENANCE

Regular maintenance helps ensure the longevity and safe operation of your heater.

Cleaning:

1. Always unplug the heater and allow it to cool completely before cleaning.
2. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
3. Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
4. Do not immerse the heater in water or allow water to drip into the interior.

Storage:

1. Before storing, ensure the heater is completely cool and clean.
2. Store the heater in a cool, dry place, away from direct sunlight and extreme temperatures.

3. It is recommended to store the heater in its original packaging to protect it from dust and damage.

6. TROUBLESHOOTING

If you experience issues with your heater, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit. Tip-over switch activated. Overheat protection activated.	Check if the heater is securely plugged into a working outlet. Ensure the heater is on a flat, stable surface. Unplug the heater, wait 30 minutes for it to cool, then plug it back in.
Heater produces cold air only.	Mode selector set to "Fan Only". Thermostat set too low.	Turn the mode selector dial to "Low Heat" or "High Heat". Increase the thermostat setting by turning the left dial clockwise.
Heater cycles on and off too frequently.	Thermostat set too close to room temperature.	Adjust the thermostat setting slightly higher or lower to find a stable operating point.
Reduced heat output.	Air inlets/outlets blocked. Dust accumulation.	Ensure nothing is obstructing the grilles. Clean the air inlets and outlets as described in the Maintenance section.

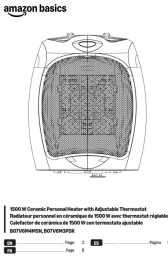 
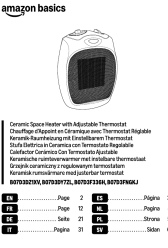 

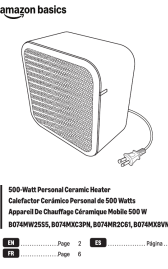 
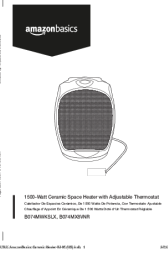 
7. SPECIFICATIONS

Brand:	Amazon Basics
Model Number:	DQ1927-Y-SILVER
Power Output:	1500W (High), 900W (Low)
Dimensions (DxWxH):	7.52"D x 6.34"W x 9.45"H
Item Weight:	2.14 pounds
Special Features:	Overheat Protection, Tip-Over Protection, Adjustable Thermostat
Room Type:	Home Office, Indoor
UPC:	819079021829

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or visit the official Amazon Basics website. Keep your purchase receipt for warranty claims.

Related Documents - DQ1927-Y-SILVER

 <p>amazon basics</p> <p>1500-Watt Ceramic Personal Heater with Adjustable Thermostat Radiateur personnel en céramique de 1500 W avec thermostat réglable Calentador de cerámica de 1500 W con termostato ajustable B07V6M4MSN, B07V6M3PDX</p> <p>Page 1 Page 14</p>	<p>Amazon Basics 1500W Ceramic Personal Heater User Manual Safety, Operation, Troubleshooting</p> <p>Comprehensive user manual for the Amazon Basics 1500W Ceramic Personal Heater with Adjustable Thermostat. Includes detailed safety instructions, operating guide, cleaning, storage, maintenance, troubleshooting, and specifications for models B07V6M4MSN and B07V6M3PDX.</p>
 <p>amazon basics</p> <p>Ceramic Space Heater with Adjustable Thermostat Chauffage d'espace en céramique avec thermostat réglable Keramik Raumheizung mit Einstellbarem Thermostat Quilbátvűtű Céramikus űrhővel Beállítható Termostattal Keramische Raumheizkörper mit einstellbarem Thermostat Keramik rumboldvűtűvel beállítható termostattal B07W3W397L, B07W3W397L, B07W3W397L, B07W3W397L</p> <p>Page 1 Page 39 Page 17 Page 47 Seite 21 Seite 55 Página 3 Página 54</p>	<p>Amazon Basics Ceramic Space Heater with Adjustable Thermostat - User Manual & Safety Guide</p> <p>User manual for the Amazon Basics Ceramic Space Heater with Adjustable Thermostat (1800W). Contains safety instructions, operating guidelines, specifications, and troubleshooting for household use in dry indoor areas.</p>
 <p>amazon basics</p> <p>Digital Tower Heater, 23" Colonne de Chauffage Numérique, 23 po Colonne de Pile Digitale, 23 pulgadas B08GK8P715, B08GK8P715</p> <p>Page 1 Page 11</p>	<p>Amazon Basics 23" Digital Tower Heater User Manual</p> <p>Comprehensive user manual for the Amazon Basics 23" Digital Tower Heater (Model DQ1535). Includes safety instructions, operation guide, specifications, cleaning, maintenance, and troubleshooting tips.</p>
 <p>amazon basics</p> <p>500-Watt Personal Ceramic Heater Colonne de Chauffage Personnel de 500 Watts Appareil De Chauffage Céramique Mobile 500 W B074MW25S5, B074MXC3PN, B074MR2C61, B074MX8VN5</p> <p>Page 1 Page 11 Page 17 Page 6</p>	<p>Amazon Basics 500-Watt Personal Ceramic Heater User Manual</p> <p>User manual for the Amazon Basics 500-Watt Personal Ceramic Heater, including intended use, operation, safety instructions, specifications, and troubleshooting. Model numbers: B074MW25S5, B074MXC3PN, B074MR2C61, B074MX8VN5.</p>
 <p>amazon basics</p> <p>1500-Watt Ceramic Space Heater with Adjustable Thermostat Radiateur d'espace en céramique de 1500 W avec thermostat réglable Calentador de cerámica de 1500 W con termostato ajustable B07W3W397L, B07W3W397L</p> <p>Page 1 Page 11</p>	<p>Amazon Basics 1500-Watt Ceramic Space Heater with Adjustable Thermostat - User Manual</p> <p>User manual and safety instructions for the Amazon Basics 1500-Watt Ceramic Space Heater with Adjustable Thermostat. Learn about operation, maintenance, troubleshooting, and specifications.</p>
 <p>amazon basics</p> <p>Digital Tower Heater, 28" Colonne de Chauffage Numérique, 28 po Colonne de Pile Digitale, 28 pulgadas B08GK8P715</p> <p>Page 1 Page 11</p>	<p>Amazon Basics Digital Tower Heater 28" User Manual</p> <p>User manual for the Amazon Basics 28-inch Digital Tower Heater, providing instructions on operation, safety, cleaning, and troubleshooting. Includes specifications and FAQs.</p>

