

eKids FR-B23v9MOLB

# eKids Disney Frozen 2 Bluetooth Karaoke Microphone User Manual

*Model: FR-B23v9MOLB*

## INTRODUCTION

This manual provides instructions for the eKids Disney Frozen 2 Bluetooth Karaoke Microphone. This portable device allows users to connect to Bluetooth-enabled devices to stream music, utilize voice control features, and enjoy a multi-color LED light show.

## PRODUCT FEATURES

- **Bluetooth Connectivity:** Wirelessly stream audio from compatible devices (smartphones, tablets, PCs, smartwatches, game devices, notebooks).
- **Voice Control:** Compatible with Siri and Google Assistant for hands-free control of playlists.
- **Multi-Color LED Light Show:** Built-in lights flash with music and voice, enhancing the performance.
- **Karaoke Microphone with Sound Effects:** Features echo and other sound effects.
- **Built-in Rechargeable Battery:** Provides hours of use. USB charging cable included.



Figure 1: Overview of the eKids Disney Frozen 2 Bluetooth Karaoke Microphone's key features.

## SETUP

### Charging the Microphone

The microphone comes with a built-in rechargeable battery. Before first use, it is recommended to fully charge the device.

1. Locate the USB charging cable included in the package.
2. Connect the small end of the USB cable to the Charging Cable Port on the microphone.
3. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to specific product indicator behavior).



Figure 2: Charging port and power switch location.

## Powering On and Bluetooth Pairing

1. Locate the ON/OFF/DEMO switch on the side of the microphone.
2. Slide the switch to the "ON/PAIR" position. The microphone will power on and enter Bluetooth pairing mode, indicated by a voice prompt "Looking for Bluetooth signal" and flashing lights.
3. On your Bluetooth-enabled device (e.g., smartphone, tablet), go to the Bluetooth settings.
4. Select "Karaoke B23" (or similar name) from the list of available devices.
5. Once successfully paired, the microphone will announce "Connected" and the lights will stabilize.

Your browser does not support the video tag.

Video 1: Demonstrates the Bluetooth pairing process for the eKids Disney Frozen 2 Karaoke Microphone.

## OPERATING INSTRUCTIONS

### Microphone Controls

The microphone features several buttons for controlling playback, volume, and effects:

- **ON/OFF/DEMO Switch:** Located on the side. Slide to "ON/PAIR" for normal operation and Bluetooth pairing. Slide to "DEMO" for a brief demonstration of features. Slide to "OFF" to power down.
- **Light Show Button (Top Left):** Press to cycle through different LED light modes. Press and hold to initiate Bluetooth pairing if not already connected.
- **Mic Volume + (Top Right):** Press to increase microphone volume. Press and hold for the next track when playing music.
- **Mic Volume - (Bottom Left):** Press to decrease microphone volume. Press and hold for the previous track when playing music.
- **Sound Effects Button (Middle Left):** Press to activate various sound effects.

- **Play/Pause Button (Middle Center):** Press to play or pause music. Press and hold to activate Siri or Google Assistant on a connected smart device.
- **Echo Effect Button (Middle Right):** Press to add an echo effect to your voice.
- **Slide Mic Switch (Bottom Center):** Slide to "ON" to activate the microphone for singing.



Figure 3: Control layout of the eKids Disney Frozen 2 Bluetooth Karaoke Microphone.

## Singing with Music

1. Ensure the microphone is powered on and successfully paired with your Bluetooth device.
2. Start playing music from your device's music library or a streaming service. The audio will play through the microphone's built-in speaker.
3. Slide the "Slide Mic Switch" to "ON" to activate the microphone for your voice.
4. Adjust the microphone volume using the "Mic Volume +" and "Mic Volume -" buttons.
5. Experiment with the "Echo Effect Button" and "Sound Effects Button" to enhance your performance.
6. Press the "Light Show Button" to activate or change the multi-color LED light display.

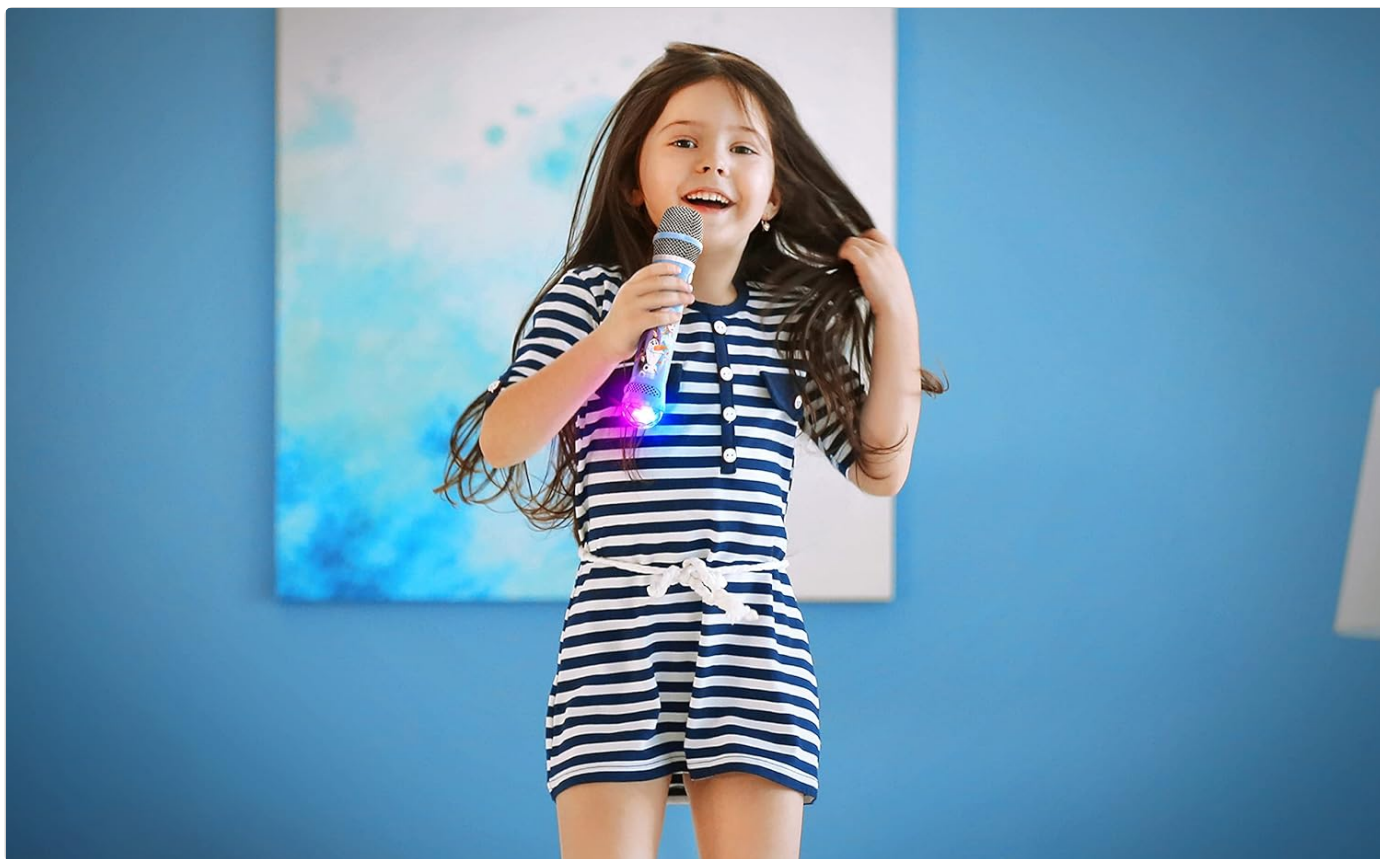


Figure 4: Enjoying the microphone with music and lights.

## MAINTENANCE

- **Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge regularly, even if not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not turn on.	Battery is low or depleted.	Charge the microphone using the provided USB cable.
Cannot pair with Bluetooth device.	Microphone is not in pairing mode; device is too far; Bluetooth is off on device.	Ensure microphone is in "ON/PAIR" mode. Move device closer. Turn on Bluetooth on your device. Forget previous pairings on your device and try again.
No sound from microphone when singing.	Mic switch is off; microphone volume is too low.	Slide the "Slide Mic Switch" to "ON". Increase microphone volume using "Mic Volume +" button.
Music is playing but no voice from microphone.	Microphone is not activated or volume is too low.	Ensure the "Slide Mic Switch" is in the "ON" position and increase microphone volume.

## SPECIFICATIONS

- 
- **Model:** FR-B23v9MOLB
  - **Brand:** eKids
  - **Connectivity:** Bluetooth
  - **Power:** Built-in Rechargeable Battery (USB charging)
  - **Dimensions:** 2.01 x 2.01 x 9.24 inches
  - **Weight:** 10.8 ounces
  - **Recommended Age:** 6 years and up
  - **Included Components:** Bluetooth Karaoke Microphone, USB Charging Cable

## WARRANTY AND SUPPORT

---

This product comes with a one-year limited warranty. For warranty claims or technical support, please refer to the contact information provided on the product packaging or visit the official eKids website.

*For more information, visit the [eKids Store on Amazon](#).*