

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [uxcell](#) /
- › [uxcell 6-Digit Push Button Combination Padlock Instruction Manual](#)

uxcell a19050800ux1243

uxcell 6-Digit Push Button Combination Padlock Instruction Manual

Model: a19050800ux1243

INTRODUCTION

This manual provides instructions for the proper use and care of your uxcell 6-Digit Push Button Combination Padlock. This padlock is designed for securing lockers, cabinets, toolboxes, cases, chests, fences, and other items requiring a reliable locking mechanism. It features a durable zinc alloy housing and a hardened steel shackle for enhanced security.



Image: The uxcell 6-Digit Push Button Combination Padlock in its closed state, showing the silver-tone finish and the six push buttons.

SPECIFICATIONS

Refer to the following specifications for your uxcell combination padlock:

- **Color:** Silver Tone
- **Material:** Zinc Alloy, Steel
- **Lock Type:** Combination Lock (Push Button)
- **Locking Mechanism:** 6-digit push button with 3-digit pre-set combination
- **Shackle Diameter:** 4mm / 0.16-inch
- **Internal Shackle Width:** 16mm / 0.63-inch
- **Internal Shackle Height:** 17mm / 0.67-inch
- **Total Width:** 29mm / 1.14-inch
- **Total Height:** 54mm / 2.13-inch
- **Item Weight:** Approximately 1.8 ounces (0.05 Kilograms)

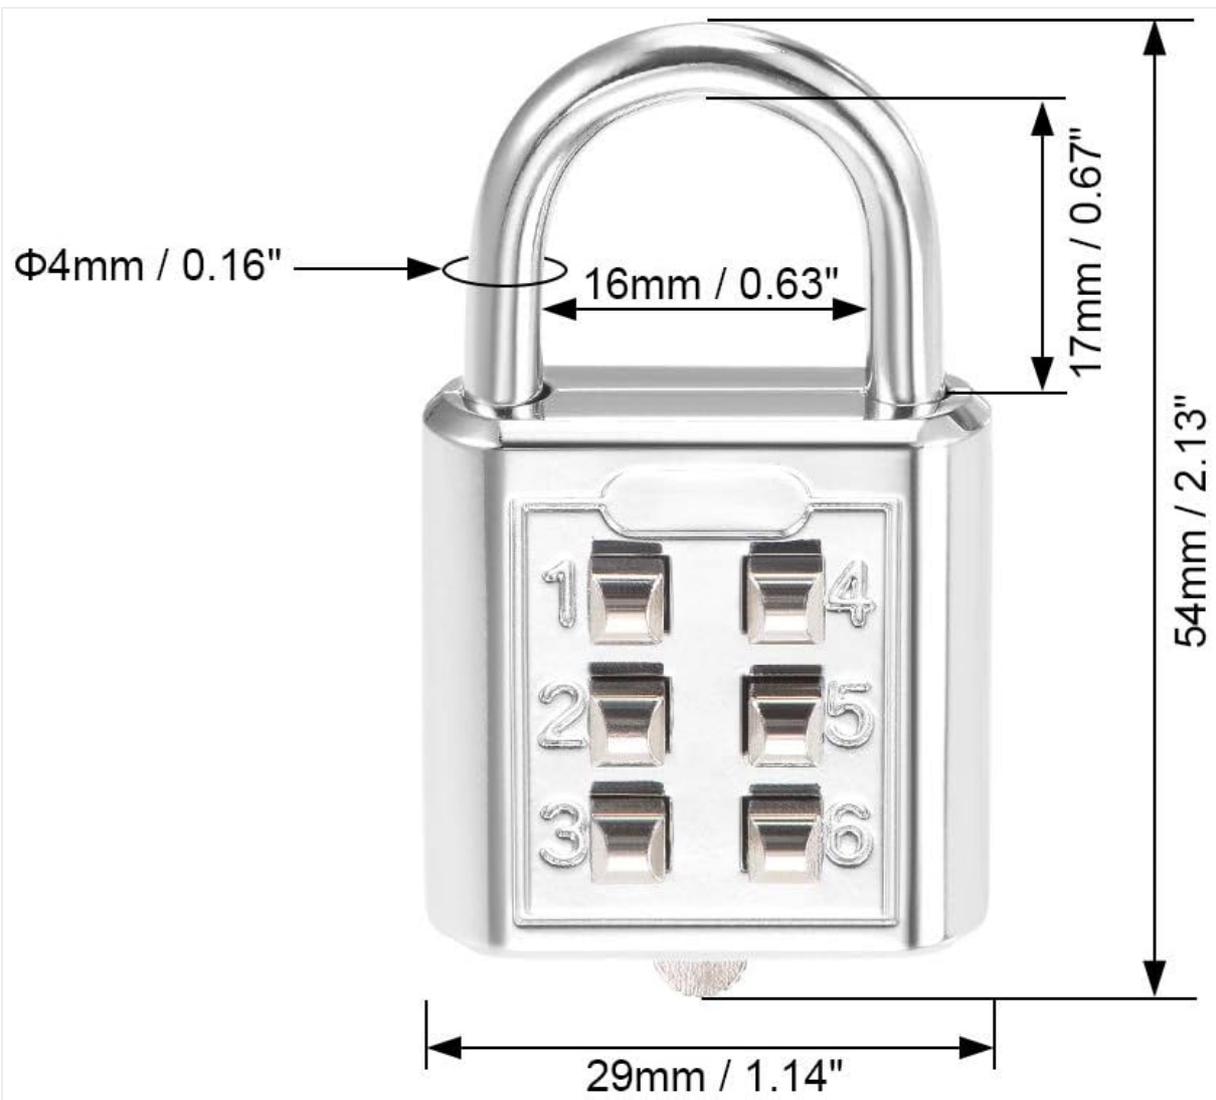


Image: A detailed diagram illustrating the dimensions of the padlock, including shackle diameter, internal shackle width and height, and total lock width and height.

SETUP

This uxcell combination padlock comes with a **pre-set, unchangeable 3-digit combination**. Each lock has a unique, randomly generated code. It is not possible to modify this code.

- 1. Identify Your Code:** The unique 3-digit combination for your specific padlock is typically provided on a sticker or small tag attached to the lock, or sometimes printed on the packaging. Locate this code before attempting to open the lock.
- 2. Initial Opening:** To open the lock for the first time, press the three buttons corresponding to your pre-set combination simultaneously.
- 3. Release Shackle:** Once the correct buttons are pressed, the shackle will release, allowing you to open the padlock.

Important: Do not attempt to change the combination. The lock is designed with a fixed, factory-set code.

OPERATING INSTRUCTIONS

Follow these steps to operate your combination padlock:

- 1. To Open the Lock:**

- Ensure all six push buttons are in their 'reset' or 'out' position.
- Press the three buttons that correspond to your unique pre-set combination. Press them firmly and simultaneously.
- The shackle will spring open.

2. To Close and Secure the Lock:

- Align the shackle with the lock body and push it down firmly until it clicks into place.
- Once the shackle is closed, press any of the other buttons (not part of your combination) to 'scramble' the combination and secure the lock. This ensures the lock cannot be opened by simply pulling the shackle.



Image: The padlock shown with its shackle in the open position, ready for use or to be secured.

MAINTENANCE

To ensure the longevity and proper function of your padlock, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the lock periodically with a soft, dry cloth to remove dust and grime. Avoid using abrasive cleaners or solvents, as these can damage the finish or internal mechanisms.
- **Lubrication:** If the shackle or buttons become stiff, apply a small amount of graphite lubricant or a silicone-based spray lubricant to the moving parts. Do not use oil-based lubricants, as they can attract dirt.

- **Storage:** When not in use, store the padlock in a dry environment to prevent corrosion.
- **Environmental Exposure:** While designed for indoor and outdoor use, prolonged exposure to extreme weather conditions (e.g., heavy rain, saltwater) may accelerate wear.

TROUBLESHOOTING

If you encounter issues with your padlock, consider the following:

- **Lock Will Not Open:**
 - **Verify Combination:** Double-check that you are using the correct 3-digit pre-set combination. Remember, the combination cannot be changed.
 - **Button Engagement:** Ensure all three combination buttons are pressed fully and simultaneously. Sometimes, incomplete pressing can prevent the lock from opening.
 - **Reset Buttons:** Make sure all other buttons are in their 'reset' or 'out' position before attempting to enter the combination.
- **Shackle is Stiff:**
 - Apply a small amount of graphite or silicone lubricant to the shackle mechanism.
 - Check for any obstructions or debris around the shackle entry points.

If problems persist after following these steps, contact uxcell customer support for further assistance.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For any product-related inquiries, technical support, or warranty claims, please refer to the uxcell official website or contact their customer service directly through the retailer where the product was purchased.