

[Manuals.plus](#) /

> [ART+SOUND](#) /

> Art+Sound Waterproof Bluetooth Floating Bath & Shower Speaker User Manual

ART+SOUND AR4083AXEBK

Art+Sound Waterproof Bluetooth Floating Bath & Shower Speaker

Model: AR4083AXEBK

1. INTRODUCTION

Thank you for purchasing the Art+Sound Waterproof Bluetooth Floating Bath & Shower Speaker. This manual provides essential information for the safe and effective use of your new speaker. Please read it thoroughly before operation and retain it for future reference.

Product Overview





Image 1.1: Front view of the Art+Sound Waterproof Bluetooth Speaker, showing the speaker grille, control buttons, and attached suction cup for mounting.

The Art+Sound Waterproof Bluetooth Speaker is designed for use in wet environments such as bathrooms and showers. It features Bluetooth connectivity for wireless audio streaming and a suction cup for easy mounting on smooth surfaces.



Image 1.2: The speaker shown mounted on a tiled shower wall, demonstrating its intended use environment.

Package Contents



Image 1.3: Rear view of the product packaging, indicating included items and key features.

Please check the package contents to ensure all items are present:

- Art+Sound Wireless Speaker
- Suction Cup (pre-attached or separate)
- Charging Cable
- User Manual (this document)

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not disassemble, repair, or modify the speaker. This may void the warranty and pose a safety risk.
- Keep the speaker away from extreme temperatures, direct sunlight, and open flames.
- Ensure the charging port cover is securely closed before exposing the speaker to water.
- Do not immerse the speaker in water deeper than specified or for extended periods. While waterproof, it is not designed for continuous submersion.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.

3. SETUP

3.1 Charging the Speaker

Before first use, fully charge the speaker. Locate the charging port, usually protected by a rubber flap, and connect the provided USB charging cable to the speaker and a USB power source (e.g., computer USB port, USB wall adapter).

- A red indicator light typically illuminates during charging.
- The light will turn off or change color when charging is complete.

Ensure the charging port cover is firmly sealed after charging to maintain the speaker's waterproof integrity.

3.2 Bluetooth Pairing

To connect the speaker to your Bluetooth-enabled device:

1. **Power On:** Press and hold the Power button () on the speaker until you hear an audible prompt or see an indicator light flash.
2. **Pairing Mode:** The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing blue LED.
3. **Enable Bluetooth:** On your device (smartphone, tablet, etc.), go to the Bluetooth settings and ensure Bluetooth is enabled.
4. **Select Speaker:** Search for available devices. You should see "Art+Sound Speaker" or a similar name (e.g., "AR4083AXEBK"). Select it to connect.
5. **Confirmation:** Once successfully paired, the speaker will usually provide an audible confirmation, and the LED indicator will turn solid blue or turn off.

The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device is within range and has Bluetooth enabled.

4. OPERATING INSTRUCTIONS

4.1 Button Functions



Image 4.1: Detailed view of the speaker's control panel, typically located on the front or side.

Button/Icon	Function
(Power)	Press and hold to Power On/Off.
▶▶ (Next Track)	Press to skip to the next track.
◀◀ (Previous Track)	Press to go to the previous track.
▶⊗ (Play/Pause)	Press to Play or Pause music. Press to Answer/End calls.
+ (Volume Up)	Press to increase volume.
- (Volume Down)	Press to decrease volume.

4.2 Music Playback

After successfully pairing your device, open your music application and begin playback. You can control the volume, play/pause, and skip tracks using the buttons on the speaker or directly from your connected device.

4.3 Answering/Ending Calls

If your speaker is connected to a smartphone, it can be used to manage calls:

- **Answer Call:** When a call comes in, press the Play/Pause button ) once to answer.
- **End Call:** During a call, press the Play/Pause button ) once to end the call.
- **Reject Call:** To reject an incoming call, press and hold the Play/Pause button ) for a few seconds.

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, wipe it with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the surface or compromise the waterproof seal. Ensure the charging port cover is closed during cleaning.

5.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to fully charge the speaker before storing it for a long time to preserve battery life.

6. TROUBLESHOOTING

If you encounter issues with your speaker, please refer to the following common problems and solutions:

Problem	Possible Solution
Speaker will not turn on.	Ensure the speaker is fully charged. Connect it to a power source and try again.
Cannot pair with Bluetooth device.	◦ Ensure the speaker is in pairing mode (flashing blue LED). ◦ Make sure Bluetooth is enabled on your device. ◦ Move the speaker closer to your device. ◦ Forget/remove the speaker from your device's Bluetooth list and try pairing again. ◦ Restart both the speaker and your device.
No sound or low volume.	◦ Increase the volume on both the speaker and your connected device. ◦ Ensure the speaker is properly paired and connected. ◦ Check if the audio source is playing.
Sound distortion.	◦ Reduce the volume on both the speaker and your device. ◦ Move the speaker closer to your device to avoid interference. ◦ Ensure the speaker is fully charged.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	AR4083AXEBK
Brand	ART+SOUND
Connectivity	Bluetooth
Material	Plastic
Color	Black
Product Dimensions (L x W x H)	2.54 x 2.54 x 2.54 cm (1 x 1 x 1 inch)
Item Weight	204 g
UPC	680079349929
Manufacturer	Southern Telecom

8. WARRANTY AND SUPPORT

This product is covered by a limited warranty. For detailed warranty information, please refer to the warranty card included in your original packaging or visit the manufacturer's official website. Keep your purchase receipt as proof of purchase.

For technical support, troubleshooting assistance, or warranty claims, please contact Art+Sound customer service. Contact information can typically be found on the product packaging or the manufacturer's website.

Manufacturer: Southern Telecom

© 2023 ART+SOUND. All rights reserved.

Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ART+SOUND is under license.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07V7GR6RK>

More documents and user manuals: <https://manuals.plus/>