

[manuals.plus](#) /

› [auna](#) /

› [auna Oakland Retro Stereo System User Manual](#)

**auna Oakland**

# auna Oakland Retro Stereo System User Manual

Model: Oakland

## 1. INTRODUCTION

Thank you for purchasing the auna Oakland Retro Stereo System. This versatile audio system combines classic design with modern functionality, allowing you to enjoy music from various sources including vinyl records, CDs, cassette tapes, DAB+/FM radio, Bluetooth devices, and USB/SD media. This manual provides essential information for safe operation, setup, and maintenance of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INSTRUCTIONS

- **Power Source:** Ensure the power supply matches the voltage specified on the unit.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the unit on a stable, flat surface to prevent it from falling.

## 3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, contact your retailer.

- auna Oakland Retro Stereo System
- Remote control
- 45 RPM adapter
- Connection cable (headphone, AUX)

- User Manual

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your auna Oakland Retro Stereo System.



Figure 4.1: The auna Oakland Retro Stereo System with its included remote control, offering simple and convenient operation.



**DAB/DAB+**

## BEST RECEPTION

With DAB+ and FM radio tuners

**Figure 4.2:** Front panel of the stereo system, highlighting the DAB+ and FM radio tuners for optimal reception.



**Figure 4.3:** The front-facing USB port and SD card slot, enabling versatile music playback and recording capabilities.



## THREE SPEEDS

Belt drive with  
33, 45 & 78 rpm

**Figure 4.4:** The turntable features a belt drive with three selectable speeds: 33, 45, and 78 revolutions per minute.




**Figure 4.5:** The integrated CD player features an extendable tray for easy disc loading and playback.



## REAL RETRO

Integrated cassette deck for playback  
of audio cassettes

**Figure 4.6:** The side-mounted cassette deck allows for playback of audio cassette tapes, offering a true retro experience.

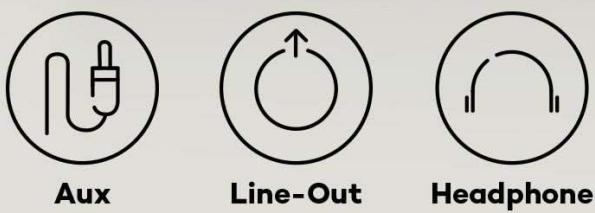

## EXTENDABLE

Including AUX input and headphone connection, line output on the back

**Figure 4.7:** Connectivity options include an AUX input, headphone connection, and a line output on the back for external audio devices.

## 5. SETUP

### 5.1 Connecting the Speakers

1. Locate the speaker terminals on the back of the main unit and on each speaker.
2. Connect the red wire from the right speaker to the red (+) terminal on the main unit and the right speaker.
3. Connect the black wire from the right speaker to the black (-) terminal on the main unit and the right speaker.
4. Repeat the process for the left speaker. Ensure correct polarity for optimal sound quality.

### 5.2 Power Connection

1. Ensure the unit is switched off.
2. Plug the power cord into a standard wall outlet (230V, 50Hz).

### 5.3 Antenna Connection

For optimal DAB+ and FM radio reception, extend the telescopic antenna fully.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 General Operation

- **Power On/Off:** Press the POWER button to turn the unit on or off.
- **Mode Selection:** Press the MODE button to cycle through available functions: PHONO (Turntable), CD, TAPE (Cassette), FM/DAB, BT (Bluetooth), USB, SD, AUX.
- **Volume Control:** Use the VOLUME knob or the remote control to adjust the sound level.

### 6.2 Turntable Operation (PHONO)

1. Lift the dust cover.
2. Place a record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch. Use the 45 RPM adapter for singles.
4. Release the tone arm lock.
5. Gently lift the tone arm and position the stylus over the desired track on the record.
6. Lower the tone arm slowly onto the record. Playback will begin.
7. At the end of the record, the tone arm will automatically return to its rest position (if auto-stop is enabled).

### 6.3 CD Player Operation

1. Press the MODE button to select CD mode.
2. Press the OPEN/CLOSE button to open the CD tray.
3. Place a CD (label side up) into the tray.
4. Press the OPEN/CLOSE button again to close the tray. The unit will read the disc.
5. Press the PLAY/PAUSE button to start or pause playback.
6. Use the SKIP buttons to navigate between tracks.

### 6.4 Cassette Deck Operation (TAPE)

1. Press the MODE button to select TAPE mode.
2. Press the EJECT button on the cassette deck to open the cassette compartment.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment.
5. Press the PLAY button to start playback.
6. Use the FAST FORWARD and REWIND buttons to navigate the tape.
7. Press the STOP button to end playback.

### 6.5 DAB+/FM Radio Operation

1. Press the MODE button to select FM/DAB mode.
2. For DAB+ radio, the unit will automatically scan for available stations on first use. For manual tuning, use the TUNING knob.
3. For FM radio, use the TUNING knob to manually tune to a station.
4. Press the MENU/INFO button to view station information (DAB+).

## 6.6 Bluetooth Operation (BT)

1. Press the MODE button to select BT mode. The display will show "BT" and the unit will enter pairing mode.
2. Enable Bluetooth on your external device (smartphone, tablet, etc.).
3. Search for "auna Oakland" in your device's Bluetooth list and select it to pair.
4. Once paired, you can play music from your device through the stereo system.

## 6.7 USB/SD Playback and MP3 Recording

1. **Playback:** Insert a USB drive or SD card into the respective slot. Press the MODE button to select USB or SD mode. The unit will automatically begin playing compatible audio files.
2. **MP3 Recording:** You can record audio from the turntable, CD player, or cassette deck directly to a USB drive or SD card.
3. Select the desired source (PHONO, CD, or TAPE).
4. Insert a USB drive or SD card.
5. Start playback on the source (e.g., play a record).
6. Press the REC button on the unit. The recording will begin.
7. Press the REC button again to stop recording. The recorded MP3 files will be saved to the USB drive or SD card.

## 6.8 AUX Input

Connect an external audio device (e.g., MP3 player) to the AUX IN jack using the provided 3.5mm audio cable. Select AUX mode to play audio from the connected device.

# 7. MAINTENANCE

---

## 7.1 Cleaning the Unit

- Always unplug the unit before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

## 7.2 Turntable Maintenance

- **Stylus:** Clean the stylus regularly with a soft brush, brushing from back to front. Replace the stylus when worn (typically after 300-500 hours of play).
- **Dust Cover:** Keep the dust cover closed when not in use to protect the turntable from dust.

## 7.3 CD Player Maintenance

- Handle CDs by their edges to avoid fingerprints and scratches.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

## 7.4 Cassette Deck Maintenance

- Clean the tape heads and pinch rollers periodically with a cotton swab lightly dampened with isopropyl alcohol.
- Avoid using damaged or tangled cassette tapes.

# 8. TROUBLESHOOTING

---

If you encounter issues with your stereo system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely plugged in; Try a different outlet
No sound	Volume too low; Incorrect mode selected; Speakers not connected	Increase volume; Select correct input mode; Check speaker connections
Turntable not spinning	Speed selector incorrect; Belt dislodged	Set correct speed; Contact service for belt inspection
Poor radio reception	Antenna not extended; Weak signal	Extend telescopic antenna fully; Reposition the unit for better signal
Bluetooth not connecting	Unit not in pairing mode; Device too far; Device already paired	Ensure unit is in BT mode; Move device closer; Unpair from other devices
CD/USB/SD not playing	Disc/media damaged or incompatible format; Media not inserted correctly	Check disc/media condition and format; Reinsert media correctly

## 9. SPECIFICATIONS

Feature	Description
Brand	auna
Model Name	Oakland
Part Number	TTS6-90400-tabf
Product Dimensions	30 x 32.5 x 21.5 cm
Weight	4 kg
Power Source	230 V, 50 Hz
Wattage	5 watts
Turntable Speeds	33, 45, 78 RPM
CD Player	MP3 compatible
Radio Tuner	DAB+, FM
Connectivity	Bluetooth, USB, SD, AUX-in (3.5mm), Stereo RCA Line-out, Headphone-out (3.5mm)
Recording Function	MP3 encoding from CD, Cassette, Turntable to USB/SD
Material	Plastic
Color	Black

## 10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the documentation provided with your purchase or contact your retailer. If you require technical support or have questions not covered in this manual, please contact auna customer service.