

Samsung Electronics SM-T860NZALXAR

Samsung Galaxy Tab S6 User Manual

Model: SM-T860NZALXAR
Brand: Samsung Electronics

INTRODUCTION

The Samsung Galaxy Tab S6 is an ultra-slim 2-in-1 tablet designed to offer a PC-like experience with the mobility of a tablet. It features a 10.5-inch Super AMOLED display, powerful mobile processor, and an intuitive S Pen for enhanced productivity and entertainment. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

WHAT'S IN THE BOX

Verify that all items are present in your product packaging:

- Samsung Galaxy Tab S6 Tablet
- Charger
- S Pen

SETUP

1. Powering On

Press and hold the Power button located on the side of the tablet until the Samsung logo appears. The tablet will boot up and guide you through the initial setup process.

2. Initial Setup Wizard

Follow the on-screen prompts to select your language, region, and agree to the terms and conditions.

3. Connecting to Wi-Fi

Select your preferred Wi-Fi network from the list and enter the password if required. A stable internet connection is recommended for completing the setup and downloading updates.

4. Account Setup

Sign in with your Google account or create a new one. You may also be prompted to sign in with or create a Samsung account to access additional features and services.

5. S Pen Setup

The S Pen attaches magnetically to the back of the tablet for storage and charging. Ensure it is properly attached to pair and charge it. Once paired, you can customize S Pen settings in the tablet's settings menu.



Front view of the Samsung Galaxy Tab S6 with the S Pen.

OPERATING INSTRUCTIONS

1. Navigation and Gestures

Navigate your tablet using touch gestures such as tapping, swiping, pinching, and spreading. The Android operating system provides an intuitive interface for launching apps, managing notifications, and accessing quick settings.

2. Using the S Pen

The S Pen enhances your tablet experience with precision input. Use it for note-taking, drawing, and navigating. Air Actions allow you to control certain functions remotely by pressing the S Pen button and making gestures. Customize S Pen functions in Settings > Advanced features > S Pen.

3. Samsung DeX

Transform your tablet into a PC-like desktop experience with Samsung DeX. Access DeX mode from the Quick Panel or by connecting a compatible keyboard cover (sold separately). DeX allows for a multi-window interface, drag-and-drop functionality, and desktop-optimized applications.

4. Multitasking

The Galaxy Tab S6 supports split-screen view and pop-up view for efficient multitasking. To use split-screen, open the Recent Apps screen, tap the app icon at the top of the window, and select 'Open in split screen view'.



Back view of the Samsung Galaxy Tab S6 with the S Pen magnetically attached.

MAINTENANCE

1. Battery Management

To maximize battery life, avoid exposing the tablet to extreme temperatures. Use the Fast-Charging battery and charger provided. For optimal battery health, avoid fully discharging the battery frequently and consider keeping the charge between 20% and 80% for daily use.

2. Cleaning

Gently wipe the screen and body of the tablet with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Device Not Turning On

Ensure the tablet is sufficiently charged. Connect the charger and wait a few minutes before attempting to power on again. If the issue persists, try holding the Power button and Volume Down button simultaneously for about 7-10 seconds to force a restart.

Wi-Fi Connectivity Issues

Check if Wi-Fi is enabled in Quick Settings or the Settings app. Restart your Wi-Fi router and the tablet. If the problem continues, try forgetting the network and reconnecting, or reset network settings on the tablet.

S Pen Not Responding

Ensure the S Pen is properly attached to the magnetic charging area on the back of the tablet to ensure it is charged and connected. If it's charged, try restarting the tablet. Check S Pen settings in the tablet's settings menu for any disabled features.

SPECIFICATIONS

Feature	Detail
Standing screen display size	10.5 Inches
Screen Resolution	2560 x 1600 pixels
Processor	2.84 GHz AMD_Kabini_A6_5200M_Quad_Core
RAM	8 GB
Hard Drive	256 GB
Graphics Coprocessor	Qualcomm Snapdragon 855
Wireless Type	2.4 GHz Radio Frequency, 5 GHz Radio Frequency, 802.11a/b/g/n/ac, Bluetooth
Average Battery Life	10 Hours
Operating System	Android
Item Weight	15.2 ounces

Product Dimensions	0.22 x 6.28 x 9.63 inches
Color	Gray
Rear Webcam Resolution	20 MP

WARRANTY AND SUPPORT

Your Samsung Galaxy Tab S6 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For detailed information, additional support, or to download the full user guide, please visit the official Samsung support website or refer to the PDF user guide:

[Download User Guide \(PDF\)](#)

[Samsung Official Support](#)