

[Manuals.plus](#) /

› [Digipartspower](#) /

› Digipartspower AC Power Cord Instruction Manual for Ignite Pro Speakers

Digipartspower AC Power Cord, Type A, 12-inch, Male-to-Female

Digipartspower AC Power Cord Instruction Manual

For Ignite Pro PS-12BT, PPS-12BT, PSC-212BT, PPS-15BT 12-inch Pro Series Active Speakers

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Digipartspower AC Power Cord. This power cord is designed to provide power to compatible devices, specifically Ignite Pro PS-12BT, PPS-12BT, PSC-212BT, and PPS-15BT 12-inch Pro Series Active Speakers. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

WARNING: To prevent electric shock, fire, or damage to the product or connected devices, always observe the following safety precautions:

- **Compatibility Check:** Before connecting, verify that the socket size, power consumption, and polarity of your device are compatible with this power cord. Incorrect compatibility may lead to malfunction or damage.
- **Proper Connection:** Ensure the power cord is fully inserted into both the wall outlet and the device's power inlet. A loose connection can cause overheating or intermittent power.
- **Avoid Overloading:** Do not overload wall outlets or extension cords.
- **Protection Features:** This product includes Over Current Protection, Over Voltage Protection (OVP), Over Temperature Protection (OTP), and Short Circuit Protection (SCP). These features are designed to protect your devices, but proper usage is still essential.
- **Environmental Conditions:** Do not expose the power cord to water, excessive moisture, or extreme temperatures. Use indoors only.
- **Damage Inspection:** Regularly inspect the power cord for any signs of damage, such as frayed wires or cracked insulation. Do not use a damaged cord.
- **Children and Pets:** Keep the power cord out of reach of children and pets to prevent accidental injury or damage.

3. PRODUCT OVERVIEW

The Digipartspower AC Power Cord is a replacement power cable designed for specific audio equipment. It features a standard Type A male plug for wall outlets and a C7 (figure-8) female connector for the device.



Image 1: The Digipartspower AC Power Cord, showing the Type A male plug and the C7 female connector. The cable is black and coiled.



Image 2: A close-up view of the Digipartspower AC Power Cord, highlighting the Type A male plug (two flat parallel prongs) and the C7 female connector (figure-8 shape) from a different angle.

4. SETUP

Follow these steps to properly connect your AC Power Cord:

1. **Identify Connectors:** Locate the Type A male plug and the C7 (figure-8) female connector on the power cord.
2. **Connect to Device:** Insert the C7 female connector firmly into the power inlet of your compatible Ignite Pro speaker (e.g., PS-12BT, PPS-12BT, PSC-212BT, PPS-15BT). Ensure it is fully seated.
3. **Connect to Power Outlet:** Insert the Type A male plug into a standard wall power outlet. Ensure it is fully inserted and secure.
4. **Power On Device:** Once the power cord is securely connected, you may power on your device according to its own instructions.

5. OPERATING

This AC power cord functions as a direct power supply for your compatible electronic devices. Once connected as described in the 'Setup' section, it continuously provides power from the wall outlet to the device. There are no user-adjustable settings on the power cord itself.

6. MAINTENANCE

To ensure the longevity and safe operation of your Digipartspower AC Power Cord, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power cord from both the wall outlet and the device before cleaning. Wipe the cord with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the power cord in a cool, dry place, away from direct sunlight and excessive heat. Avoid tightly coiling or bending the cord sharply, which can damage the internal wires.
- **Inspection:** Periodically inspect the entire length of the cord, including the plugs and connectors, for any signs of wear, cuts, or damage. If any damage is found, discontinue use immediately and replace the cord.

7. TROUBLESHOOTING

If your device is not receiving power after connecting the Digipartspower AC Power Cord, consider the following:

- **Check Connections:** Ensure both the Type A plug and the C7 connector are fully and securely inserted into their respective sockets.
- **Verify Power Outlet:** Test the wall outlet with another known working appliance to confirm it is supplying power.
- **Device Power Switch:** Ensure the power switch on your Ignite Pro speaker is in the 'ON' position.
- **Cord Damage:** Inspect the power cord for any visible damage. If damaged, do not use it.
- **Compatibility:** Reconfirm that the power cord is compatible with your specific device model and power requirements.

If the issue persists after performing these checks, contact customer support or a qualified technician.

8. SPECIFICATIONS

Brand	Digipartspower
-------	----------------

Connector Gender	Male-to-Female
Plug Format	Type A
Item Length	12 inches
Plug Type	Type A
Number of Outlets	1
Color	Black
UPC	751332169469
ASIN	B07VB2X37Y

9. WARRANTY AND SUPPORT

Warranty: This Digipartspower product comes with a 3-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

Return Policy: If you are not satisfied with your purchase, you may be eligible for a refund or replacement within 30 days of purchase, subject to the seller's return policy.

Customer Support: For technical assistance, warranty claims, or further inquiries, please contact Digipartspower customer service through the retailer where the product was purchased or visit the official Digipartspower store page on Amazon: [Digipartspower Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

