



Manuals.plus /

› BANDAI /

› BANDAI Pomsies Trixie Interactive Plush Fox - SK18041 User Manual

BANDAI SK18041

BANDAI Pomsies Trixie Interactive Plush Fox - SK18041 User Manual

Model: SK18041 | Brand: BANDAI

INTRODUCTION

Welcome to the world of Pomsies! This manual will guide you through the features and functions of your new BANDAI Pomsies Trixie interactive plush fox. Trixie is a soft, interactive plush toy designed to be a companion that reacts to touch and sound, expresses emotions through its light-up eyes, and can be worn as a fashion accessory.



Image: Pomsies Trixie interactive plush fox, model SK18041, shown in its original packaging.

IMPORTANT SAFETY INFORMATION

WARNING: Not suitable for children under 36 months. Contains small elements that may be swallowed. Adult supervision is recommended.

SETUP

1. Unboxing

Carefully remove your Pomsies Trixie from its packaging. Ensure all components, including the plush toy and the small brush, are present.



Image: Pomsies Trixie interactive plush fox removed from its packaging, ready for play.

2. Battery Installation

Pomsies Trixie requires batteries to operate. Locate the battery compartment, usually on the back or underside of the plush. Use a small screwdriver to open the compartment. Insert the required batteries (type and quantity typically specified on the compartment cover or in a small leaflet) ensuring correct polarity. Close the compartment securely.

Note: If the toy does not respond or behaves erratically, check the battery installation or replace with fresh batteries. Some users have reported that fresh batteries resolve initial operational issues.

OPERATING YOUR POMSIES TRIXIE

Interactive Features

Your Pomsies Trixie is designed to react to touch and sound with over 50 different reactions. Its eyes will

light up and change color to indicate its mood and needs.

- **Touch Interaction:** Pet Trixie's head, back, or nose to elicit different responses like purring, sounds, and eye color changes.
- **Sound Interaction:** Trixie may react to sounds around it.
- **Eye Color Indicators:** Trixie's eyes will glow in various colors to communicate its feelings. For example, a specific color might indicate hunger, tiredness, or happiness. Refer to the small guide included in the packaging for a detailed explanation of each eye color and its corresponding mood.



Image: A close-up view of Pomsies Trixie, highlighting its expressive, light-up eyes.

Playing with Trixie

Pomsies Trixie offers two main play modes:

- **Companion Mode:** In this mode, Trixie acts as an interactive pet, responding to your touch and sounds. Its eyes will indicate its needs, such as hunger (feed it by pressing its nose) or a desire for affection (pet it).
- **Dance Mode:** Trixie can also enter a dance mode where it will play music and encourage you to dance along. Specific interactions (e.g., shaking it gently) might activate this mode.

Use the included brush to groom Trixie. Brushing it can also trigger positive reactions and purring sounds.



Image: A Pomsies plush toy being gently brushed with its accessory brush, demonstrating care.

Wearing Trixie

Trixie's flexible tail allows it to be wrapped and secured around various items, transforming it into a wearable accessory.

- **Wrist:** Gently wrap Trixie's tail around your wrist.
- **Backpack:** Attach Trixie to your backpack strap or handle.
- **Hair:** Secure Trixie in your hair for a unique style.
- **Other items:** Get creative and attach Trixie to other suitable items.



Image: A Pomsies plush toy with its tail wrapped around a child's wrist, demonstrating its wearable feature.



Image: A Pomsies plush toy attached to a backpack, showcasing its versatility as an accessory.

MAINTENANCE

Cleaning

To clean your Pomsies Trixie, gently wipe the surface with a damp cloth. Do not immerse the toy in water, as this can damage the electronic components. Allow it to air dry completely.

Battery Replacement

When Trixie's reactions become weak or stop, it's time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always use new batteries of the specified type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trixie does not turn on or respond.	Dead or incorrectly installed batteries.	Check battery polarity or replace with fresh batteries.
Trixie's reactions are weak or inconsistent.	Low battery power.	Replace batteries with new ones.
Trixie makes repetitive sounds or seems stuck.	Battery issue or temporary electronic glitch.	Turn Trixie off and on again. If the problem persists, replace the batteries.

SPECIFICATIONS

Brand: BANDAI

Model Name: SK18041

Character: Trixie (Fox)

Material: Plush

Color: Multicolored

Dimensions (L x W x H): 10 cm x 7.6 cm x 35 cm (approximately 3.9 x 3 x 13.8 inches)

Recommended Age: 36 months (3 years) to 99 years

Batteries Required: Yes

GTIN/UPC: 810017180417

Interactive Features: Sound and touch reactions, light-up eyes, 2 play modes (companion, dance), over 50 sounds.

WARRANTY AND SUPPORT

Warranty Information

This product comes with a manufacturer's warranty of **1 year from the invoice date**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support

For further assistance, technical support, or warranty inquiries, please contact BANDAI customer service. Contact details can typically be found on the product packaging or the official BANDAI website.