

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Amazon Basics](#) /
- › [Amazon Basics Programmable Bread Maker User Manual](#)

Amazon Basics BM1349-UL-W

Amazon Basics Programmable Bread Maker User Manual

Model: BM1349-UL-W | Brand: Amazon Basics

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Amazon Basics Programmable Bread Maker. Designed for ease of use, this appliance automatically mixes, kneads, rises, and bakes fresh bread, offering a convenient solution for homemade baked goods.

Please read all instructions carefully before using the appliance to ensure proper function and safety.

PRODUCT OVERVIEW



Figure 1: Front view of the Amazon Basics Bread Maker, showcasing its compact design and control panel.



Figure 2: Top-down view of the bread maker with the lid open, showing the interior cavity for the bread pan.

Key Features:

- **550 Watt Power:** Efficiently bakes bread with consistent results.
- **2 Pound Loaf Capacity:** Accommodates various loaf sizes up to 2 pounds.
- **Non-Stick Bread Pan:** Ensures easy removal of baked bread and simplifies cleaning.
- **14 Pre-programmed Settings:** Includes options for basic bread, French bread, whole wheat, quick bread, sweet bread, gluten-free, dough, kneading, cake, express bake, jam, yogurt, and homemade recipes.
- **3 Crust Color Options:** Select from light, medium, or dark crusts.
- **ExpressBake Setting:** Bakes bread in less than 90 minutes for quick results.
- **LCD Display:** Provides clear information on selected settings and remaining time.

Included Accessories



Bread pan



Measuring cup



Kneading blade



Measuring spoon



Metal hook for removing the kneading blade

Figure 3: All standard accessories included with your bread maker.

- **Bread Pan:** The primary baking vessel with a non-stick coating.
- **Kneading Blade:** Attaches to the shaft inside the bread pan for mixing and kneading.
- **Measuring Cup:** For accurate liquid measurements.
- **Measuring Spoon:** Features both tablespoon and teaspoon measurements for dry ingredients.
- **Metal Hook:** Used to safely remove the kneading blade from the baked loaf.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Initial Cleaning:** Wash the bread pan, kneading blade, measuring cup, and measuring spoon with warm, soapy water. Rinse

thoroughly and dry completely. Wipe the exterior of the bread maker with a damp cloth.

3. **Placement:** Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the appliance.
4. **First Use (Burn-in):** Before first use, it is recommended to run the "Bake" program (Program 13) for 10 minutes without any ingredients. This helps to burn off any manufacturing residues and odors. Allow the unit to cool completely before cleaning.

OPERATING INSTRUCTIONS

Follow these steps to bake a loaf of bread using your Amazon Basics Bread Maker:

1. Adding Ingredients:

1. Open the lid and remove the bread pan by lifting the handle.
2. Attach the kneading blade securely onto the shaft inside the bread pan.
3. Add ingredients to the bread pan in the order specified by your recipe (typically liquids first, then dry ingredients, with yeast added last on top of the dry ingredients, away from liquids and salt).
4. Ensure the ingredients are evenly distributed.
5. Place the bread pan back into the bread maker, pressing down firmly until it clicks into place. Close the lid.



Figure 4: Proper layering of ingredients in the bread pan.

2. Selecting Program:

- Plug in the bread maker. The display will show "1 3:00" (Basic program, 3 hours).
- Press the **MENU** button repeatedly to cycle through the 14 available programs until your desired program number appears on the display.
- Refer to the list on the bread maker's top panel for program descriptions (e.g., 1. BASIC, 2. FRENCH, 6. GLUTEN FREE, 11. JAM).

Effortless Baking

Provides LCD display with user-friendly controls

Express baking
in less than
90 minutes

3 crust colors:
light, medium
and dark

Auto-functions
for hands-free
baking

Non-stick
pan for easy
cleanup

Compact
design saves
space

14 settings including
gluten-free bread option

Figure 5: Control panel with program list and display.

3. Selecting Loaf Size:

- Press the **LOAF** button to toggle between 1.5 LB (0.7 kg) and 2.0 LB (0.9 kg) loaf sizes. The selected size will be indicated on the display.

4. Selecting Crust Color:

- Press the **COLOR** button to choose your preferred crust color: Light, Medium, or Dark. The indicator on the display will move to your selection.

5. Starting the Baking Process:

- Once all settings are configured, press the **START/STOP** button. The bread maker will begin its cycle.
- The display will show the remaining time.

6. Removing the Baked Bread:

- When the cycle is complete, the bread maker will beep. Press and hold the **START/STOP** button for a few seconds to stop the operation.
- Carefully open the lid. Using oven mitts, lift the bread pan by its handle and remove it from the bread maker.
- Invert the bread pan onto a wire rack or clean surface to release the bread. If the kneading blade remains in the bread, use the provided metal hook to carefully remove it.
- Allow the bread to cool on a wire rack for at least 15-20 minutes before slicing to ensure proper texture.



Figure 6: Removing the bread pan after baking.

MAINTENANCE & CLEANING

Proper maintenance ensures the longevity and performance of your bread maker.

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Bread Pan and Kneading Blade:** Wash with warm, soapy water. Do not use abrasive cleaners or metal scouring pads, as this can damage the non-stick coating. Rinse and dry thoroughly.
3. **Exterior:** Wipe the exterior of the bread maker with a soft, damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Interior:** Use a soft, damp cloth to wipe the interior of the baking chamber. Remove any crumbs or residue.

5. **Storage:** Store the bread maker in a clean, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bread does not rise.	Yeast is old or inactive; incorrect water temperature; too much salt or sugar.	Check yeast expiration date; use lukewarm water (105-115°F); ensure correct ingredient measurements.
Bread is too dense.	Too much flour; not enough liquid; incorrect program selected.	Measure flour accurately (spoon into cup, level off); adjust liquid amount; select appropriate program for bread type.
Kneading blade stuck in bread.	Common occurrence.	Use the provided metal hook to carefully remove the blade after the bread has cooled slightly.
Bread maker emits smoke/odor on first use.	Manufacturing residues burning off.	This is normal for first use. Ensure good ventilation. If it persists, contact support.

SPECIFICATIONS

Attribute	Detail
Model Number	BM1349-UL-W
Brand	Amazon Basics
Color	White
Wattage	550 watts
Product Dimensions (D x W x H)	11.6" x 9.17" x 11.6"
Item Weight	7.57 pounds
Number of Programs	14
Product Care Instructions	Wipe with Dry Cloth



Figure 7: Product dimensions for space planning.





WARRANTY & SUPPORT

For detailed warranty information, please refer to the Warranty PDF document provided with your purchase or available online. For customer support, technical assistance, or to inquire about replacement parts, please visit the official Amazon Basics support page or contact their customer service.

You can also find the full user manual in PDF format here:[Amazon Basics Bread Maker User Manual \(PDF\)](#)

© 2024 Amazon Basics. All rights reserved.

Related Documents - BM1349-UL-W

<div><p>12-Cup Digital Coffee Maker with Reusable Filter Cafetière Numérique 12 Tasses avec Filtre Réutilisable Cafetiera Digital para 12 Tazas con Filtro Reutilizable B084ZD19SP</p><p>Page 1 of 21</p></div>	<p>Amazon Basics 12-Cup Digital Coffee Maker User Manual</p> <p>User manual for the Amazon Basics 12-Cup Digital Coffee Maker with Reusable Filter. Includes safety instructions, operation guide, cleaning and maintenance, troubleshooting, and specifications.</p>
<div><p>Coffee Maker with Reusable Filter Cafetière avec Filtre Réutilisable Cafetiera con Filtro Reutilizable B084ZD19SP</p><p>Page 1 of 18</p></div>	<p>Amazon Basics 12-Cup Coffee Maker with Reusable Filter User Manual</p> <p>Comprehensive user manual for the Amazon Basics 12-Cup Coffee Maker with Reusable Filter, covering safety instructions, product description, operation, cleaning, maintenance, troubleshooting, and specifications.</p>
<div><p>Bread Maker with 15 Baking Programs including Gluten Free, Machine à Pain avec 15 Programmes de Cuisson (Sans Gluten Compris), 700-800 g, 500 W Broodmaker met 15 Bakprogramma's (Inclusief Glutenvrij), 700-800 g, 500 W Painmaker con 15 Programas de Hornado (Incluido sin gluten), 700-800 g, 500 W Brotbackemaschine mit 15 Backprogrammen (Inklusive Glutenfrei), 700-800 g, 500 W B07TMATYU, B07TLL3Z2</p></div>	<p>AmazonBasics Bread Maker User Manual</p> <p>Comprehensive user manual for the AmazonBasics Bread Maker, detailing its features, operation, safety instructions, and recipes for various bread types.</p>
<div><p>Amazon Basics AB23AGM128D1 Gaming Mouse</p></div>	<p>Amazon Basics AB23AGM128D1 Gaming Mouse User Manual</p> <p>User manual for the Amazon Basics AB23AGM128D1 Gaming Mouse, detailing setup, performance settings, software customization, button mapping, macro functions, and responsible e-waste disposal.</p>



Cylinder Bagless Vacuum Cleaner 2.5 L 700 W
Aspirateur cylindrique sans sac 2,5 L 700 W
Beutelsauger Zylinder-Raumdücker 2,5 L 700 W
Aspiratore a Cilindro Senza Sacchi 2,5 L 700 W
Aspirador Cilíndrico Sin Bolsa 2,5 L 700 W
Cilinder amb saca Borsapaga 2,5 L 700 W
©2017 Amazon.com, BE00575754, BE00479071



[Amazon Basics Cylinder Bagless Vacuum Cleaner 2.5 L 700 W User Manual](#)

User manual for the Amazon Basics Cylinder Bagless Vacuum Cleaner (2.5 L, 700 W). Covers assembly, operation, cleaning, maintenance, and troubleshooting. Includes model numbers B071VNC8M4, B072FBY7L4, B07C41FMF1 and safety information.



6.34-quart Air Fryer with Digital Touchscreen
Friteuse à Air Chaud de 6,34 Quart avec Écran Tactile
Fritolier
Fritoliers de Aire de 6.34 Cuartos con Pantalla Digital
Modelo: B0754P28K3

Page 2 of 20

[Amazon Basics 6.34-Quart Air Fryer with Digital Touchscreen - User Manual](#)

This user manual provides instructions for the Amazon Basics 6.34-quart Air Fryer with Digital Touchscreen. It covers important safeguards, intended use, setup, operation, cleaning, maintenance, and troubleshooting.