

MELLERUD 2001002374

MELLERUD High-Gloss Front Cleaner User Manual

Brand: MELLERUD | Model: 2001002374

1. PRODUCT OVERVIEW

The MELLERUD High-Gloss Front Cleaner is an effective spray designed for the thorough cleaning of high-gloss surfaces. It effortlessly removes superficial dirt, deeply embedded grease, and fingerprints from kitchen fronts, bathroom furniture, and living room furniture. Its gentle formula ensures safe application on sensitive surfaces such as acrylic glass, glass, painted, and foiled high-gloss finishes, leaving a streak-free shine.

- **Gentle Cleaning:** Formulated to be safe for sensitive high-gloss surfaces.
- **Effective Dirt Removal:** Tackles dirt, grease, and fingerprints.
- **Streak-Free Shine:** Ensures a brilliant, clear finish without streaks.
- **Protects Against Re-contamination:** Regular use helps prevent rapid re-soiling.



Image 1.1: The MELLERUD High-Gloss Front Cleaner in its 0.5L spray bottle.

2. SAFETY INFORMATION

Please read and understand all safety warnings before using the product. Adherence to these guidelines ensures safe and effective use.

- **Keep out of reach of children.**
- Avoid contact with eyes. In case of contact, rinse immediately with plenty of water.
- Do not ingest. If swallowed, seek medical advice immediately and show this container or label.
- Use in a well-ventilated area.
- Store in a cool, dry place, away from direct sunlight.



Image 2.1: Detailed product label showing ingredients and safety instructions. Note the "Keep out of reach of children" pictogram.

3. PREPARATION

Before applying the cleaner, ensure the surface is free from loose debris. For sensitive or unfamiliar surfaces, it is recommended to test the product on an inconspicuous area first to ensure compatibility and desired results.

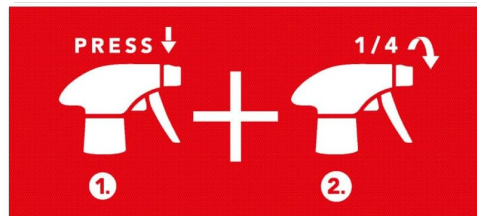


Image 3.1: Instructions for opening the spray nozzle: 1. Press down, 2. Turn 1/4 turn to open.

4. APPLICATION INSTRUCTIONS

Follow these steps for optimal cleaning results:

1. **Prepare the Nozzle:** Ensure the spray nozzle is in the "ON" position by pressing down and turning 1/4 turn (refer to Image 3.1).
2. **Spray Evenly:** Spray the cleaner evenly onto the surface to be treated.
3. **Wipe Immediately:** Immediately wipe the sprayed area with a soft, lint-free cloth. Do not allow the product to dry on the surface.
4. **For Larger Surfaces:** For larger areas, it is recommended to use a squeegee for even distribution and removal. Do not re-polish after wiping.
5. **Close Nozzle:** After use, turn the nozzle back to the "OFF" position to prevent accidental spraying.



Image 4.1: The cleaner in use within a kitchen environment, demonstrating its suitability for kitchen fronts.



Image 4.2: Illustrates the product's effectiveness in removing fingerprints from high-gloss surfaces.



Image 4.3: Depicts a clean kitchen area, highlighting the product's ability to handle grease residues.

5. MAINTENANCE

To prevent heavy soiling and protect surfaces from scratches, it is recommended to use the MELLERUD High-Gloss Front Cleaner regularly. Consistent application helps maintain the pristine, streak-free appearance of your high-gloss furniture and surfaces over time.

6. TROUBLESHOOTING

Below are common issues and their solutions:

Issue	Possible Cause	Solution
Streaks or Residue	Product dried on surface; cloth not lint-free; excessive product used; re-polishing after initial wipe.	Wipe immediately after spraying. Use a clean, soft, lint-free cloth. Do not over-apply. Avoid re-polishing; a single wipe should suffice.
Surface not clean	Heavy soiling; insufficient product; improper wiping technique.	Ensure surface is free of loose debris before spraying. Apply sufficient product. Ensure even wiping. For very stubborn stains, a second application might be necessary after the first has been wiped clean.
Product not spraying	Nozzle is in "OFF" position or clogged.	Ensure nozzle is turned to the "ON" position. If clogged, rinse nozzle under warm water.

7. SPECIFICATIONS

Attribute	Detail
Product Name	MELLERUD High-Gloss Front Cleaner

Attribute	Detail
Model Number	2001002374
Volume	500 Milliliters (0.5 L)
Format	Liquid Spray
Country of Origin	Germany
Manufacturer	MELLERUD CHEMIE GMBH
Product Dimensions	10 x 6 x 20 cm; 600 g
Specific Uses	High-gloss surfaces, acrylic glass, glass, painted, foiled surfaces, kitchen fronts, bathroom furniture, living room furniture.
Scent	Neutral
Barcode/EAN	4004666002374
Additional Information Link	https://bit.ly/3fQIIRq (External resource for product details)

8. WARRANTY AND SUPPORT

Specific warranty details for the MELLERUD High-Gloss Front Cleaner are not provided in the product description. For any product-related inquiries, technical support, or to report issues, please contact MELLERUD customer service directly through their official website or the retailer from whom the product was purchased.

For more information about MELLERUD and their commitment to quality and environmental responsibility, please visit their official brand store:

Visit MELLERUD Brand
Store