

Bewinner Bewinner2dg8ictf49

Bewinner Universal 2-in-1 Smart TV Remote Control Instruction Manual

Model: Bewinner2dg8ictf49

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Bewinner Universal 2-in-1 Smart TV Remote Control. This remote is designed for direct use after battery installation and operates via infrared (IR) technology. Please note that this remote does not support Bluetooth, voice control, cursor pointing, or Air Mouse functions.

Key Features:

- Infrared (IR) transmission for broad compatibility.
- Simple operation without complex programming.
- Large, easy-to-press buttons.
- Comfortable ergonomic design.

2. SETUP

2.1 Battery Installation

To begin using your remote control, you must install two AA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image 2.1: Rear view of the remote control with the battery cover removed, illustrating the correct placement for two AA batteries.

The remote is now ready for use. No additional programming is required for compatible devices.

3. OPERATING INSTRUCTIONS

The Bewinner Universal Remote Control is designed for intuitive operation. Point the remote directly at your television's infrared receiver for optimal performance.



Image 3.1: Overview of the remote control's button layout.

3.1 Basic Functions

- **Power Button (LED):** Turns the television on or off. Located at the top right.
- **Volume Up/Down (VOL +/-):** Adjusts the sound volume.
- **Channel Up/Down (CH +/-):** Changes television channels.
- **Navigation Pad:** Central circular pad with directional arrows (Up, Down, Left, Right) and an 'OK' button in the center for menu navigation and selection.
- **Return/Exit:** Returns to the previous screen or exits a menu.
- **Smart Hub:** Accesses the Smart Hub interface on compatible Smart TVs.
- **Source:** Selects input sources (e.g., HDMI 1, HDMI 2, AV).
- **Menu:** Opens the television's main menu.

- **M.SCREEN MENU:** Accesses the Multi-Screen menu.
- **MY APPS:** Opens the applications menu.
- **Playback Controls:** Includes Play, Pause, Stop, Fast Forward, and Rewind buttons for media playback.



Beautiful appearance and comfortable hand feel

Image 3.2: The remote control's ergonomic design provides a comfortable grip during use.

4. MAINTENANCE

4.1 Cleaning

To clean your remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your Bewinner Universal Remote Control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries. Obstruction between remote and TV.	Check battery orientation and replace with fresh AA batteries. Ensure a clear line of sight to the TV's IR receiver.
Short transmission distance	Weak batteries. Interference.	Replace batteries. Remove any objects blocking the signal path.
Certain buttons not working	Button malfunction or remote not fully compatible with a specific TV function.	Ensure the remote is compatible with your TV model. Clean around the button if it feels stuck.


6. SPECIFICATIONS

- **Model:** Bewinner2dg8ictf49
- **Weight:** Approximately 65g
- **Dimensions:** 13.2 x 5 x 2.3 cm (5.2 x 1.97 x 0.91 inches)
- **Battery Type:** 2 x AA (not supplied)
- **Material:** ABS
- **Connectivity Technology:** Infrared
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 23
- **Compatible TV Models:** RBN59-01185F, BN59-01185D, BN59-01184D, BN59-01182D, BN59-01181D, BN94-07469A, BN94-07557A, BN59-01185A, and various LCD TVs.

7. WARRANTY AND SUPPORT

Bewinner is committed to providing quality products. While specific warranty details are not provided in this manual, if you have any questions about the product or are not satisfied, please contact Bewinner customer support. Your satisfaction is our primary concern, and we will endeavor to provide the best possible solution.

Related Documents - Bewinner2dg8ictf49

	<p>Bewinner Portable Tri-Screen for Laptop User Guide (15 inch)</p> <p>User guide for the Bewinner Portable Tri-Screen for Laptop (15 inch), covering setup, connection methods, display configuration, OSD settings, and technical specifications. Compatible with 15-17 inch laptops.</p>
---	---