

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VINABTY](#) /

> [VINABTY AH59-02404A Remote Control User Manual for Samsung Blu-ray Home Theater Systems](#)

VINABTY AH59-02404A

VINABTY AH59-02404A Remote Control User Manual

For Samsung Blu-ray Home Theater Systems

1. INTRODUCTION

This manual provides instructions for the VINABTY AH59-02404A replacement remote control. This remote is designed to be compatible with various Samsung Blu-ray Home Entertainment Systems, offering a direct replacement for your original remote.

Compatible Models include:

- HT-E4200, HT-ES4200, HT-E5200
- AH59-02405A
- HTE4500, HTE4530, HTE5530, HTE5550W, HTE6750W
- HTE4500XY, HTE4530XY, HTE5530XY, HTE5550XY, HTE6750WXY





Image 1: Front view of the VINABTY AH59-02404A remote control, showing all buttons and their labels.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is pre-programmed and ready for use with compatible Samsung Blu-ray Home Theater Systems. No additional programming is required.





Image 2: Back view of the remote control, illustrating the open battery compartment for AAA battery insertion.

3. OPERATING INSTRUCTIONS

This remote control provides full functionality for your Samsung Blu-ray Home Theater System. Point the remote directly at the system's IR receiver for optimal performance.

3.1 Key Functions Overview

Button	Function
POWER (Red Button)	Turns the system on or off.
FUNCTION / TV SOURCE	Switches between input sources or functions.
RECEIVER / BD / TV	Selects the device to control (Receiver, Blu-ray Disc player, TV).
SLEEP	Sets the sleep timer.
Number Buttons (0-9)	Direct input for channels, tracks, or menu selections.
VOL +/-	Adjusts the volume level.
MUTE	Mutes or unmutes the audio.
TUNING / CH ^/v	Changes channels or navigates tuning options.
Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip)	Controls media playback.
HOME	Accesses the main menu or home screen.
TOOLS	Opens a context-sensitive tools menu.
INFO	Displays information about the current content or system status.
Directional Pad (Up, Down, Left, Right, Enter)	Navigates menus and confirms selections.
RETURN	Goes back to the previous screen or menu.

Button	Function
EXIT	Exits the current menu or application.
Color Buttons (A, B, C, D)	Context-sensitive functions, often indicated on-screen.
SMART HUB	Accesses the Smart Hub features of your Samsung system.





Image 3: Angled view of the remote control, providing a clearer perspective of the button layout and ergonomic design.

4. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA batteries.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the IR sensor on your Samsung Home Theater System.
- **Distance:** Operate the remote within a reasonable distance from the system.
- **System Power:** Confirm that your Samsung Home Theater System is powered on.

5.2 Specific Functions Not Working

- Ensure you have selected the correct device mode (e.g., BD for Blu-ray, TV for Television) using the dedicated buttons if applicable.
- Some advanced functions may require specific menu navigation on your Samsung system. Refer to your system's original manual for detailed operation.

6. SPECIFICATIONS

Model Number	AH59-02404A
Brand	VINABTY
Compatible Devices	Samsung Blu-ray Home Theater Systems (e.g., HT-E4200, HT-ES4200, HT-E5200, HTE4500 series)
Power Source	2 x AAA Batteries (not included)
Color	Black
Dimensions	8.2 x 2 x 0.6 inches
Item Weight	3 ounces

7. SUPPORT

For further assistance or inquiries regarding your VINABTY AH59-02404A remote control, please refer to the seller's support channels or the original documentation provided with your Samsung Home Theater System.