

eKids eK-140B.3Xv7

# eKids Wired Headphones Model eK-140B.3Xv7 User Manual

Model: eK-140B.3Xv7 | Brand: eKids

## 1. PRODUCT OVERVIEW

The eKids Wired Headphones are designed for children, offering a safe and comfortable audio experience. These headphones feature a 3.5mm jack for universal compatibility and include parental volume control to protect young ears. The adjustable headband and soft ear cushions ensure a comfortable fit for extended use.



**Image 1.1:** Overview of the eKids Wired Headphones. This image displays the full product, highlighting its black and green design, the padded earcups, adjustable headband, and the attached 3.5mm audio cable.



**Image 1.2:** Key Features of the eKids Headphones. This image highlights the soft ear cushions, comfortable headband, and adjustable headband mechanism, demonstrating the design elements for user comfort.


### Key Features:

- **Universal Compatibility:** Connects to smartphones, tablets, and computers via a standard 3.5mm audio jack.
- **Parental Volume Control:** Built-in switch to limit sound levels for safe listening.
- **Custom Fit:** Adjustable headband and soft ear cushions to provide a personalized and comfortable fit.
- **Durable Design:** Features a tangle-free cord and robust construction suitable for children's use.

## 2. SETUP

Setting up your eKids Wired Headphones is straightforward. Follow these steps to begin using your headphones:

1. **Unpack the Headphones:** Carefully remove the headphones from their packaging.
2. **Identify the Audio Jack:** Locate the 3.5mm audio jack at the end of the headphone cable.
3. **Connect to Device:** Plug the 3.5mm audio jack into the corresponding audio port on your smartphone, tablet, computer, or other compatible audio device.
4. **Adjust Headband:** Gently extend or retract the headband to fit comfortably over the user's head. The ear cushions should rest fully over the ears.

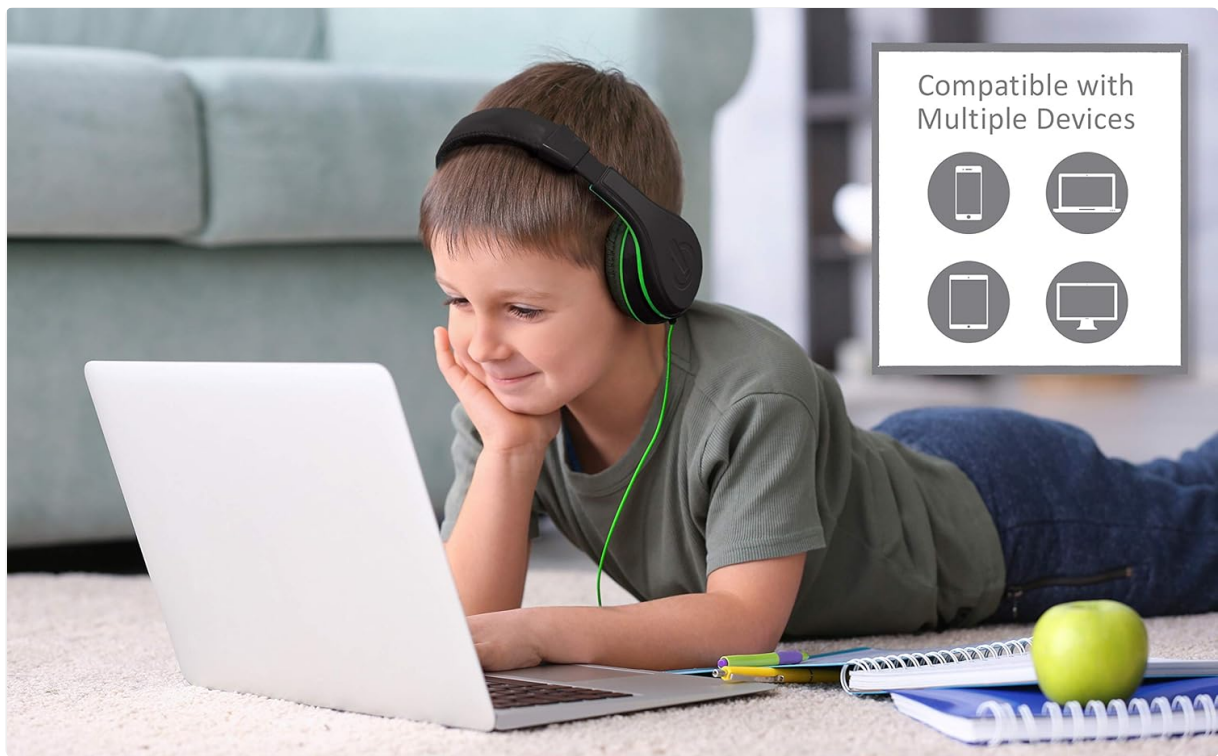

**Image 2.1:** Child connecting and using the eKids headphones with a laptop. This image illustrates the headphones in use, connected to a device, and highlights the comfortable fit for a child.

### 3. OPERATING INSTRUCTIONS

---

Once connected, the headphones are ready for use. Audio will play through the headphones when your device outputs sound.

- **Audio Playback:** Start playing audio (music, videos, audiobooks) on your connected device.
- **Device Volume Control:** Adjust the primary volume level using the controls on your connected device.
- **Headphone Adjustment:** Ensure the ear cushions fully cover the ears for optimal sound quality and comfort.

### 4. PARENTAL VOLUME CONTROL

---

The eKids Wired Headphones include a built-in volume limiting switch to help protect children's hearing. This feature allows you to set a maximum volume level suitable for different listening environments.

#### Adjusting the Volume Limiter:

1. Locate the volume limiting switch on the side of one of the earcups.
2. The switch typically has three settings: **H (High)**, **M (Medium)**, and **L (Low)**.
3. Slide the switch to the desired volume level. It is recommended to use the 'L' (Low) setting for quiet environments and 'M' (Medium) for general use. The 'H' (High) setting should be used with caution and under adult supervision in noisy environments.





**Image 4.1:** Parental Control Diagram. This image provides a visual guide to the headphone dimensions and details the parental volume control switch with recommended listening levels for iOS and Android devices (High, Medium, Low).



**Image 4.2:** Volume Limiting Switch Location. This image shows the back of the product packaging, clearly indicating the location of the adjustable safe sound volume switch on the headphone earcup.

**Important:** Always supervise children when they are using headphones, especially when adjusting volume levels. Prolonged exposure to loud sounds can cause hearing damage.

## 5. MAINTENANCE

Proper care and maintenance will extend the life of your eKids Wired Headphones.

- **Cleaning:** Use a soft, dry cloth to wipe the headphones. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the headphones in a clean, dry place when not in use. Avoid extreme temperatures.
- **Cable Care:** Do not pull on the cable to disconnect from a device. Always grasp the plug. Avoid sharp bends or kinks in the cable.
- **Water Exposure:** These headphones are not water-resistant. Avoid exposure to water or excessive moisture.

## 6. TROUBLESHOOTING

If you encounter issues with your eKids Wired Headphones, refer to the following common solutions:

Problem	Possible Solution
No sound	Ensure the 3.5mm jack is fully inserted into the device's audio port. Check the volume level on your connected device and increase if necessary. Verify the parental volume control switch on the headphones is not set to 'L' (Low) if you expect higher volume. Test the headphones with another device to rule out a device-specific issue.
Sound is distorted or unclear	Ensure the 3.5mm jack is clean and free of debris. Try adjusting the volume on your device. Test with another audio source or device.
Headphones are uncomfortable	Adjust the headband to ensure a proper fit. Ensure ear cushions are positioned correctly over the ears.

## 7. SPECIFICATIONS

Feature	Detail
Model Name	eKids Wired Headphones Black
Model Number	eK-140B.3Xv7
Brand	eKids
Connectivity Technology	Wired (3.5 mm Jack)
Ear Placement	Over Ear
Control Type	Volume Control (Parental Limiter)
Cable Feature	Tangle Free
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohm
Material	Plastic



Feature	Detail
Item Weight	8.8 ounces
UPC	092298934006
Included Components	Wired headphone






## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official eKids website. Keep your purchase receipt for warranty claims.


**Manufacturer:** KIDdesigns

© 2025 eKids. All rights reserved. Information subject to change without notice.

### Related Documents - eK-140B.3Xv7

	<p><a href="#">eKids B50 Bluetooth Headphones User Manual and Guide</a></p> <p>Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.</p>
	<p><a href="#">eKids B64 Series Disney Themed Wireless Headphones with EZ Link - User Manual</a></p> <p>User manual for the eKids B64 Series wireless Bluetooth headphones featuring EZ Link technology and Disney themes (Princess, Frozen, Encanto). Includes setup, pairing, app usage, controls, safety, and warranty information.</p>
	<p><a href="#">eKids B64 Series Wireless Headphones with EZ Link User Manual</a></p> <p>Comprehensive user manual for the eKids B64 Series Wireless Headphones with EZ Link. Learn about setup, Bluetooth pairing, EZ Link app features, controls, charging, battery information, warranty, and safety guidelines. Supports Disney Princess, Frozen, and Encanto themes.</p>
	<p><a href="#">eKids B50 Bluetooth Headphones User Manual</a></p> <p>User manual for eKids B50 Bluetooth Headphones, providing instructions on setup, operation, controls, charging, pairing, and warranty information.</p>
	<p><a href="#">ekids B54 Series Wireless Headphones User Manual and Instructions</a></p> <p>Official user manual for the ekids B54 Series Wireless Headphones. Includes setup, operation, controls, charging, safety warnings, and regulatory information.</p>



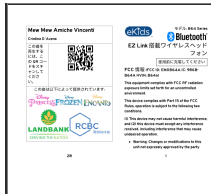

[eKids EZ Link B64 Series Bluetooth Wireless Headphones - User Manual & Features](#)

User manual and feature overview for the eKids EZ Link B64 Series Bluetooth wireless headphones, including setup, operation, safety, and warranty information. Compatible with Disney Princess, Frozen, and Encanto themes.