

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nilfisk](#) /

› [Nilfisk Easy 2-in-1 Cordless Stick and Handheld Vacuum Cleaner \(20V\) White User Manual](#)

Nilfisk 128390005

Nilfisk Easy 2-in-1 Cordless Stick and Handheld Vacuum Cleaner (20V) White User Manual

PRODUCT OVERVIEW

The Nilfisk Easy 2-in-1 Cordless Stick and Handheld Vacuum Cleaner offers versatile cleaning for your home. This appliance combines the power of a stick vacuum for floors and carpets with the convenience of a detachable handheld unit for smaller tasks and hard-to-reach areas. Its cordless design provides freedom of movement, and the bagless system simplifies maintenance.



The image shows the Nilfisk Easy 2-in-1 Cordless Stick and Handheld Vacuum Cleaner. It is a white, upright vacuum cleaner with a black base and a black flexible hose. The brand name 'Nilfisk' and model 'Easy' are visible on the side of the main unit. The base features a black brushroll and a small LED light. The handheld unit is attached to the top of the main body.

EFFICIENTLY CLEANS
HARD FLOORS,
CARPETS, DESK TOPS
& SMALL CONNERS


Small households


Hard floors


Carpets

Image: The Nilfisk Easy 2-in-1 vacuum cleaner, illustrating its dual functionality as a stick vacuum and a detachable handheld unit.

KEY FEATURES

- 2-in-1 Design:** Easily converts from a stick vacuum to a handheld vacuum for comprehensive cleaning.
- Cordless Operation:** Provides up to 50 minutes of cleaning time on a single charge, allowing unrestricted movement.
- Bagless System:** Features an easy-to-empty dustbin, eliminating the need for disposable bags.
- LED Lights:** Integrated LED lights on the floor nozzle illuminate dust and debris under furniture for thorough cleaning.
- Multi-Surface Cleaning:** Effective on both hard floors and carpets.

SETUP AND ASSEMBLY

Unpacking the Appliance

Carefully remove all components from the packaging. Ensure all parts listed in the packing contents are present before discarding packaging materials.



Image: All components of the Nilfisk Easy 2-in-1 vacuum cleaner, including the main unit, handheld vacuum, and accessories, ready for assembly.

Assembling the Stick Vacuum

1. Insert the handheld vacuum unit into the main stick body until it clicks securely into place.
2. Attach the floor nozzle to the bottom of the stick body. Ensure it is firmly connected.

3. Before first use, fully charge the battery. Connect the charger to the charging port and plug it into a power outlet. The battery indicator lights will show charging progress.



Image: A diagram illustrating the process of attaching the handheld vacuum unit to the main stick body, ensuring a secure connection.

OPERATING INSTRUCTIONS

Using the Stick Vacuum

- To turn on, press the power button located on the handle.
- Select the desired power setting (usually indicated by a button or switch on the handle).
- Guide the vacuum cleaner over the floor or carpet. The LED lights on the nozzle will illuminate the cleaning path.
- When finished, press the power button to turn off the appliance.



Image: The Nilfisk Easy stick vacuum in action, cleaning a carpet. The integrated LED lights on the floor nozzle are visible, illuminating the area being cleaned.

Using the Handheld Vacuum (Nilfisk Quick)

- To detach the handheld unit, press the release button on the main stick body and pull the handheld unit upwards.
- Attach any desired accessories (e.g., crevice tool, brush) to the nozzle of the handheld unit.
- Press the power button on the handheld unit to start cleaning.
- Use the handheld vacuum for cleaning upholstery, car interiors, shelves, or other small areas.
- When finished, press the power button to turn off. Reattach to the stick body for storage or further stick vacuum use.



Image: A person using the detachable Nilfisk Quick handheld vacuum to clean crumbs and debris from a sofa cushion.



Image: The Nilfisk Quick handheld vacuum being used to efficiently clean up spills and debris from a kitchen countertop.

MAINTENANCE

Emptying the Dustbin

- Ensure the vacuum cleaner is turned off.
- Detach the handheld unit from the stick body.
- Locate the dustbin release button, usually near the nozzle. Press it to open the dustbin.
- Empty the contents into a waste bin.
- Close the dustbin securely until it clicks.



Image: A diagram illustrating the steps to empty the dustbin of the Nilfisk Quick handheld vacuum, ensuring proper disposal of collected debris.

Cleaning the Filter

- After emptying the dustbin, remove the filter assembly.
- Tap the filter gently over a waste bin to dislodge fine dust.
- If necessary, rinse the filter under lukewarm water. Ensure it is completely dry before reinserting it into the vacuum cleaner.
- Reassemble the filter and dustbin, then reattach the handheld unit.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is discharged.	Charge the battery fully.
Reduced suction power.	Dustbin is full or filter is clogged.	Empty the dustbin and clean the filter.
Brush roll not spinning.	Obstruction in the brush roll.	Turn off the vacuum and remove any hair or debris from the brush roll.

TECHNICAL SPECIFICATIONS

Specification	Value
Brand	Nilfisk
Model Number	128390005
Color	White
Product Dimensions (L x W x H)	20.9 x 28 x 116.4 cm
Capacity	6 Liters
Power	18 Watts
Voltage	20 Volts
Material	Plastic
Number of Speeds	3
Noise Level	1 Decibels
Battery Life	1 hour and 20 minutes (Note: Product description states up to 50 minutes, this spec might be for a different mode or maximum possible)
Features	Lightweight, Portable, Cordless, Bagless
Item Weight	3.1 Kilograms
Filter Type	Cartridge
Surface Recommendation	Hard Floor
Power Source	Battery Powered
Included Components	Brush roll cutter
Battery	1 Lithium-ion - included

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Nilfisk website or contact your local retailer. Keep your proof of purchase for warranty claims.

Note: The product description mentions "Lifetime Warranty in Belgium" for pressure washers. This manual is for a vacuum cleaner, so general warranty information is provided. Please check your specific product's warranty card for details.

You can visit the [Nilfisk Brand Store](#) for more products and information.

